

Model #

2070AFGAC McKenzie Media Dresser

Assembly Instructions



Congratulations!

This fine piece of furniture will make a handsome addition to your home. For the best results, start by reading the Assembly Instructions before you begin your project.

**For normal household use only.
NOT recommended for commercial use.**



Unload items from this unit prior to moving.

Before loading or moving this unit, check all screws and supports for tightness.

Do not climb, sit or stand on or in this piece of furniture.

Do not overload drawers or shelf on this unit.

Handle the glass plate with care.  Glass is fragile.

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

**Whittier
Wood**
FURNITURE

P.O. Box 2827
Eugene, OR 97402 USA



CALL US FIRST!

DO NOT RETURN ITEM TO STORE

Service Policy: We will replace parts which are defective, missing or damaged. Please contact Whittier Wood Products customer service department directly (by phone, fax, mail or E-mail) for replacement parts.

Hours: Our friendly customer service staff can be reached Monday-Friday 7:00 a.m. to 5:00 p.m. (Pacific Time). A message can be left 24 hours a day, 7 days a week.

To Order: Provide the complete furniture model number, part letter, production code, quantity needed, reason for replacement and your full name and address along with a telephone number in case we need to contact you.

Parts ship from our Eugene, Oregon factory within 1 or 2 business days from the time we receive the request. Please allow 5-10 business days for delivery.

800-653-3336

Outside U.S. or Canada: 541- 687- 0213

Fax: 541-687-2060 • www.whittierwood.com

Mail: P.O. Box 2827 • Eugene, Oregon 97402, U.S.A

IMPORTANT NOTES:

- Read the Assembly Instructions completely before beginning your project.
- Store the item: 1) in the box; 2) in a dry place; 3) in temperatures ranging from 40° to 90°. (Not on a cold, possibly damp, cement floor.)
- Inspect your furniture periodically for any loose glue joints or screws, or any other problem which may be affecting the stability of your furniture. Tighten or repair as needed.

 
Production Code:

VN

Rev. 08/13/08

2070AFGAC McKenzie Media Dresser — Parts List


Please identify the parts and check that quantities received match those on this list.
If you need to replace a part, refer to the following letter and model name.




A — Top Assembly
— Qty. 1 (Attached)




B — Adjustable Shelf — Qty. 1

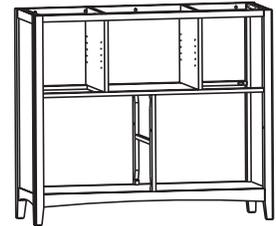


C — Case Only — Qty. 1

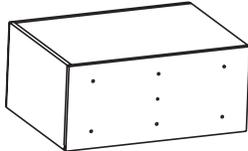


G — Large Drawer Box
— Qty. 2 (Inserted)

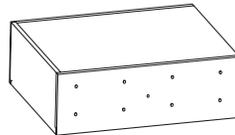


H — Medium Drawer Box
— Qty. 2 (Inserted)

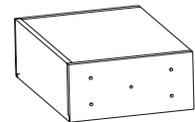


I — Small Drawer Box
— Qty. 4 (Inserted)

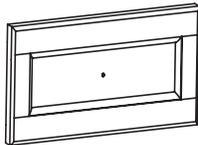

 
J — Large Drawer Face
— Qty. 2 (Attached)



 
K — Medium Drawer Face
— Qty. 4 (Attached)



 L — Small Drawer Face
— Qty. 4 (Attached)



M — Door Glass
— Qty. 1 (Installed)

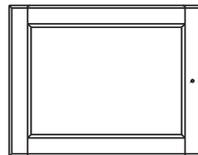

N — Door Frame
— Qty. 1 (Attached)



D — Door Wood Panel
— Qty. 1 (Optional)



S — Drawer Slides
— Qty. 16 (Installed)



O — Knob
— Qty. 9 (Installed)



P — #8 x 1½" Machine Screw
— Qty. 9 (Inserted)



Q — Shelf Brackets
— Qty. 4



R — #6 x ½" Undercut Screw
— Qty. 16
(12 Inserted)



T — Nylon
Restraint Strap
— Qty. 2



U — Clip
— Qty. 4




W — #8 x 1"
Pan Screw
— Qty. 4



V — #8 x 2"
Black Screw
— Qty. 4



X — Retainer — Qty. 1 (Installed)
(Length: 5ft.)

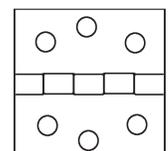

Y — Hinge
— Qty. 2 (Attached)

2070AFGAC McKenzie Media Dresser Assembly Instructions

TOOLS REQUIRED: Phillips Screwdriver

1. Adjustable glides are attached to the bottom of the unit. Rotate glides until unit stands level.

Fig. 2
*Door removed in
this illustration.*

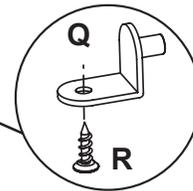
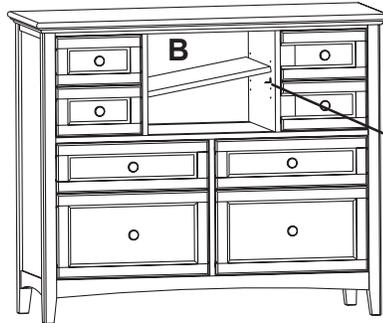


Fig. 2a

2. Install the Adjustable Shelf (B) at the desired location using the Shelf Brackets (Q). See Figure 2. Attach the shelf to the shelf brackets by inserting #6 x 1/2" Undercut Screw (R) through the bottom of the shelf bracket and into the shelf. See Figure 2a.

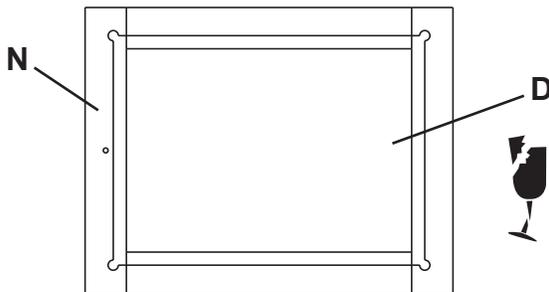


Fig. 3


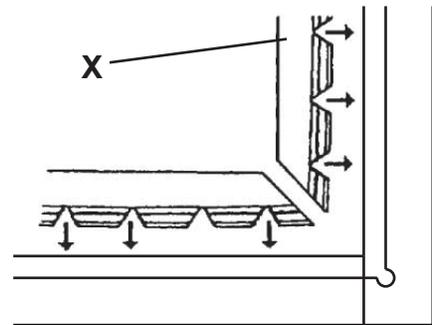


Fig. 3a

3. OPTIONAL

If you would rather have a Wood Door Panel (D) instead of Glass (M), use a Phillips Screwdriver to remove the six screws in the Hinge (Y) that is attached to the Case (C). (Leave the Hinge attached to the Door Frame.) Lay the Door Frame (N) face down on a clean, protected surface. Gently remove the Retainer (X) by sliding it away from the Door Frame (N). Carefully remove the Glass Pane (M) and replace it with the Wood Door Panel (D). The panel has shallow notches around the four edges on its back side. Place the wood panel into the door frame so the notches face the back of the frame. See Figure 3. Replace the Retainer (X) as shown in Figure 3a.

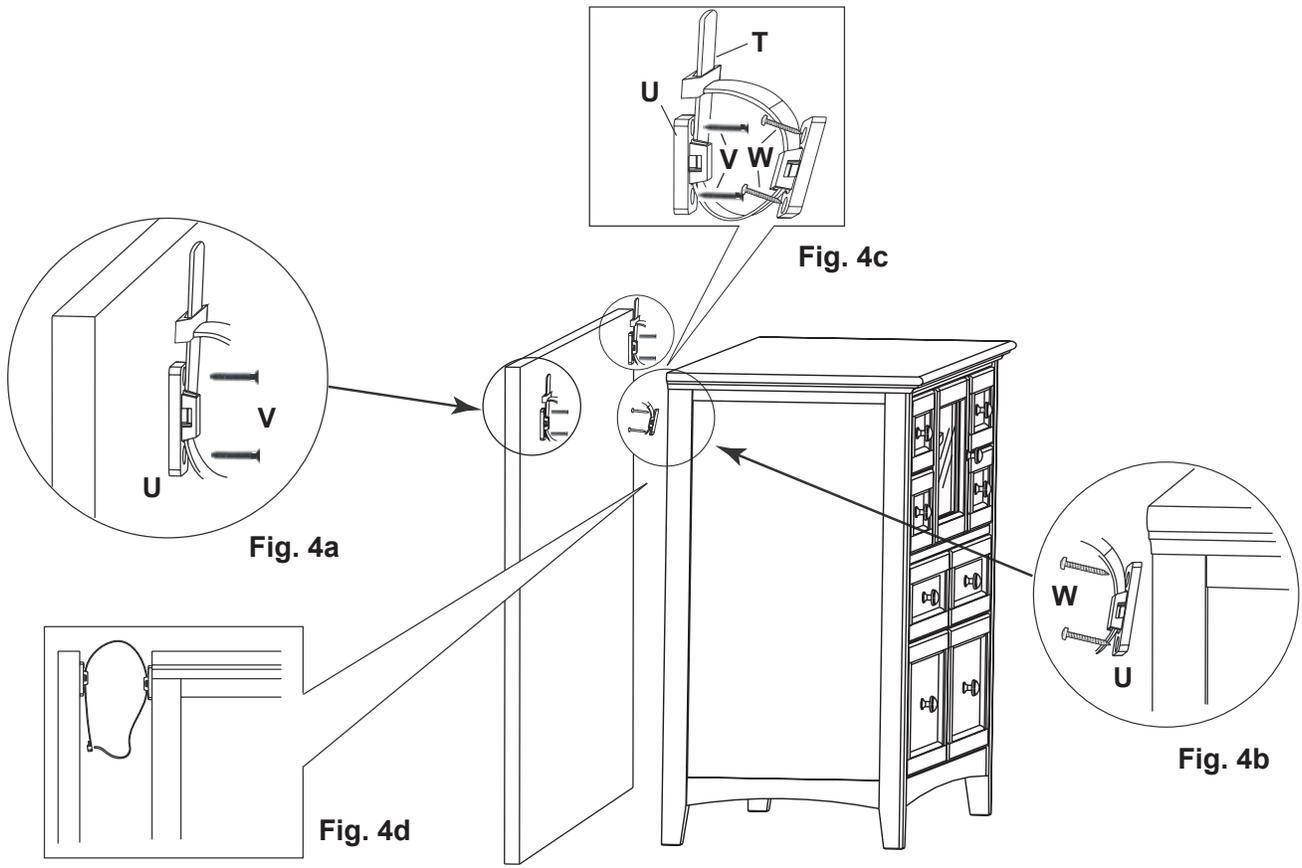

Tipping Restraint

4. Position unit at desired location. Locate stud in the wall behind unit. Attach Clip (U) to wall stud with #8 x 2" Black Screws (V). See Figure 4a. Attach second clip to unit with #8 x 1" Pan Head Screws (W). See Figure 4b. Connect the two clips with Nylon Restraint Strap (T). See Figures 4c and 4d.

If studs cannot be located, purchase proper attachment hardware for your type of wall and secure the unit according to that hardware's instructions.