


Model #

2071AFGAC 36" McKenzie Media Center

Assembly Instructions

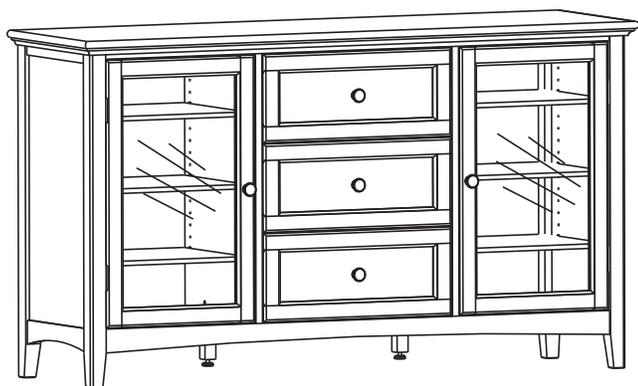

Congratulations!

This fine piece of furniture will make a handsome addition to your home. For the best results, start by reading the Assembly Instructions **before** you begin your project.

**For normal household use only.
NOT recommended for commercial use.**



Unload items from this unit prior to moving.

Before loading or moving this unit, check all screws and supports for tightness.

Do not climb, sit or stand on this piece of furniture.

Do not overload drawers or shelves on this unit.

Handle the glass plates with care.  Glass is fragile.

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

**Whittier
Wood**
FURNITURE

P.O. Box 2827
Eugene, OR 97402 USA



CALL US FIRST!

DO NOT RETURN ITEM TO STORE

Service Policy: We will replace parts which are defective, missing or damaged. Please contact Whittier Wood Products customer service department directly (by phone, fax, mail or E-mail) for replacement parts.

Hours: Our friendly customer service staff can be reached Monday-Friday 7:00 a.m. to 5:00 p.m. (Pacific Time). A message can be left 24 hours a day, 7 days a week.

To Order: Provide the complete furniture model number, part letter, production code, quantity needed, reason for replacement and your full name and address along with a telephone number in case we need to contact you.

Parts ship from our Eugene, Oregon factory within 1 or 2 business days from the time we receive the request. Please allow 5-10 business days for delivery.

800-653-3336

Outside U.S. or Canada: 541- 687- 0213

Fax: 541-687-2060 • www.whittierwood.com

Mail: P.O. Box 2827 • Eugene, Oregon 97402, U.S.A

IMPORTANT NOTES:

- Completely read the Assembly Instructions prior to beginning your project.
- Store the item: 1) in the box; 2) in a dry place; 3) temperatures ranging from 40° to 90°. (Not on a cold, possibly damp, cement floor.)
- Inspect your furniture periodically for any loose glue joints or screws, or any other problem which may affect the stability of your furniture. Tighten or repair as needed.
- This Assembly requires two people.

Production Code:

VN

1/09


2071AFGAC 36" McKenzie Media Center — Parts List

Please identify the parts and check that quantities received match those on this list.


If you need to replace a part, refer to the following letter and model name.




A — 2071 Top Assembly
— Qty. 1 (Attached)

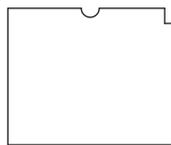


B — Adjustable Shelf — Qty. 6

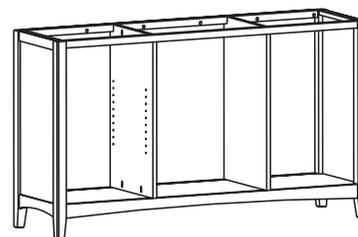

C — 2071 Case Only — Qty. 1

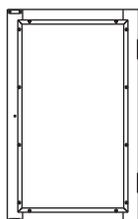

Df — Door Frame
— Qty. 2 (Installed)

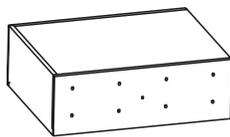

E — Drawer Box
— Qty. 3 (Installed)



F — Drawer Face
— Qty. 3 (Installed)



Dg — Door Glass
— Qty. 2 (Installed)



Dw — Door Wood Panel
— Qty. 2 (Optional)



V — Door Glass
Support Rail
— Qty. 4 (Attached)



W — Door Glass
Support Stile
— Qty. 4 (Attached)



G — Drawer Slides
— Qty. 3 sets (Installed)



H — Knob
— Qty. 5 (Installed)



I — #8 x 1 1/2" Machine Screw
— Qty. 5 (Installed)



J — Shelf Bracket
— Qty. 24 (Attached)



 
K — #6 x 1/2" Undercut Screw
— Qty. 60 (Inserted)



L — Hinge — Qty. 4
(Installed)



M — #6 x 3/4" Brass Flat
Head Screw — Qty. 48
(Inserted)



R — Assembled Foot
— Qty. 2 (Attached)



S — T-Nut
— Qty. 6 (Inserted)



T — Adjustable Glide
— Qty. 2 (Installed)



U — Adjustable Glide
— Qty. 4 (Installed)



 
N — Clip — Qty. 4



O — Nylon Restraint Strap
— Qty. 2



P — #8 x 2" Black Screw
— Qty. 4



Q — #8 x 1" Pan Screw
— Qty. 4



X — Magnetic Plate
— Qty. 4 (Installed)



Y — Magnetic Catch
— Qty. 4 (Installed)




Z — #5x5/8" Flat Head Screw
— Qty. 16 (Inserted)

2071AFGAC 36" McKenzie Media Center Assembly Instructions




TOOL REQUIRED: Phillips Screwdriver



1. Rotate the Adjustable Glides found at the bottoms of the Assembled Foot (R) until the unit is level.

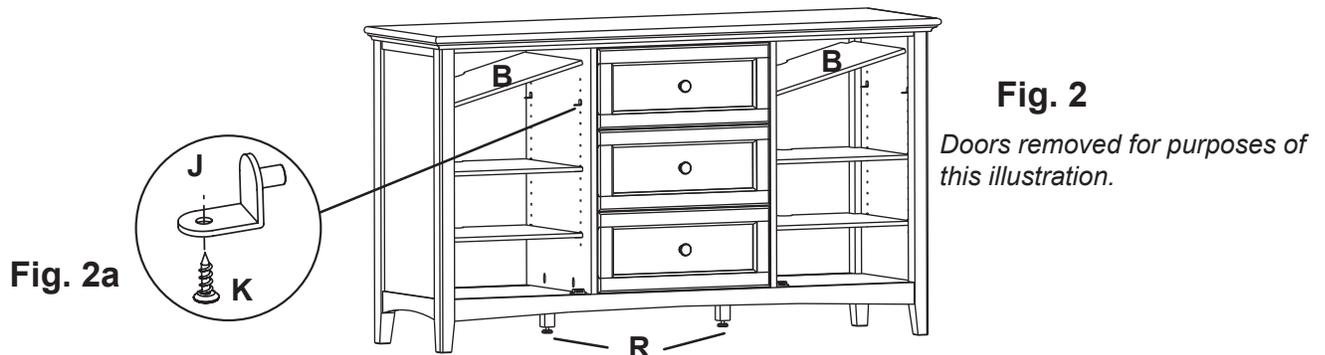

2. To move the Adjustable Shelves (B), remove the #6 x 1/2" Undercut Screws (K) and the Shelf (B). Reposition the Shelf Brackets (J) to the desired positions, replace the shelf and reinsert the screws. See Figures 2 and 2a.

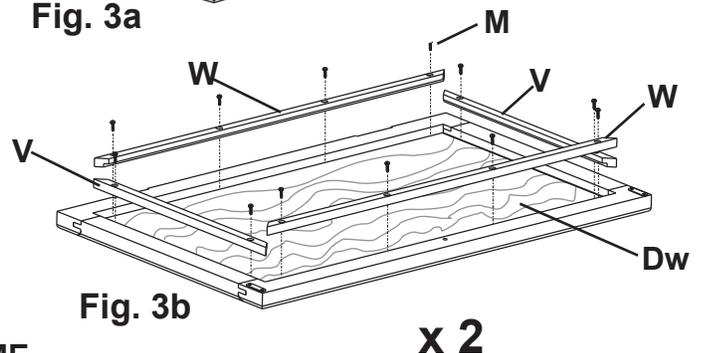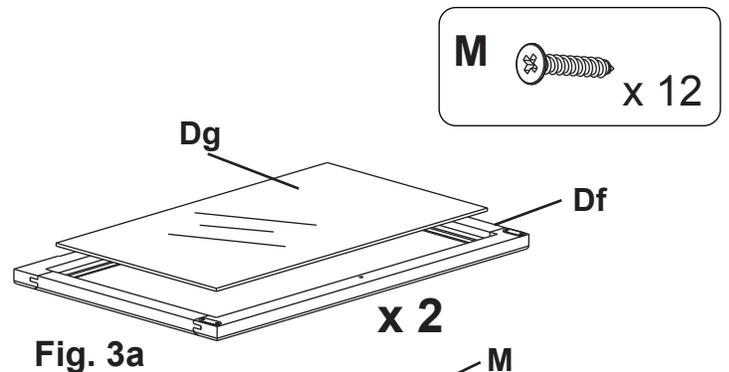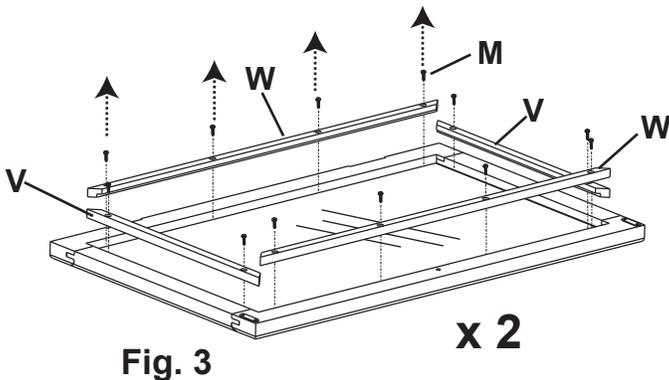


3. This step is optional.



DO NOT LEAN ON THE GLASS AT ANY TIME.

To install the optional Wood Door Panels (Dw), remove the doors from the unit and place them face-down on a clean, protected surface. Remove the screws from the Door Glass Support Rails (V) and Door Glass Support Stiles (W) and carefully remove Door Glass (Dg). See Figures 3 and 3a. Center the Wood Door Panels (Dw) within the Door Frames (Df) and reattach the Rails and Stiles with the #6 x 3/4" Brass Flat Head Screws. See Figure 3b. Reattach Doors to the Media Center.

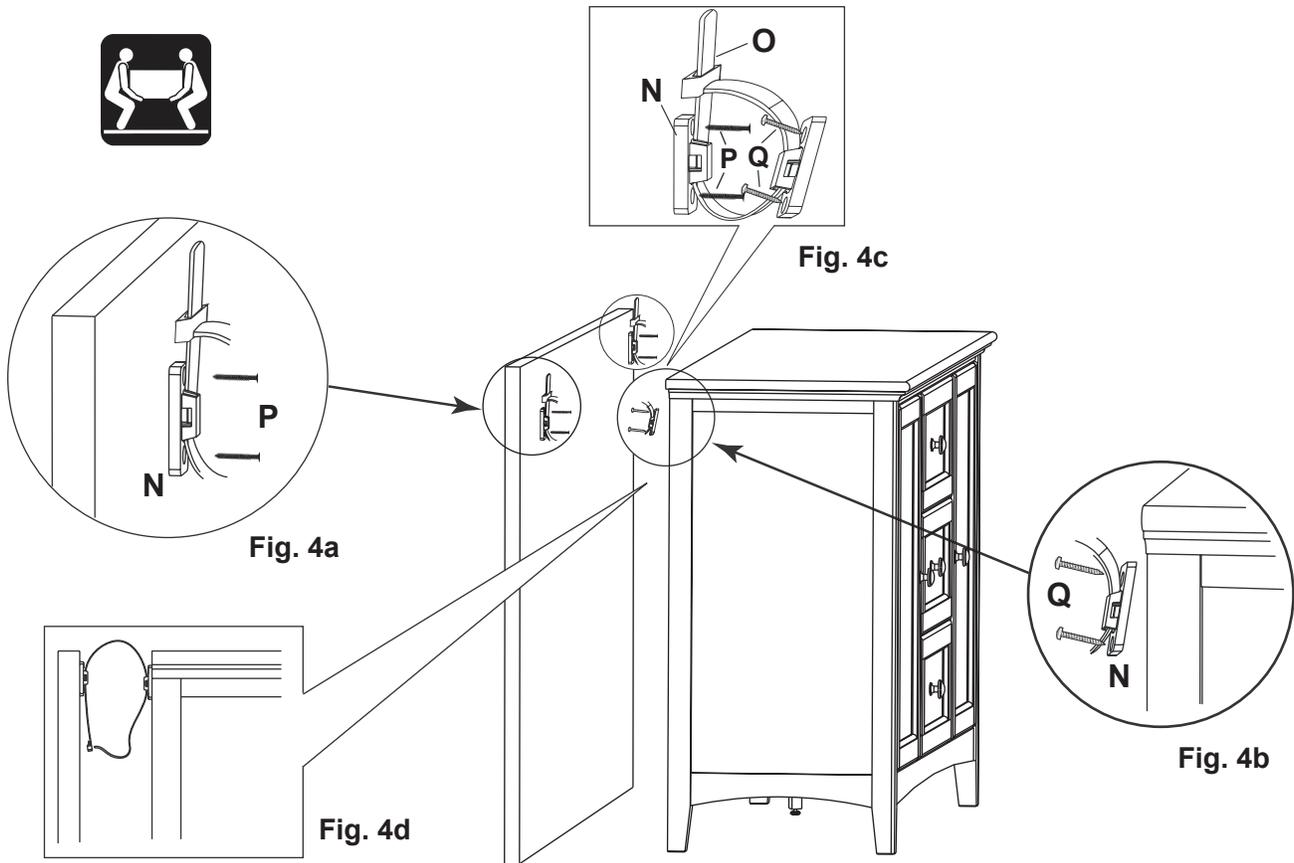

Tipping Restraint

4. Position the unit at the desired location. Locate a stud in the wall behind unit. Attach Clip (N) to a wall stud with #8 x 2" Black Screws (P). See Figure 4a. Attach second clip to the unit with #8 x 1" Pan Head Screws (Q). See Figure 4b. Connect the two clips with a Nylon Restraint Strap (O). See Figures 4c and 4d. If studs cannot be located, purchase proper attachment hardware for your type of wall and secure the unit according to that hardware's instructions.