

# Prairie City Panel Beds


LSO = Summer Oak finish

DAO = Autumn Oak finish


*Assembly Instructions*

Model #

**1253LSOc**  
**1253DAOc**  
**Prairie City Queen**  
**Panel Storage Bed**

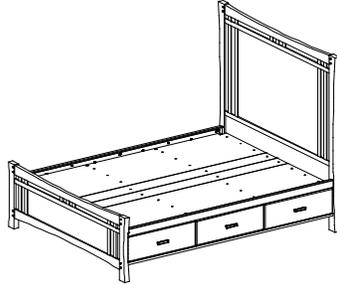

**1258LSOc**  
**1258DAOc**  
**Prairie City King**  
**Panel Storage Bed**

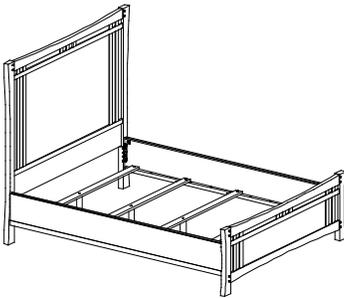

**1273LSO**  
**1273DAO**  
**Prairie City Queen**  
**Panel Bed**

**1276LSO**  
**1276DAO**  
**Prairie City King**  
**Panel Bed**

## IMPORTANT NOTES:

- For normal household use only. *Not* recommended for commercial use.
- Remove items before you move this unit.
- Do not overload the drawers.
- This assembly requires two people.

## WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to: [www.p65warnings.ca.gov/wood](http://www.p65warnings.ca.gov/wood)

This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer. For more information go to: [www.p65warnings.ca.gov/furniture](http://www.p65warnings.ca.gov/furniture)

**DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.**

*Thank you for allowing us to help you furnish your home. We are certain you will be delighted with your new furniture for many years to come.*

## CUSTOMER SERVICE

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

**Hours:** Our friendly customer service staff can be reached:

**Monday-Friday 8:00 a.m. to 5:00 p.m. (Pacific Time).**

You may leave a message 24 hours a day, seven days a week.

**Customer Service:** 800-653-3336 • **Outside the U.S.:** 541-687-0213

**Fax:** 541-687-2060 • **Email:** [info@whittierwood.com](mailto:info@whittierwood.com)

**Whittier**  
**Wood**  
**FURNITURE**

P.O. Box 2827  
Eugene, OR 97402 USA

Production Code:

VN

04/17






**1253LSOc 1253DAOc Prairie City Queen Panel Storage Bed  
 1258LSOc 1258DAOc Prairie City King Panel Storage Bed  
 1273LSO 1273DAO Prairie City Queen Panel Bed  
 1276LSO 1276DAO Prairie City King Panel Bed**

*Parts List*





Please note this Assembly Instruction is for Prairie City Panel Storage Beds (#1253 Queen and #1258 King), and Prairie City Panel Rail Beds (#1273 Queen and #1276 King.) The Parts Lists for each component follow.

Please identify the parts and check that the quantities received match those on this list. If you need to replace a part, refer to the model number, part letter and name.

**1256LSO 1256DAO  
 Queen Headboard/Footboard Kit (x1)**

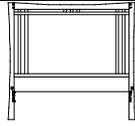Part	Description	Quantity
A	Headboard Assembly 	1
B	Footboard Assembly 	1
U	#8 x 1" Black Screw (inserted) 	16
ZN	#8 x 2" Black Screw (inserted) 	4
ZO	Left Bed Bracket (attached) 	2
ZP	Right Bed Bracket (attached) 	2


**1260LSO 1260DAO  
 King Headboard/Footboard Kit (x1)**

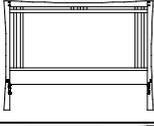Part	Description	Quantity
A	Headboard Assembly 	1
B	Footboard Assembly 	1
C	King Trestle (27-9/16") 	4
D	Center Deckboard 	1
S	#8 x 1-1/4" Black Screw 	12
U	#8 x 1" Black Screw (inserted) 	16
ZN	#8 x 2" Black Screw (inserted) 	4
ZO	Left Bed Bracket (attached) 	2
ZP	Right Bed Bracket (attached) 	2

**1253LSOc 1253DAOc Prairie City Queen Panel Storage Bed**  
**1258LSOc 1258DAOc Prairie City King Panel Storage Bed**  
**1273LSO 1273DAO Prairie City Queen Panel Bed**  
**1276LSO 1276DAO Prairie City King Panel Bed**  
*Parts List*






---

## 1255LSOc 1255DAOc Pedestal Kit (x2)

Part	Description	Quantity
Ea	Pedestal 	1
F	Small Drawer Box (assembled) 	2
Ga	Large Drawer Box (assembled) 	1
H	Drawer Face (attached) 	3
I	Queen Trestle (11-9/16") 	2
J	Left/Right Center Deckboard 	1
K	Notched Deckboard (attached) 	1
L	Assembled Foot 	3
M	Long Angle Iron (attached) 	1
N	20" Drawer Slides (pre-installed sets) 	3
O	#6 x 3/4" Philtruss Screw (inserted) 	18
P	#6 x 3/4" Flat Head Screw (inserted) 	10
Q	#6 x 1/2" Philtruss Screw 	22 (18 inserted)
Ra	#8 x 7/8" Black Lo-Profile Screw (inserted) 	18
S	#8 x 1-1/4" Black Screw 	52 (48 inserted)
Tb	#8 x 1-1/2" Machine Screw Tuscan (installed) 	6
U	#8 x 1" Black Screw (inserted) 	9
V	Arched Washer (inserted) 	4
W	1/4" Flat Washer 	10 (4 inserted)
X	1/4" Lock Washer (inserted) 	4
Y	1/4" x 20mm Insert Nut (inserted) 	8

**1253LSOc 1253DAOc Prairie City Queen Panel Storage Bed  
1258LSOc 1258DAOc Prairie City King Panel Storage Bed  
1273LSO 1273DAO Prairie City Queen Panel Bed  
1276LSO 1276DAO Prairie City King Panel Bed**



*Parts List*

<b>Part</b>	<b>Description</b>		<b>Quantity</b>
YE	#10 x 3/4" Pan Head Screw (inserted)		12
ZA	1/4" Hex Nut (inserted)		4
ZB	1/4" T-Nut (inserted)		2
ZC	1/4" x 80mm Hex Bolt		1
ZD	1/4" x 2-1/2" Hex Bolt (inserted)		4
ZE	1/4" x 1-3/4" Hex Bolt		6
ZF	Pull (attached)		3
ZH	Foot Bracket (attached)		3
ZI	Adjustable Glide (installed)		3
ZJ	Left Pedestal Angle Bracket (inserted)		1
ZK	Right Pedestal Angle Bracket (inserted)		1
ZL	90° Bracket		1
ZM	4mm Hex Wrench		1

**1253LSOc 1253DAOc Prairie City Queen Panel Storage Bed**  
**1258LSOc 1258DAOc Prairie City King Panel Storage Bed**  
**1273LSO 1273DAO Prairie City Queen Panel Bed**  
**1276LSO 1276DAO Prairie City King Panel Bed**

*Parts List*

**1275LSO 1275DAO Queen Rail Kit (x1)**  
**1278LSO 1278DAO King Rail Kit (x1)**

Part	Description		Quantity
S	#8 x 1-1/4" Black Screw		10
U	#8 x 1" Black Screw (inserted)		16
ZB	1/4" T-Nut (inserted)		9
ZC	1/4" x 80mm Hex Bolt		2
ZM	4mm Hex Wrench		1
ZN	#8 x 2" Black Screw (inserted)		22
ZO	Left Bed Bracket (attached)		2
ZP	Right Bed Bracket (attached)		2
ZQ	Side Rail		2
ZR	Slat		5
ZS	Slat Support		2
ZT	Assembled Foot		4
ZU	Adjustable Glide with Hex Nut (installed)		4
ZV	#8 x 1-5/8" Black Screw		4
ZW	5/16" x 3/4" Insert Nut (inserted)		4
ZX	1/4" x 45mm Hanger Bolt (inserted)		4

**1253LSOc 1253DAOc Prairie City Queen Panel Storage Bed  
1258LSOc 1258DAOc Prairie City King Panel Storage Bed  
1273LSO 1273DAO Prairie City Queen Panel Bed  
1276LSO 1276DAO Prairie City King Panel Bed**

*Assembly Instructions*

This assembly requires two people.

**Tools Required: 4mm Hex Wrench (provided), Phillips screwdriver, Slotted screwdriver, 1/2" & 7/16" open end or box end wrench and Tape measure**


**Notes:**

**Steps 1 through 12 are for the Prairie City Queen Panel Storage Bed (#1253) and the Prairie City King Panel Storage Bed (#1258).**

**Steps 13 through 21 are for the Prairie City Queen Panel Bed (#1273) and the Prairie City King Panel Bed (#1276).**

**Step 1 is for the Prairie City King Panel Storage Bed (#1258)**



1. Remove the Center Deckboard (D) and King Trestles (C) from the back of the Headboard (A) and place to the side. See Figure 1.

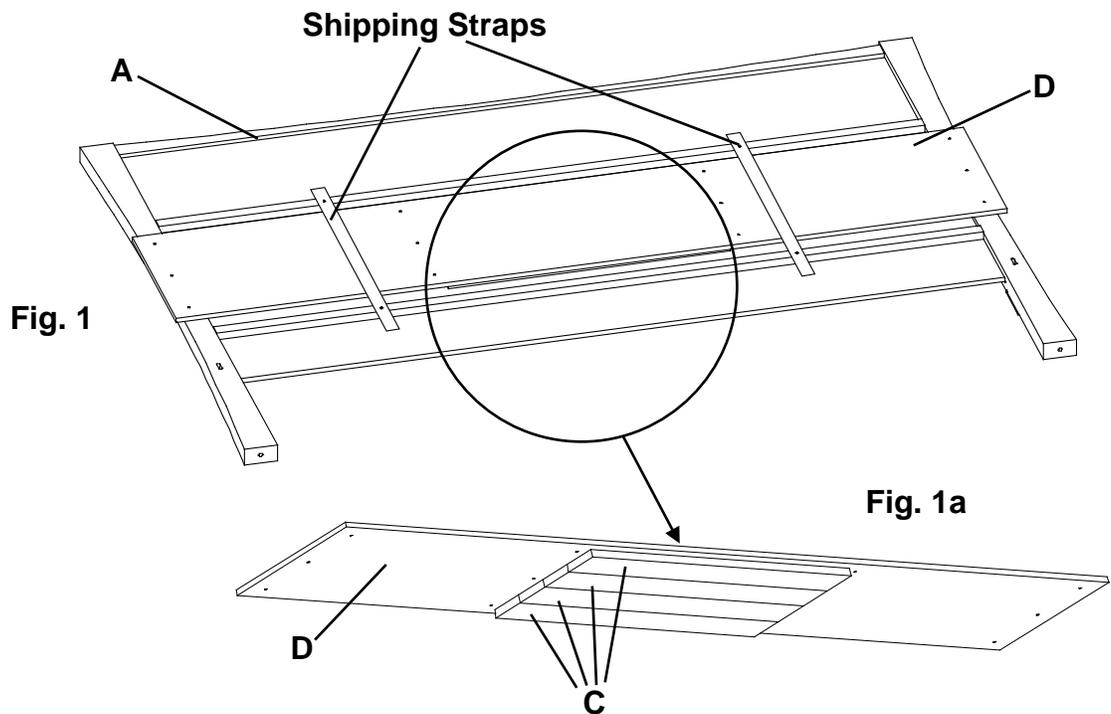


**1253LSOc 1253DAOc Prairie City Queen Panel Storage Bed**  
**1258LSOc 1258DAOc Prairie City King Panel Storage Bed**  
**1273LSO 1273DAO Prairie City Queen Panel Bed**  
**1276LSO 1276DAO Prairie City King Panel Bed**

*Assembly Instructions*  
This assembly requires two people.

2. Place both Pedestals (Ea) approximately 63" apart for #1253 Queen Bed, or 79" apart for #1258 King Bed as shown in Figures 2 and 2a.

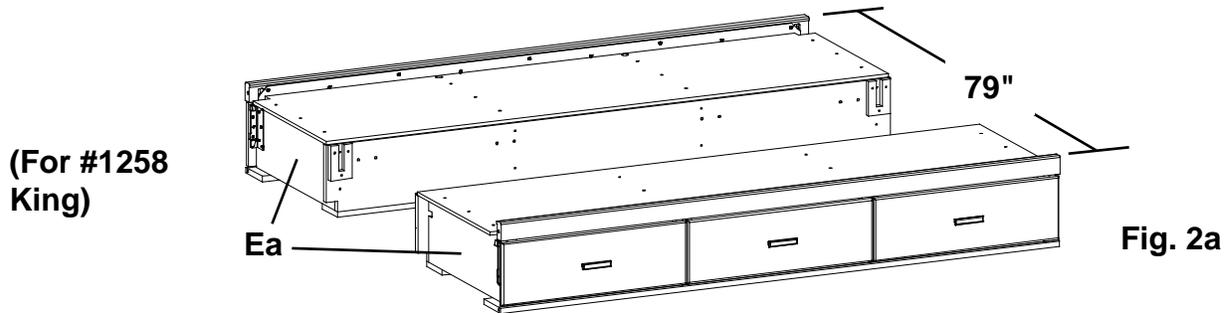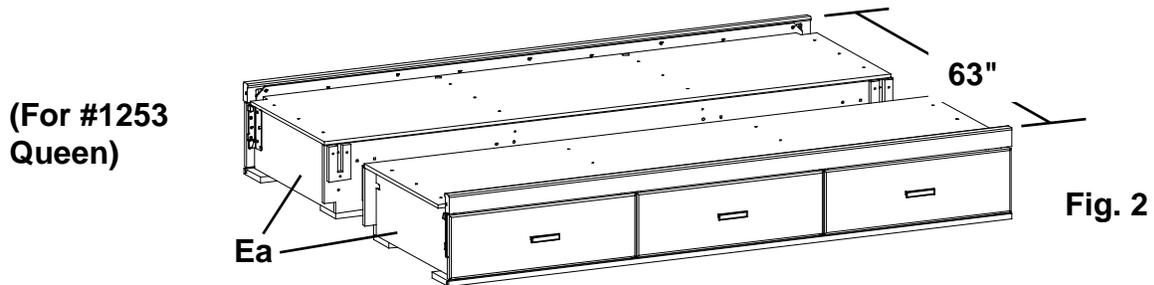


3. To attach the Footboard (B) to the Pedestal (Ea), align the Brackets and slide the Pedestal down on to the Footboard (B). See Figures 3 and 3a.

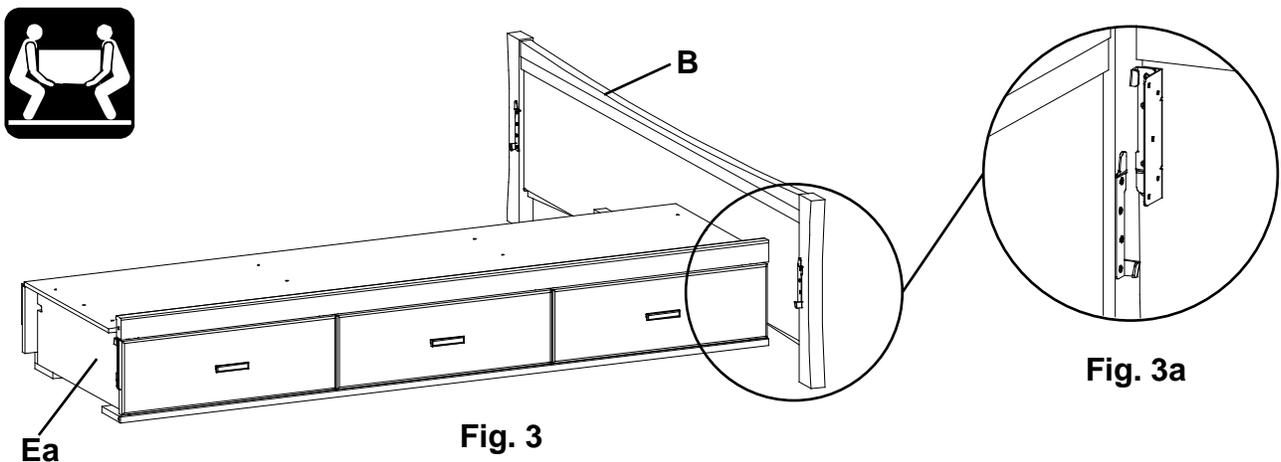


1253LSOc 1253DAOc Prairie City Queen Panel Storage Bed  
1258LSOc 1258DAOc Prairie City King Panel Storage Bed  
1273LSO 1273DAO Prairie City Queen Panel Bed  
1276LSO 1276DAO Prairie City King Panel Bed

*Assembly Instructions*  
This assembly requires two people.

4. Repeat step three for the other side. See Figures 4 and 4a.

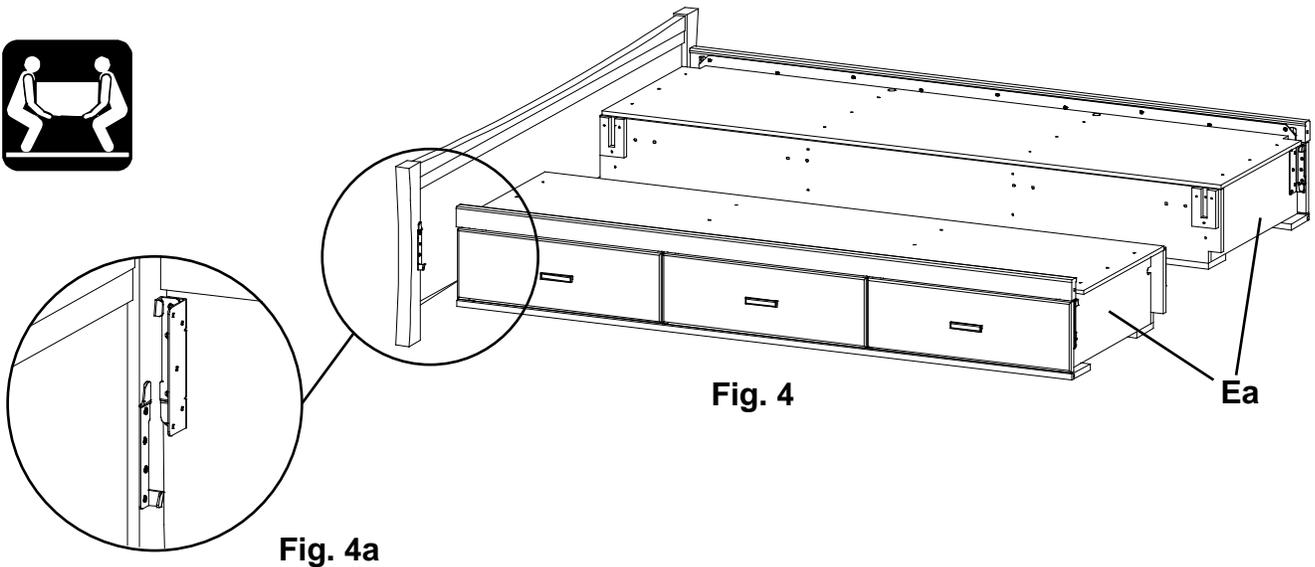

5. Align the Brackets on both sides and slide the Pedestal/Footboard assembly down on to the Headboard (A). See Figure 5.

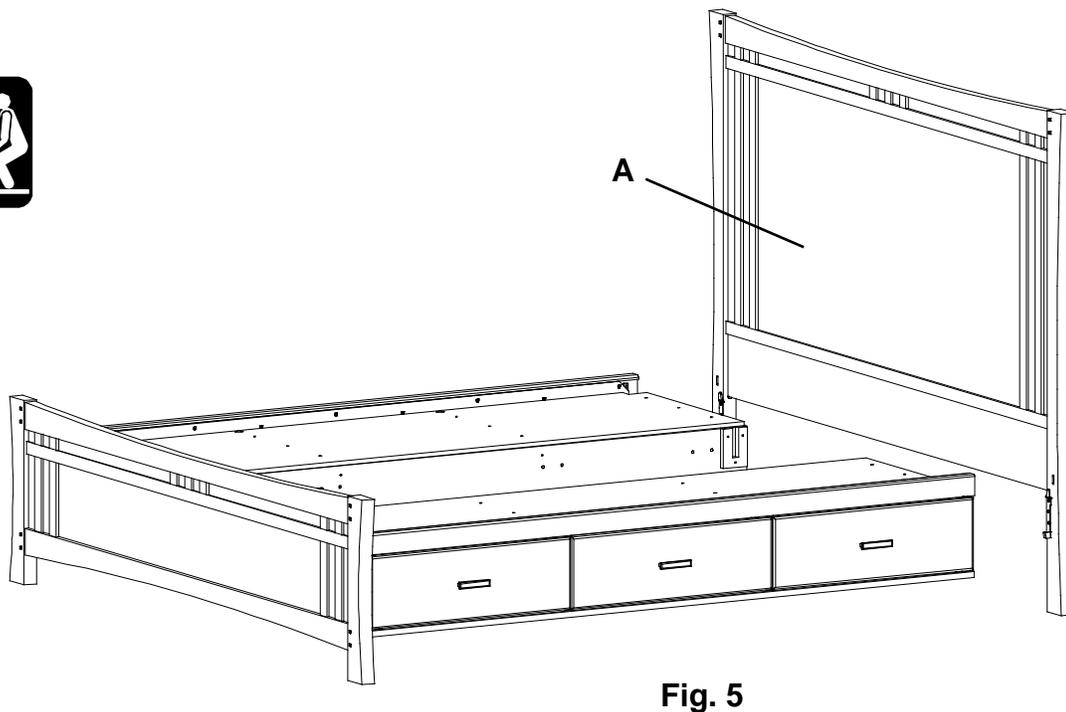



1253LSOc 1253DAOc Prairie City Queen Panel Storage Bed  
1258LSOc 1258DAOc Prairie City King Panel Storage Bed  
1273LSO 1273DAO Prairie City Queen Panel Bed  
1276LSO 1276DAO Prairie City King Panel Bed

*Assembly Instructions*

This assembly requires two people.

6. **NOTE:** There are blocks mounted on the back side of the Footboard to support the end of the pedestal eliminating the need for a Assembled Foot in this position where it would be easily visible. Do not attach a Assembled Foot in the position near the footboard.

Align three Assembled Feet (L) over the insert nuts that are on the back of the Pedestal. Make sure the Adjustable Glides are on the outside face of the Pedestal. See Figures 6 and 6a. Attach to the Pedestal with 1/4" x 1-3/4" Hex Bolts (ZE) and 1/4" Flat Washers (W).

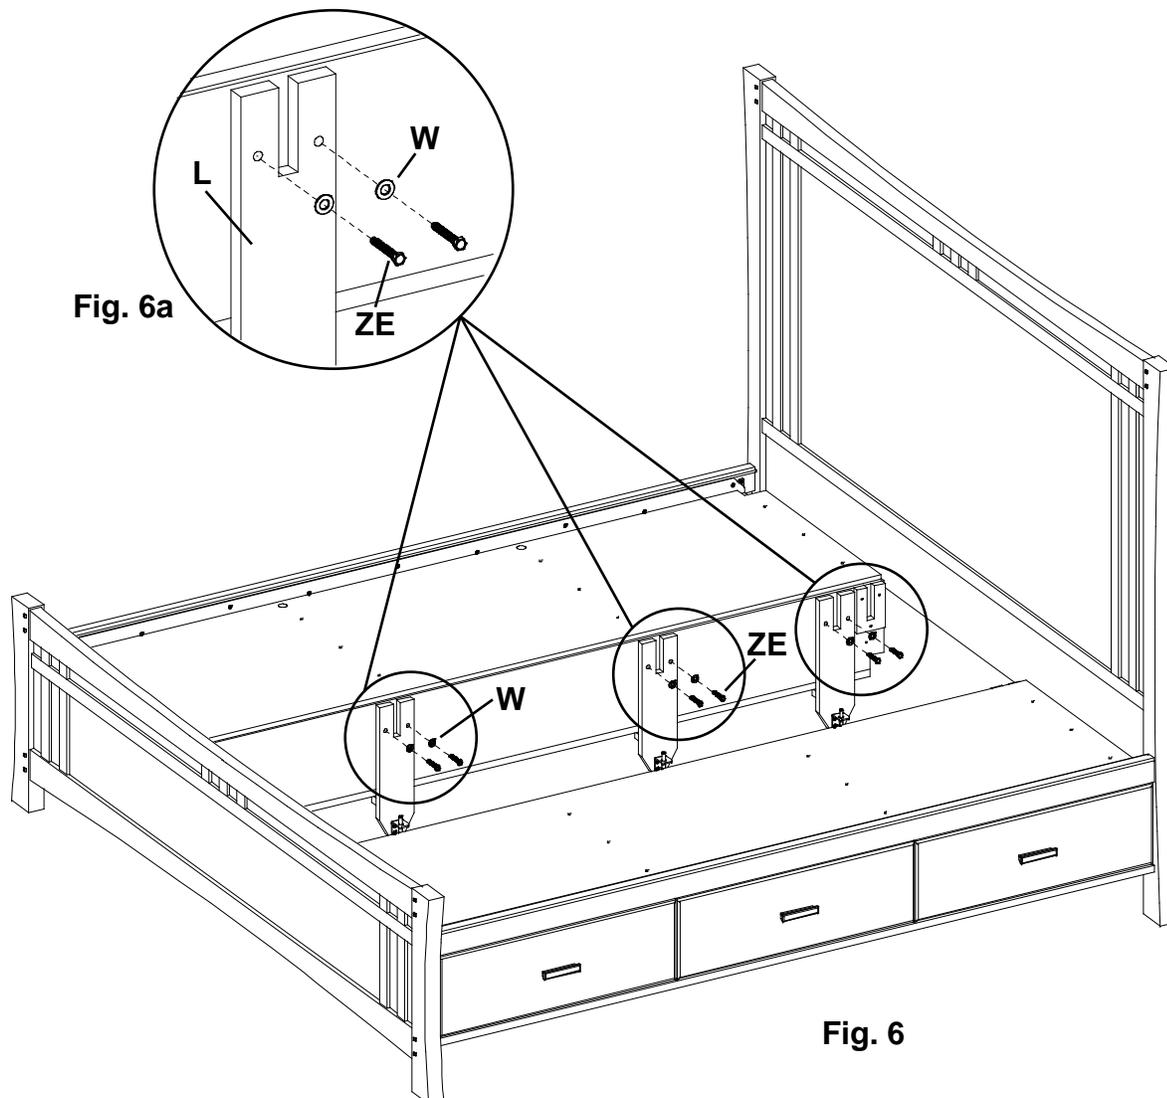
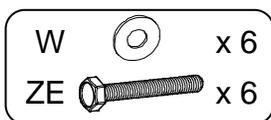


**1253LSOc 1253DAOc Prairie City Queen Panel Storage Bed**  
**1258LSOc 1258DAOc Prairie City King Panel Storage Bed**  
**1273LSO 1273DAO Prairie City Queen Panel Bed**  
**1276LSO 1276DAO Prairie City King Panel Bed**


*Assembly Instructions*

This assembly requires two people.

7. Repeat by attaching three additional Assembled Feet (L) to the other Pedestal with 1/4" x 1-3/4" Hex Bolts (ZE) and 1/4" Flat Washers (W). See Figures 7 and 7a. Using a 1/2" wrench or Slotted screwdriver adjust the Adjustable Glides (ZI) on the bottoms of the Assembled Feet (L) so that the top surfaces of both Pedestal decks are 16" from the floor.

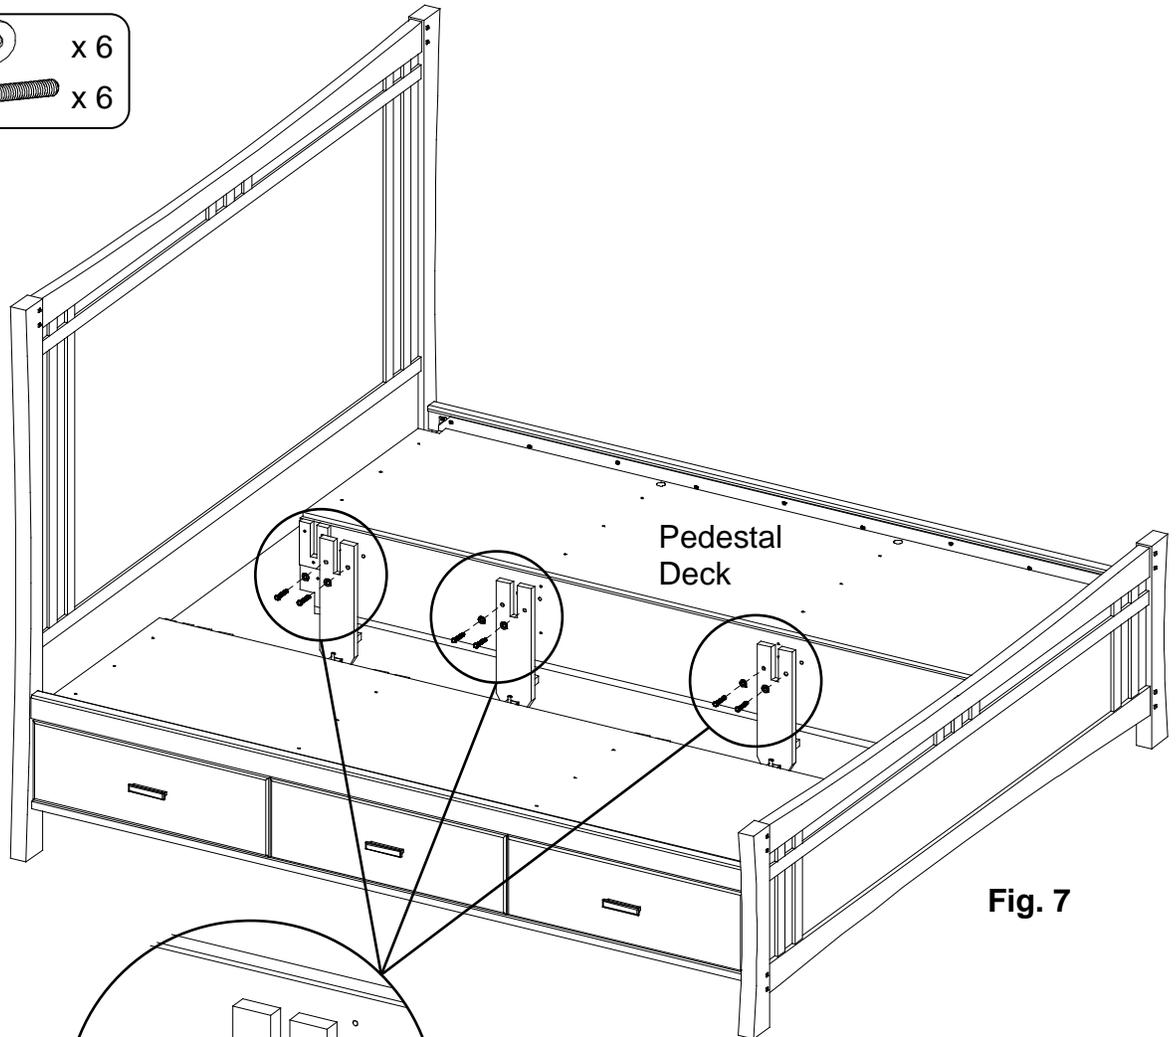

**Fig. 7**

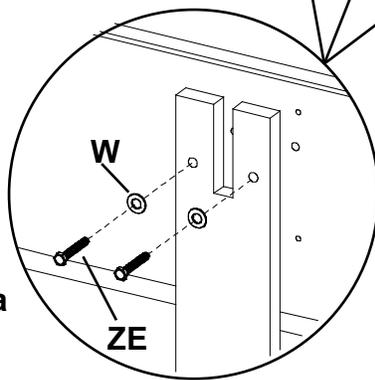





**Fig. 7a**

**1253LSOc 1253DAOc Prairie City Queen Panel Storage Bed**  
**1258LSOc 1258DAOc Prairie City King Panel Storage Bed**  
**1273LSO 1273DAO Prairie City Queen Panel Bed**  
**1276LSO 1276DAO Prairie City King Panel Bed**

*Assembly Instructions*

This assembly requires two people.

8. Facing the Footboard, attach a 90° Bracket (ZL) to the Pedestal and the Footboard with four #6 x 1/2" Philtruss Screws (Q). Repeat for the other side. See Figures 8 and 8a. Using the Hex Wrench (ZM), attach the Headboard to the Pedestals with two 1/4" x 80mm Hex Bolts (ZC). See Figure 8.

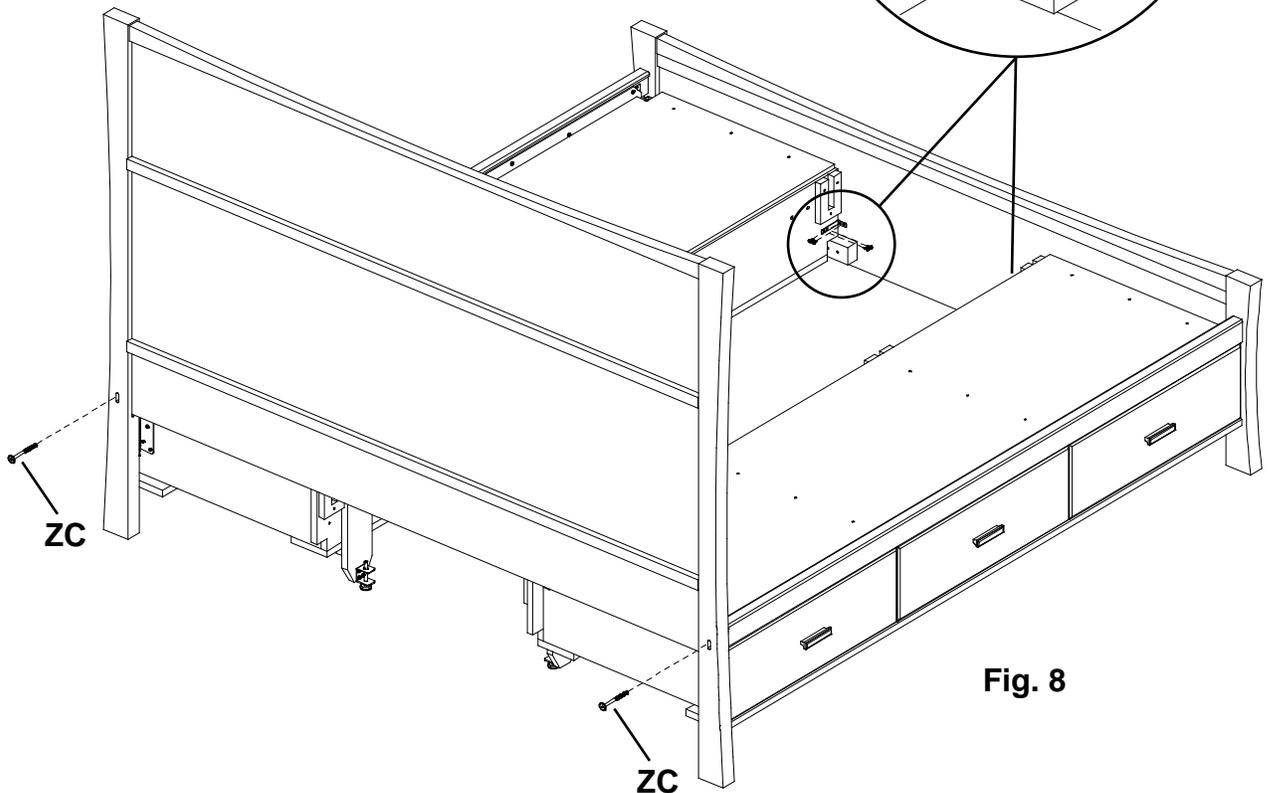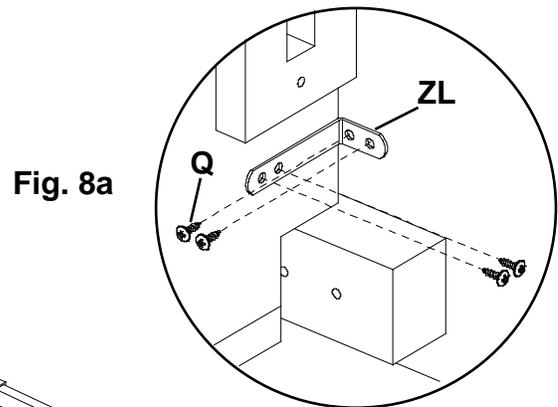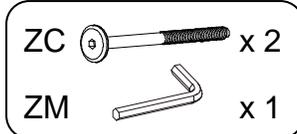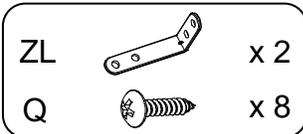


**1253LSOc 1253DAOc Prairie City Queen Panel Storage Bed**  
**1258LSOc 1258DAOc Prairie City King Panel Storage Bed**  
**1273LSO 1273DAO Prairie City Queen Panel Bed**  
**1276LSO 1276DAO Prairie City King Panel Bed**

*Assembly Instructions*

This assembly requires two people.

9. Move the bed assembly to its final position; if necessary readjust the glides at the bottom of the Assembled Feet so that all are touching the floor and support weight. Place the four Queen Trestles (I) or King Trestles (C) into the bed assembly as shown in Figures 9 and 9a. If you have purchased a 1258 King storage bed Recycle/discard the Queen bed trestles that were include with your pedestals.

**IMPORTANT:** the center two trestles nest into the notches at the top of the Assembled Feet, the trestles at each end must nest into the notches in the cleats which are attached closer to the ends of the Pedestals.

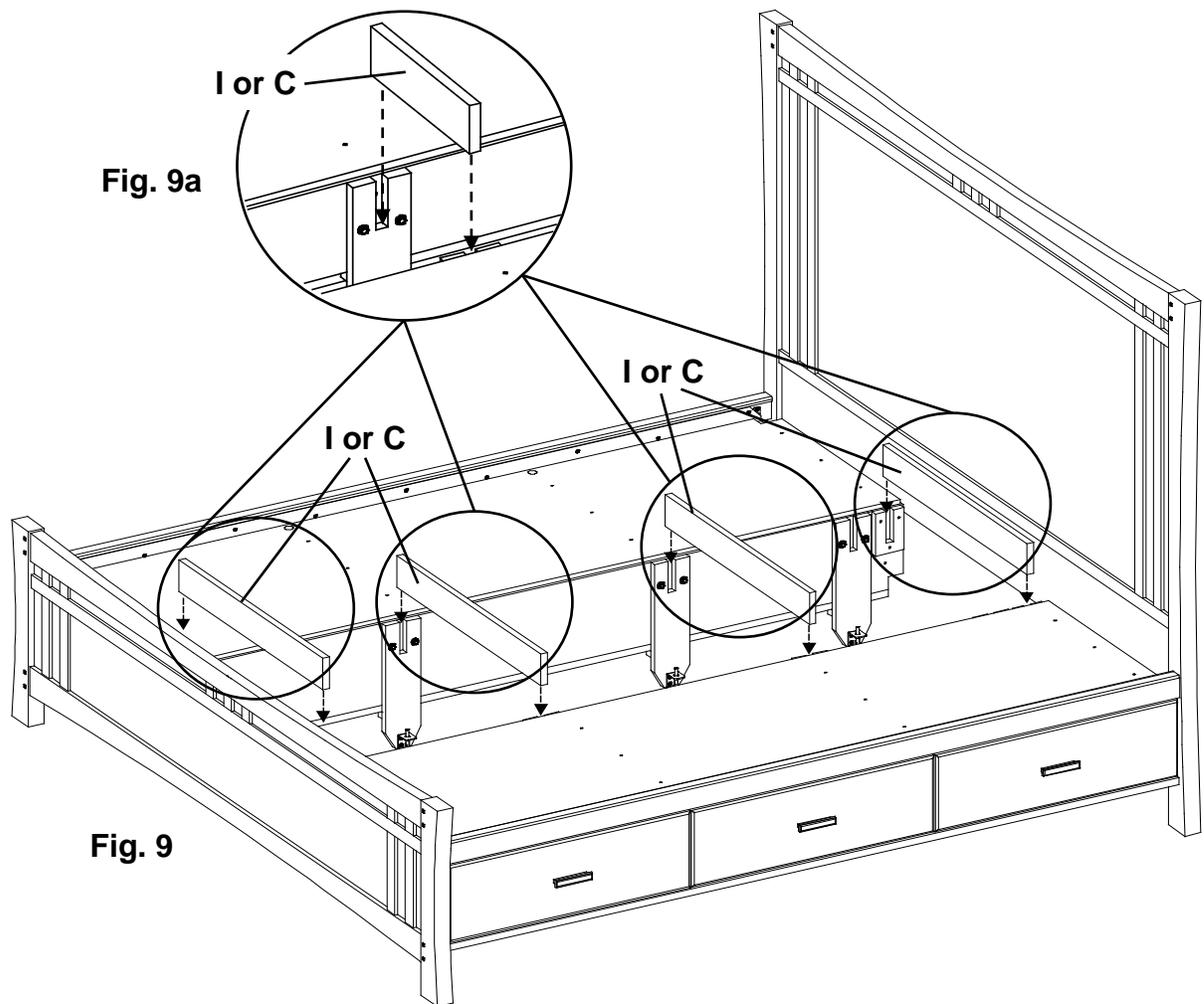


**1253LSOc 1253DAOc Prairie City Queen Panel Storage Bed**  
**1258LSOc 1258DAOc Prairie City King Panel Storage Bed**  
**1273LSO 1273DAO Prairie City Queen Panel Bed**  
**1276LSO 1276DAO Prairie City King Panel Bed**

*Assembly Instructions*



This assembly requires two people.

10. To make sure the bed is square, measure the distance between opposing corners. If one of the measurements is larger, tap on a footboard leg until the measurement is equal. See Figure 10.

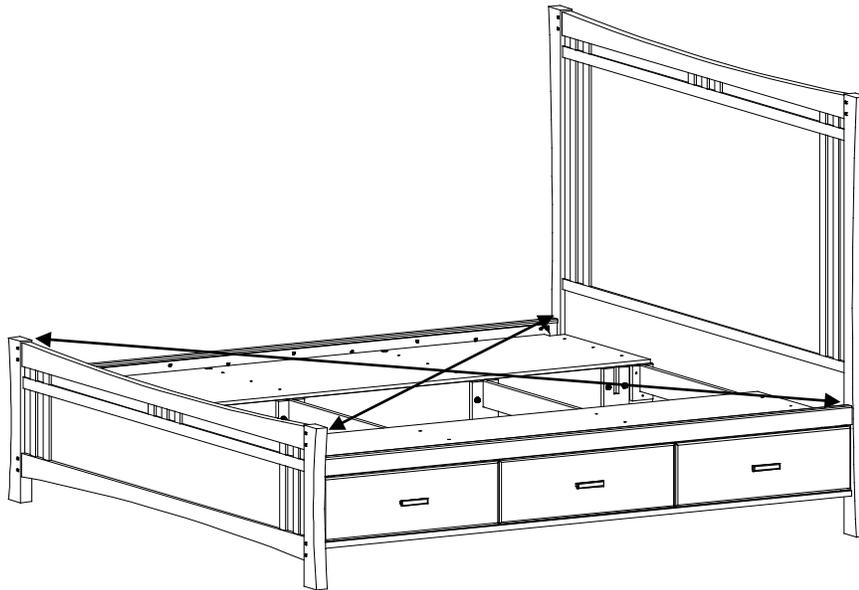

**Fig. 10**

11. Place the Left/Right Center Deckboards (J) as shown in Figure 11 and secure with eight #8x1-1/4" Black Screws (S). There should be a small gap between each deckboard.

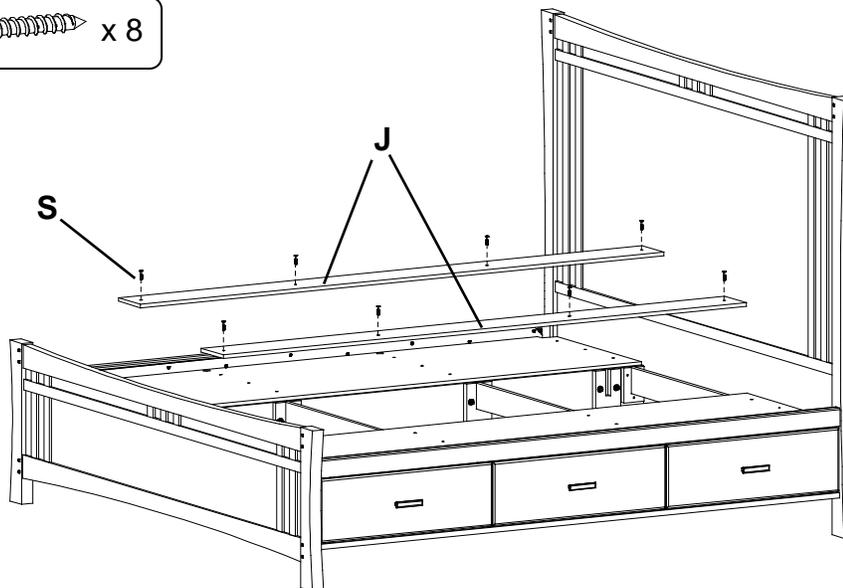

**Fig. 11**



**1253LSOc 1253DAOc Prairie City Queen Panel Storage Bed**  
**1258LSOc 1258DAOc Prairie City King Panel Storage Bed**  
**1273LSO 1273DAO Prairie City Queen Panel Bed**  
**1276LSO 1276DAO Prairie City King Panel Bed**

*Assembly Instructions*

This assembly requires two people.

**Step 12 is for the Prairie King Panel Storage Bed (#1258)**

12. Place the Center Deckboard (D) as shown in Figure 12 and secure with twelve #8 x 1-1/4" Black Screws (S). If you need to adjust the Assembled Feet, remove the Center Deckboard, adjust the glides and reattach the deckboard.

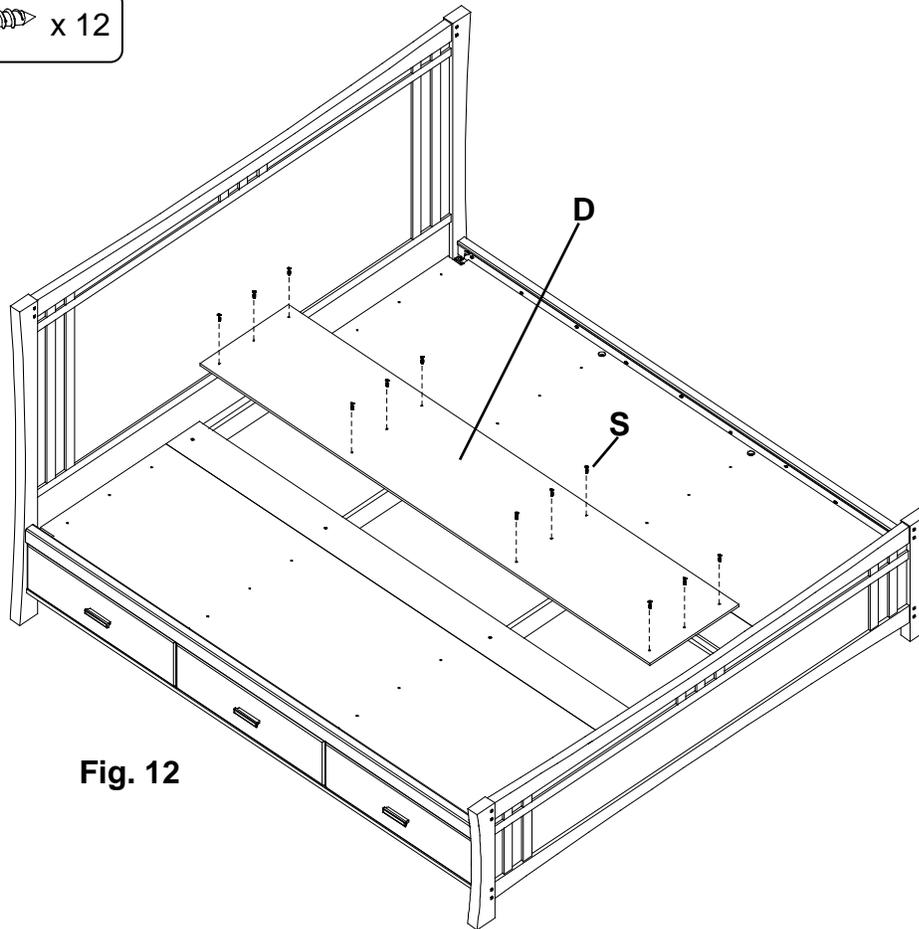

**Fig. 12**


**This concludes the assembly process for Prairie City Storage Bed, if you have purchased a Prairie City Rail Bed please refer to the instructions beginning on page 15.**

1253LSOc 1253DAOc Prairie City Queen Panel Storage Bed  
 1258LSOc 1258DAOc Prairie City King Panel Storage Bed  
 1273LSO 1273DAO Prairie City Queen Panel Bed  
 1276LSO 1276DAO Prairie City King Panel Bed


*Assembly Instructions*  
 This assembly requires two people.

**Step 13 is for the 1276 Prairie City King Panel Bed only.**

13. Your 1260 Headboard/Footboard kit contains a Center Deckboard (D) and King Trestles (C) that are used for a storage bed option; remove these parts from the back of the Headboard (A) and discard or recycle them. See Figure 13.

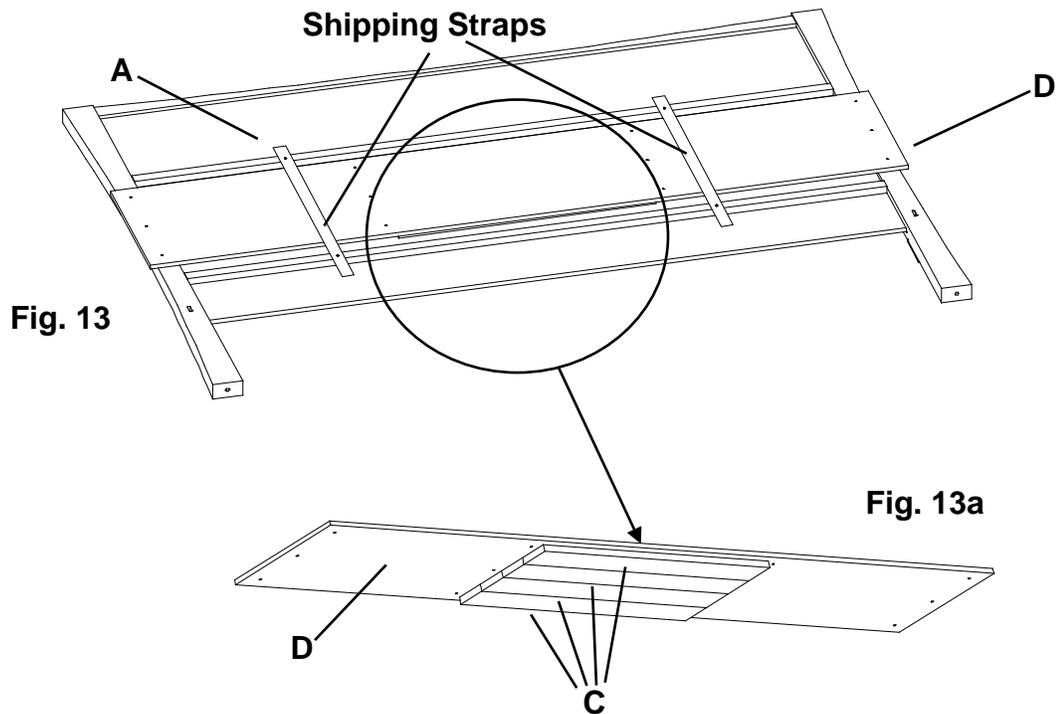


14. Position the two Slat Support (ZS) over the blocks that are mounted onto back side of the Footboard (B) and attach with four #8 x 1-5/8" Black Screws (ZV) through the predrilled holes in the slat supports and into the location punches on the blocks. See Figure 14.

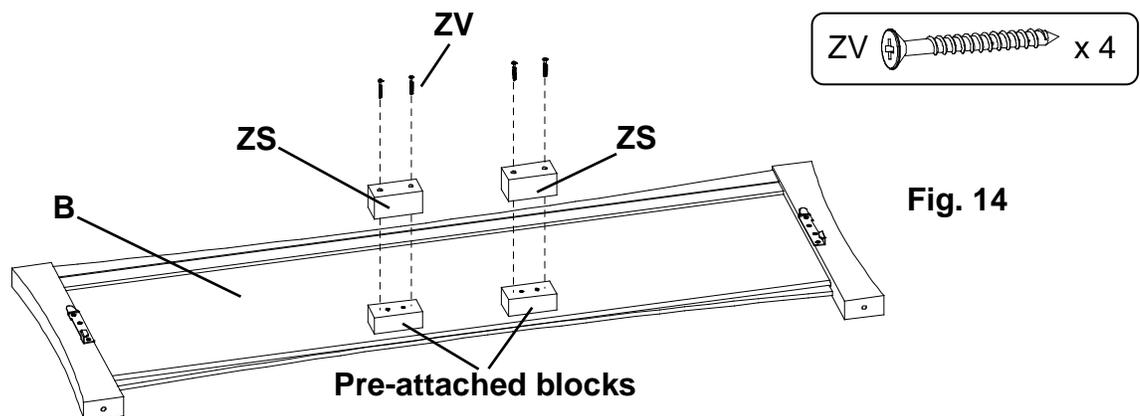


**1253LSOc 1253DAOc Prairie City Queen Panel Storage Bed**  
**1258LSOc 1258DAOc Prairie City King Panel Storage Bed**  
**1273LSO 1273DAO Prairie City Queen Panel Bed**  
**1276LSO 1276DAO Prairie City King Panel Bed**

*Assembly Instructions*  
This assembly requires two people.

15. To attach the Footboard (B) to the Side Rail (ZQ), align the Brackets and slide the Side Rail down on to the Footboard (B). See Figures 15 and 15a.

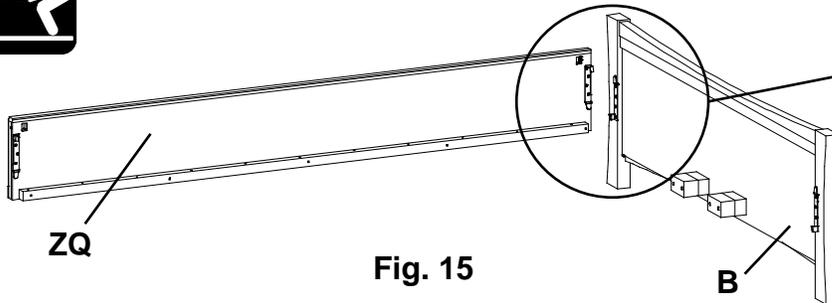


**Fig. 15**

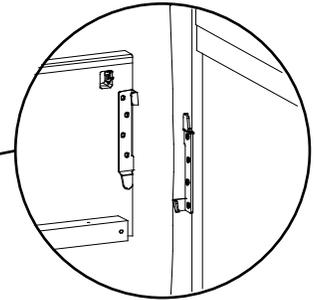


**Fig. 15a**

16. Repeat step fifteen for the other side. See Figures 16 and 16a.

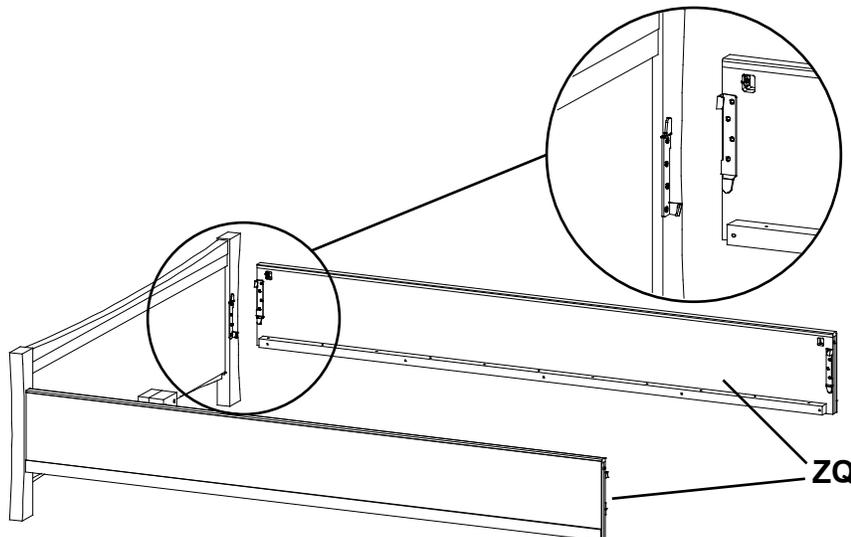

**Fig. 16**

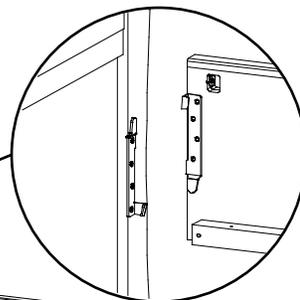


**Fig. 16a**

**1253LSOc 1253DAOc Prairie City Queen Panel Storage Bed**  
**1258LSOc 1258DAOc Prairie City King Panel Storage Bed**  
**1273LSO 1273DAO Prairie City Queen Panel Bed**  
**1276LSO 1276DAO Prairie City King Panel Bed**



*Assembly Instructions*  
This assembly requires two people.

17. Align the Brackets on both sides and slide the Side Rail/Footboard assembly down on to the Headboard (A). See Figure 17.

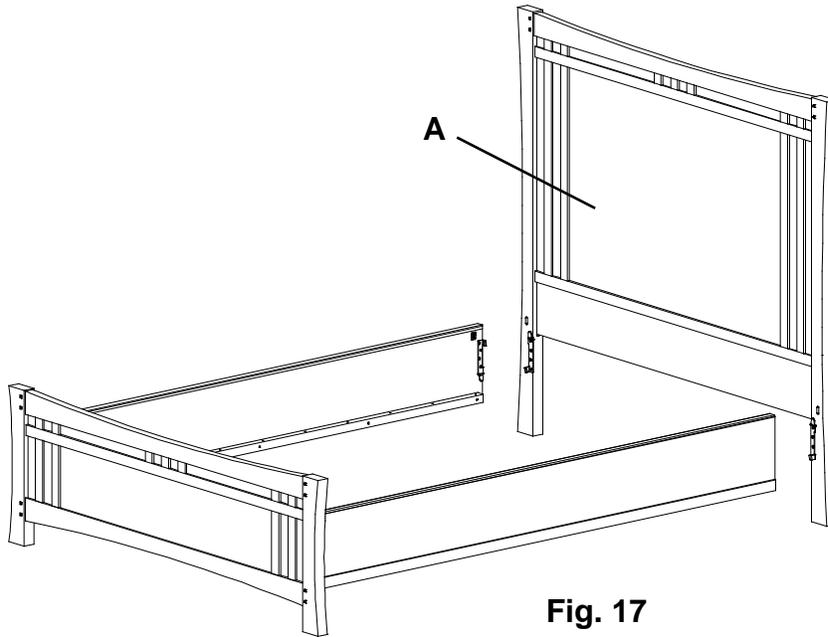

**Fig. 17**

18. Using the Hex Wrench (ZM), attach the Headboard to the Side Rails with two 1/4" x 80mm Hex Bolts (ZC). See Figure 18.

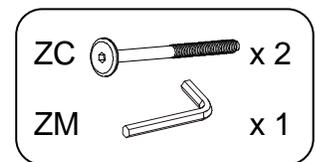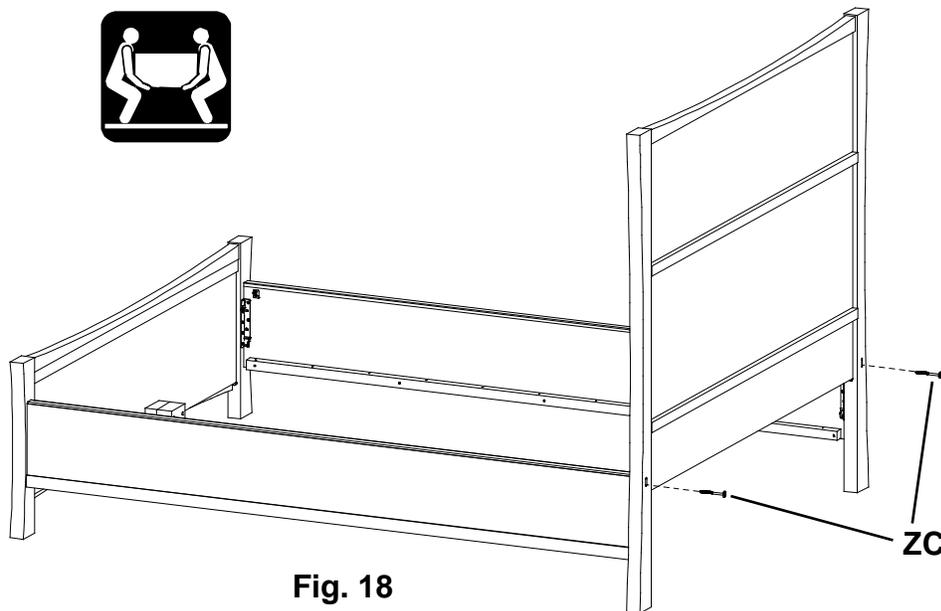


**Fig. 18**


**1253LSOc 1253DAOc Prairie City Queen Panel Storage Bed**  
**1258LSOc 1258DAOc Prairie City King Panel Storage Bed**  
**1273LSO 1273DAO Prairie City Queen Panel Bed**  
**1276LSO 1276DAO Prairie City King Panel Bed**

*Assembly Instructions*  
This assembly requires two people.

19. Attach an Assembled Foot (ZT) to four of the five Slats (ZR) as shown in Figure 19.

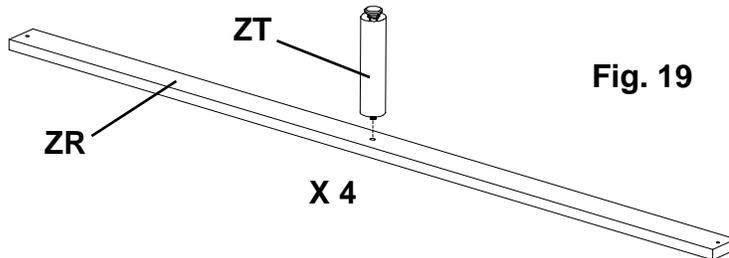

20. Move the bed assembly to its final position. Position the Slats (ZR) on the bottom edges of the rails and place the slat without the Assembled Foot nearest to the Footboard. Attach with #8 x 1-1/4" Black Screws (S). See Figure 20.

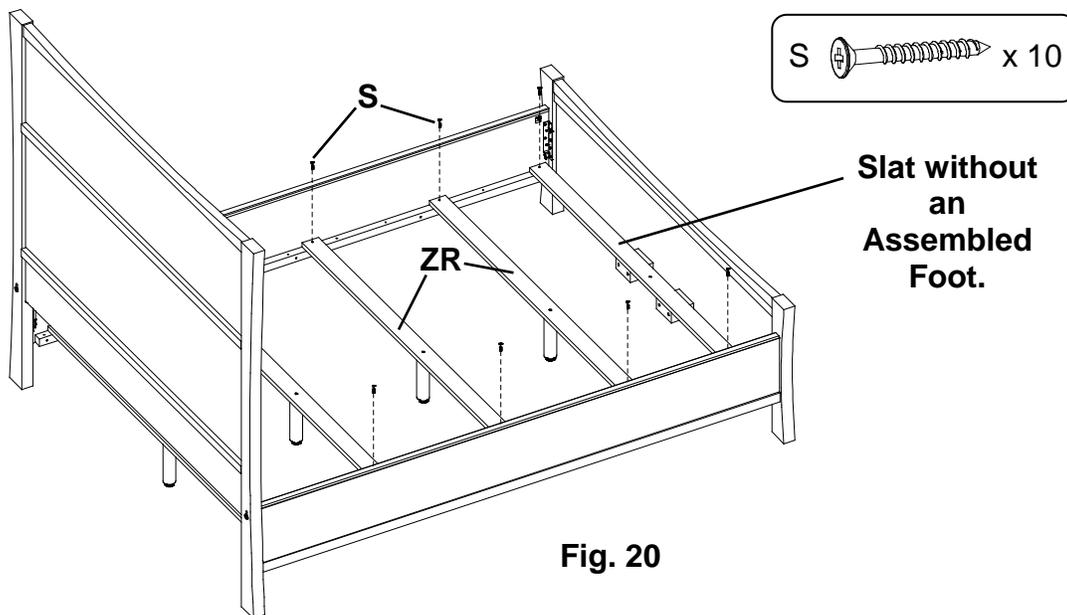

21. Adjust the Adjustable Glides with Hex Nut (ZU) on the Assembled Feet (ZT) so the Glides just touch the floor, making sure the Assembled Feet bear weight.

