

Model #

# 1302GAC


# 1302CAF

## McKenzie Twin *SL* Headboard

**GAC = Glazed Antique Cherry finish**

**CAF = Caffè finish**

*Assembly Instructions*

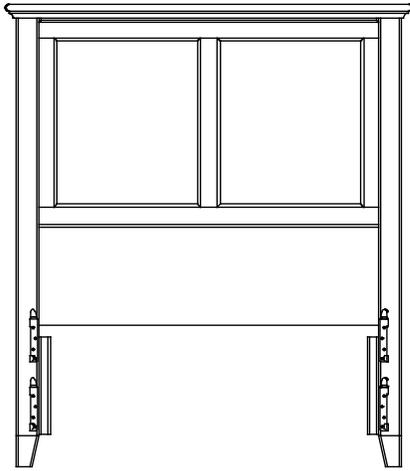

*Thank you for allowing us to help you furnish your home. We are certain you will be delighted with your new furniture for many years to come.*

### IMPORTANT NOTES:

- For normal household use only. *Not* recommended for commercial use.
- This assembly requires two people.

### WARNING

Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the state of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection.

For more information go to: [www.p65warnings.ca.gov/wood](http://www.p65warnings.ca.gov/wood)

This product can expose you to chemicals, including formaldehyde, which are known to the State of California to cause cancer.

For more information go to: [www.p65warnings.ca.gov/furniture](http://www.p65warnings.ca.gov/furniture)

**DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.**

### CUSTOMER SERVICE

If you ever have questions about your furniture, please do not hesitate to contact us. In the unlikely event you need a replacement part; we can make those parts available through an authorized Whittier Wood Furniture dealer. If you cannot order replacement parts through your dealer, please contact our customer service department.

**Hours:** Our friendly customer service staff can be reached:

**Monday-Friday 8:00 a.m. to 5:00 p.m. (Pacific Time).**

You may leave a message 24 hours a day, seven days a week.

**Customer Service:** 800-653-3336 • **Outside the U.S.:** 541-687-0213

**Fax:** 541-687-2060 • **Email:** [info@whittierwood.com](mailto:info@whittierwood.com)

**Whittier  
Wood**  
FURNITURE

P.O. Box 2827  
Eugene, OR 97402 USA

Production Code:

VN

08/17

# 1302GAC 1302CAF McKenzie Twin SL Headboard

## Parts List

Please identify the parts and check that quantities received match those on this list.  
If you need to replace a part, refer to the following letter and part name.

Part	Description	Quantity
A	Headboard Assembly	1
B	Left Bracket (attached)	2
C	Right Bracket (attached)	2
D	#8 x 1" Black Screw (inserted)	16
X	#8 x 1-1/4" Pan Head Screw (inserted)	4
ZD	#12 x 2-1/2" Pan Head Screw (inserted)	6
ZE	#14 x 1-1/4" Pan Head Screw	6
ZF	Washer	6

## Assembly Instructions

**Tools Required: Drill, 1/8" bit, Phillips screwdriver.**

### IF YOU ARE USING A HOLLYWOOD BED FRAME:

1. Adjust the Hollywood frame to fit your mattress and box spring.
2. Place the Headboard (A) against the end brackets of the frame and mark the locations for the screws. Drill pilot holes approximately 1-1/4" deep. (To make sure you don't drill deeper, measure 1-1/4" up from the end of the drill bit and wrap a piece of tape around the bit. Stop drilling when the edge of the tape meets the wood.)
3. Position the Headboard (A) against the frame and attach using six #14 x 1-1/4" Pan Head Screws (ZE) and Washers (ZF).