


# Shaker King Storage Bed 1426AFVCL

(Candlelite Finish)

*Assembly Instructions*

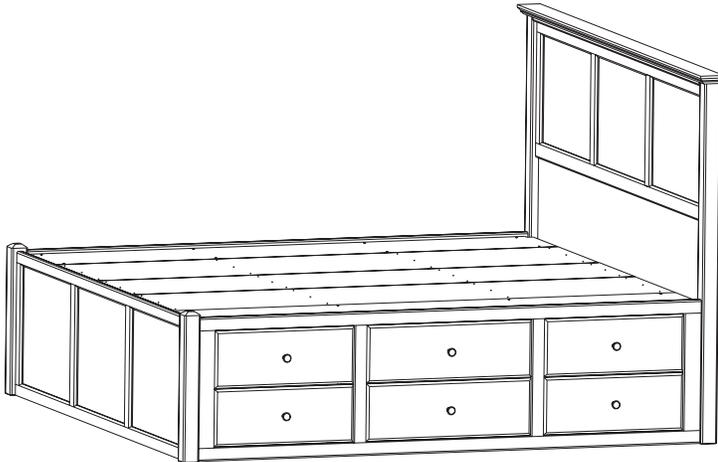

## **Congratulations!**

*This fine piece of furniture will make a handsome addition to your home. For the best results, start by reading the Finishing Hints **before** you begin your project.*

**For normal household use only.  
NOT recommended for commercial use.**



**Unload items from this unit prior to moving.  
Before loading or moving this unit, check all screws  
and supports for tightness.**

**DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.**

**Whittier  
Wood**<sup>™</sup>  
FURNITURE

P.O. Box 2827  
Eugene, OR 97402 USA



# **CALL US FIRST!**

**DO NOT RETURN ITEM TO STORE**

**Service Policy:** We will replace parts which are defective, missing or damaged. Please contact Whittier Wood Products customer service department directly (by phone, fax, mail or E-mail) for replacement parts.

**Hours:** Our friendly customer service staff can be reached Monday-Friday 7:00 a.m. to 5:00 p.m. (Pacific Time). A message can be left 24 hours a day, 7 days a week.

**To Order:** Provide the complete furniture model number, part letter, production code, quantity needed, reason for replacement and your full name and address along with a telephone number in case we need to contact you.

*Parts ship from our Eugene, Oregon factory within 1 or 2 business days from the time we receive the request. Please allow 5-10 business days for delivery.*

## **800-653-3336**

Outside U.S. or Canada: 541- 687- 0213

Fax: 541-687-2060 • [www.whittierwood.com](http://www.whittierwood.com)

Mail: P.O. Box 2827 • Eugene, Oregon 97402, U.S.A

## **IMPORTANT NOTES:**

- Store the item: 1) in the box; 2) in a dry place; 3) in temperatures ranging from 40° to 90°. (Not on a cold, possibly damp, cement floor.)
- Inspect your furniture periodically for any loose glue joints or screws, or any other problem which may be affecting the stability of your furniture. Tighten or repair as needed.
- This Assembly requires two people.

Production Code:


**VN**

**Rev. 02/08**


# Shaker King Storage Bed — Parts List

If you should need to replace a part please refer to the following list for part number.

## 1427AFVCL (x1)

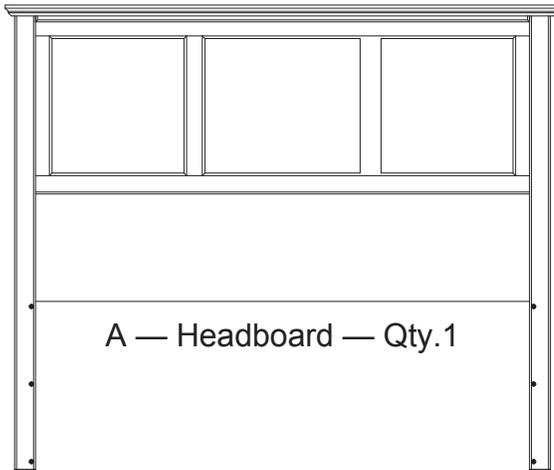

A — Headboard — Qty.1

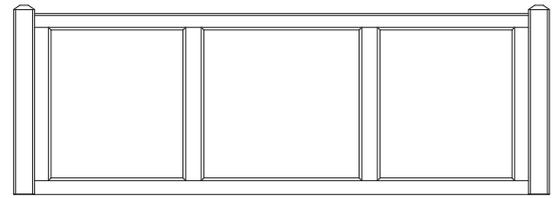

B — Footboard — Qty.1



R — Center Deckboard — Qty.1


D — Insert Nuts — Qty.12  
(Pre-Inserted)



C — Trestle — Qty.4



H — Washer — Qty. 20



F — 1/4" x 3" Hex Bolt  
— Qty. 12




G — 1/4" x 1-1/2" Hex Bolt  
— Qty. 8



E — #8 x 1" Black Screw — Qty. 36

## 1418AFVCL (x2)

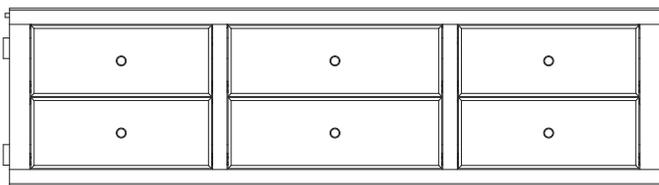

I — Pedestal Kit — Qty.1




J — Drawer Box Small — Qty.4

K — Drawer Box Large — Qty.2



P — Deckboard — Qty.1

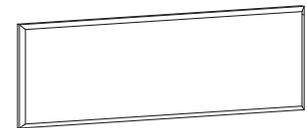

L — Drawer Face Small — Qty.4


M — Drawer Face Large — Qty.2



N — #8 x 1 1/2" Machine Screw  
— Qty. 6



O — Knob — Qty. 6



Q — Drawer Slides — Qty.12  
(Pre-Installed)


# Shaker King Storage Bed Assembly Instructions

This Assembly Requires Two People


## TOOLS REQUIRED:

Phillips screwdriver, 7/16" open end or box end wrench and tape measure.

---

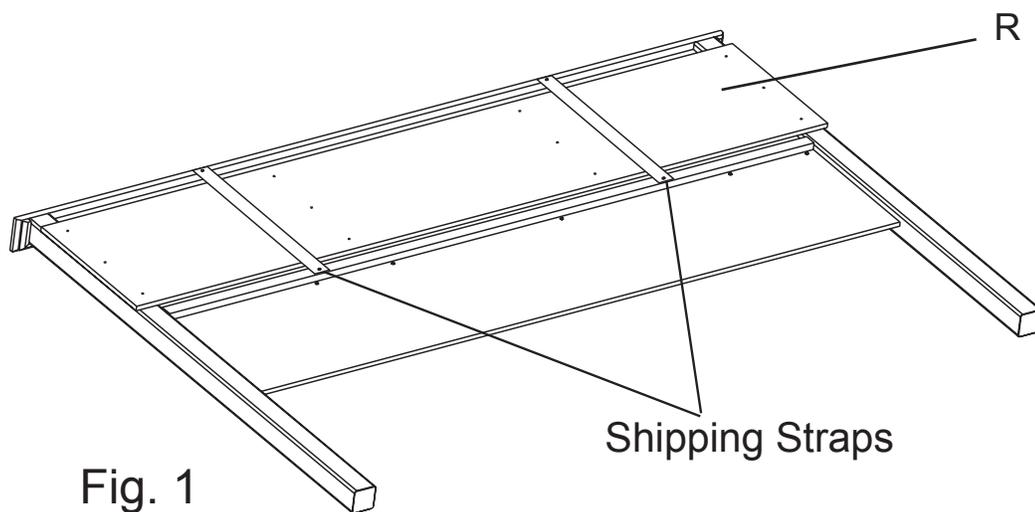


1. Remove the Trestles and Center Deckboard (R) from the back of the Headboard as seen in Fig. 1 and place them off to the side.
- 

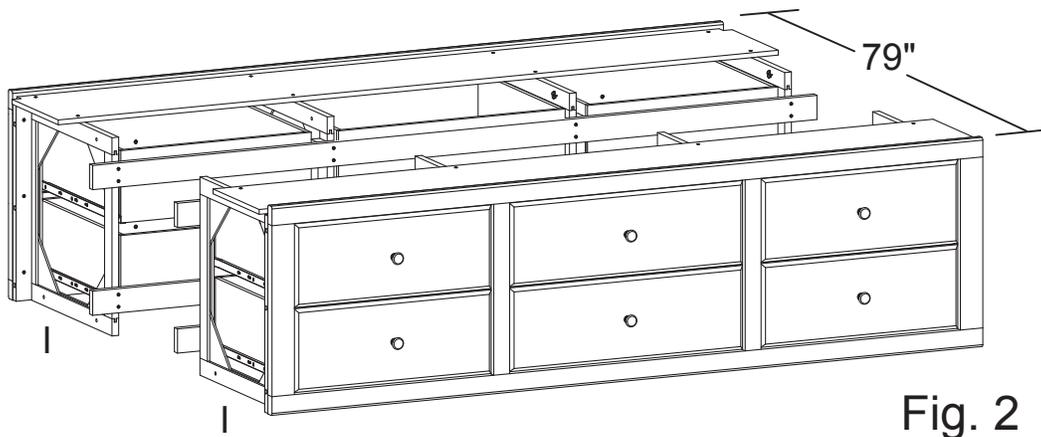


2. Place both Pedestals (I) approximately 79" apart as shown in Fig.2.

3. Remove all Drawers from both Pedestals. The drawers have been pre-aligned from the factory. Take note of where each drawer came from to insure easy re-installation. The drawers are marked on the back end to assist in this process.

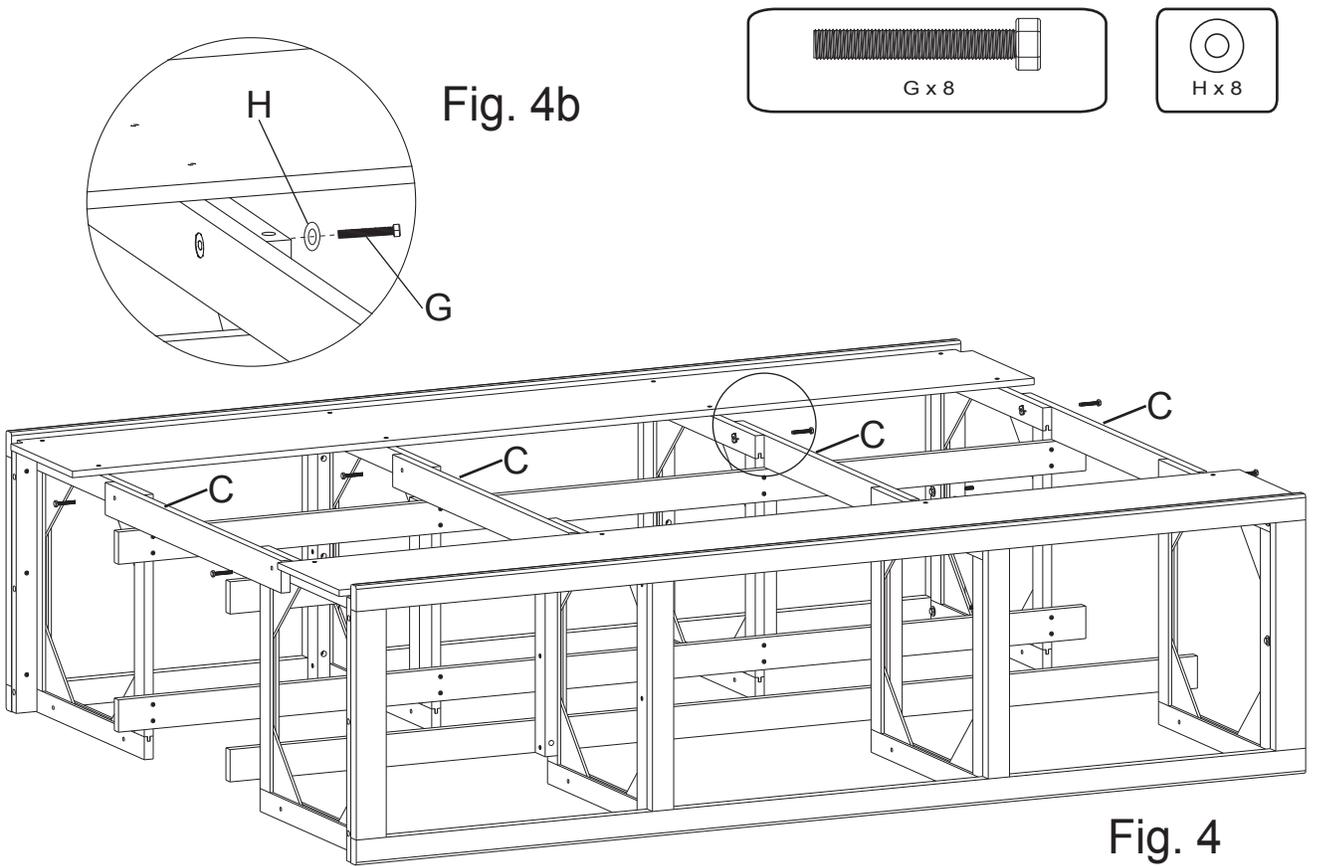

4. Place 4 Trestles (C) in between Pedestals and insert 1-1/4" Hex Bolt (G) and washer (H) as shown in Fig. 4b. Finger tighten only.

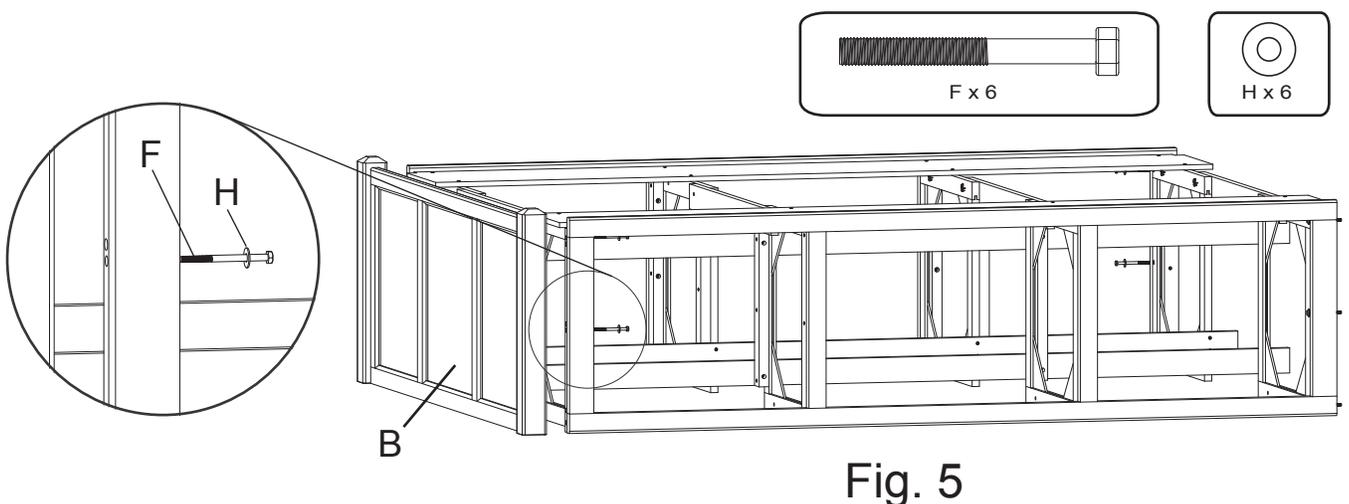

5. Assemble the Footboard (B) to the Pedestal Assembly as shown in Fig. 5. using 1/4" x 3" Hex Bolt (F) and Washer (H).

6. Repeat step 5 to assemble the Headboard (A) to the Pedestal Assembly as shown in Fig. 6.






Fig.6

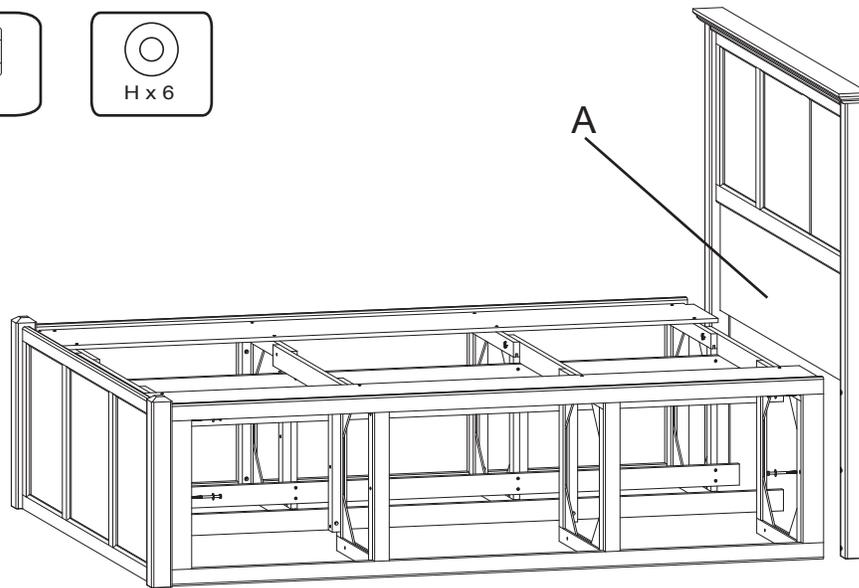

7. Tighten all bolts on Trestles securely.





Fig. 7

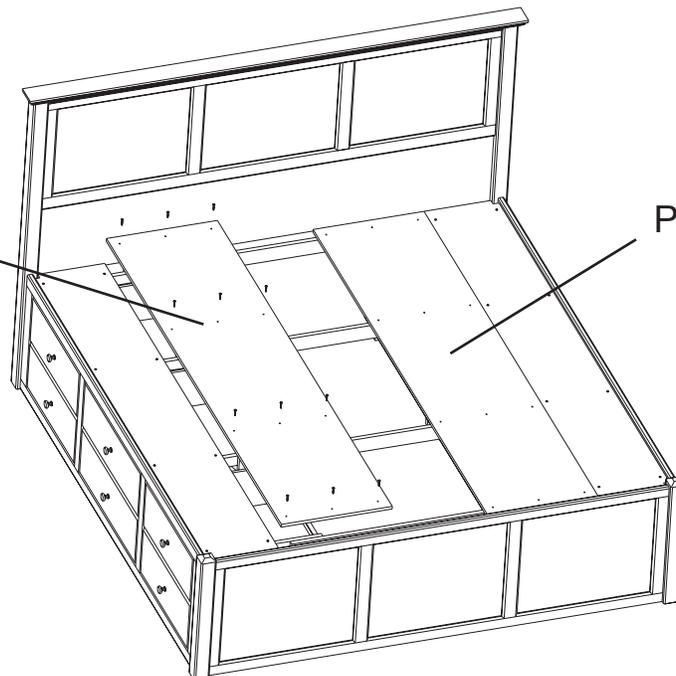

8. Place Deckboards (P) as shown in Fig. 7 and secure with #8 x 1" Screw (E).

9. Place Center Deckboard (R) as shown in Fig. 9 and secure with #8 x 1" Screw (E).





Fig. 9

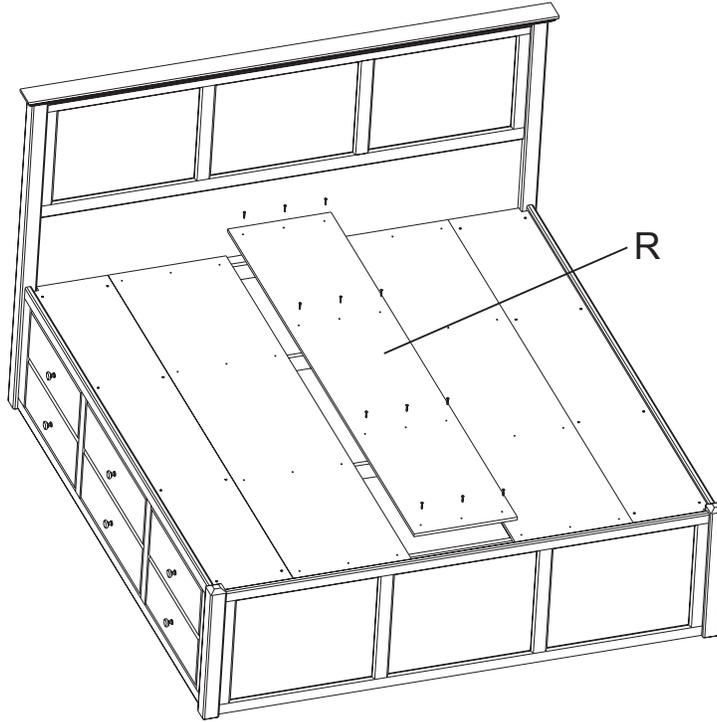

---

10. Re-install Drawers into their original positions. Sleep well, and enjoy!