


Model #

# 1504GBCH

## Cascade Rectangular Mirror

Glazed Black Cherry finish

Assembly Instructions

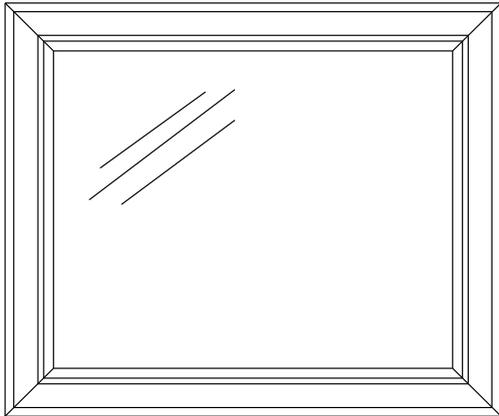

### Congratulations!

*This fine piece of furniture will make a gorgeous addition to your home. For the best results, read the Assembly Instructions before you begin your project.*

### IMPORTANT NOTES:

- For normal household use only. *Not recommended for commercial use.*



- Handle the mirror with care. Glass is fragile.
- Before you begin your project, completely read the Assembly Instructions.
- Store this item: 1- in its box; 2- in a dry place; 3- in temperatures that range from 40°F to 90°F (not on a cold and possibly damp cement floor).
- Periodically inspect your furniture for any loose glue joints, screws or any other problem that might affect the stability of your furniture. Tighten or repair as needed.

### WARNING

#### Notice to California Customers

California Prop 65 requires consumer goods to be labeled if any one of 850+ different chemicals or substances, including wood dust, is present even in trace amounts. Drilling, sawing, sanding or machining wood products generates wood dust, a substance known to the State of California to cause cancer. **Warning:** This product contains a chemical or substance known to the State of California to cause cancer, birth defects or other reproductive harm. *California Health and Safety Code Section 25249.6*

**DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.**



**CALL US FIRST!** *Do not return this item to the store.*

**Service Policy:** We will replace any part that is defective, missing or damaged during assembly. For a replacement part, phone, fax, mail or email your request to the Whittier Wood Products customer service department.

**Hours:** Our friendly customer service staff can be reached Monday-Friday 7:00 a.m. to 5:00 p.m. (Pacific Time). You may leave a message 24 hours a day, seven days a week.

**To Order:** Provide the finish and furniture model number (upper portion of this page), the part letter, production code, quantity needed, reason for replacement and your full name, address and telephone number.

*Parts ship from our Eugene, Oregon factory within one or two business days from the time we receive your request. Please allow five to ten business days for delivery.*

800-653-3336 • Outside the U.S. or Canada: 541-687-0213 • Fax: 541-687-2060  
www.whittierwood.com • P.O. Box 2827 • Eugene, Oregon 97402, U.S.A.

**Whittier  
Wood**  
FURNITURE

P.O. Box 2827  
Eugene, OR 97402 USA

Production Code:







VN

11/13

# 1504GBCH Cascade Rectangular Mirror

## Parts List

Please identify the parts and check that quantities received match those on this list.  
If you need to replace a part, refer to the following letter and part name.

Part	Description		Quantity
A	Mirror Assembly		1
B	Mirror		1
C	Mirror Frame (attached)		1
D	Mirror Retainer (attached)		4
E	Mirror Support		2
F	Mirror Frame Bracket (attached)		1
G	Mirror Wall Bracket		1
H	#8 x 1-3/4" Pan Head Screw		2
I	#6 x 3/4" Flat Head Screw (inserted)		4
J	#6 x 5/8" Philtruss Screw (inserted)		16
K	M4 x 41 mm Machine Screw		4
L	#7 x 1-1/2" Black Pan Head Screw		4
M	Velvet Pad 50 x 50mm		3


# 1504GBCH Cascade Rectangular Mirror

## Assembly Instructions



**Tools Required:** Phillips Screwdriver, Tape Measure, Pencil

**You have the option of attaching your Mirror to the wall or to selected Cascade Dressers. To attach your Mirror to the wall, follow steps 1 – 4. To attach the Mirror to the Dresser, follow steps 5– 9.**

1. Decide if you want your Mirror to hang either vertically or horizontally. If you want it to hang vertically, remove the Mirror Frame Bracket (F) and line it up to the predrilled holes on the short side of the Mirror Frame (C) as in Figure 1. Attach with four #6 x 3/4" Flat Head Screws (I).

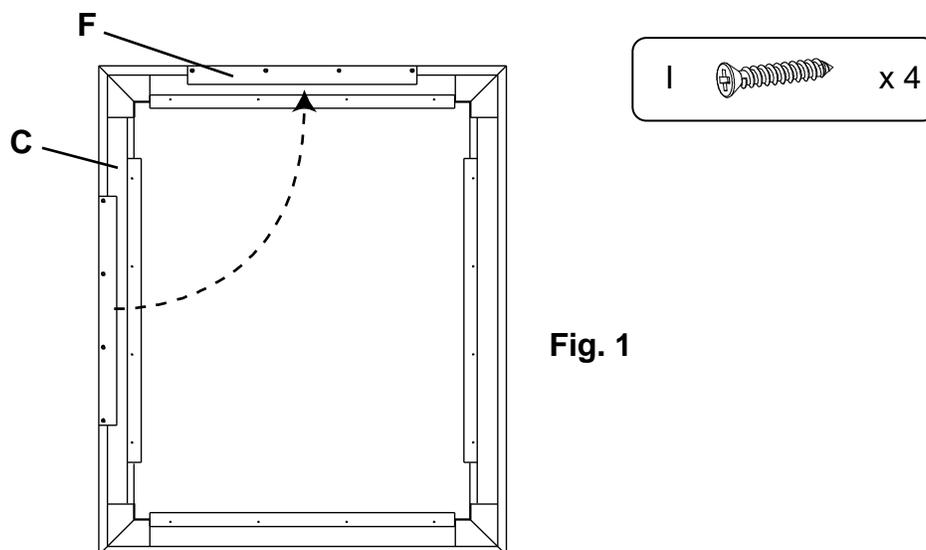


2. Determine where you want the bottom of your mirror to end and draw a faint pencil line on the wall. For a vertical placement, use a tape measure and measure up 41-5/8" from that mark. Draw a faint line. For a horizontal placement, measure up 34-5/8". Draw a faint line. The top line is where you attach the Mirror Wall Bracket (G). If you like, you can erase the faint bottom pencil mark. See Figures 2 and 2a.

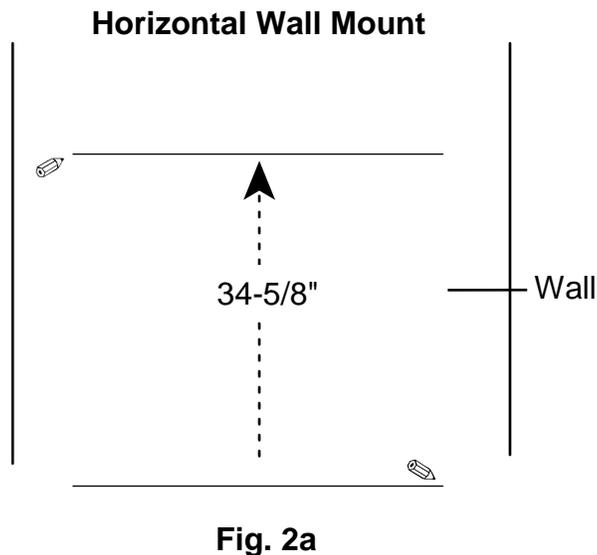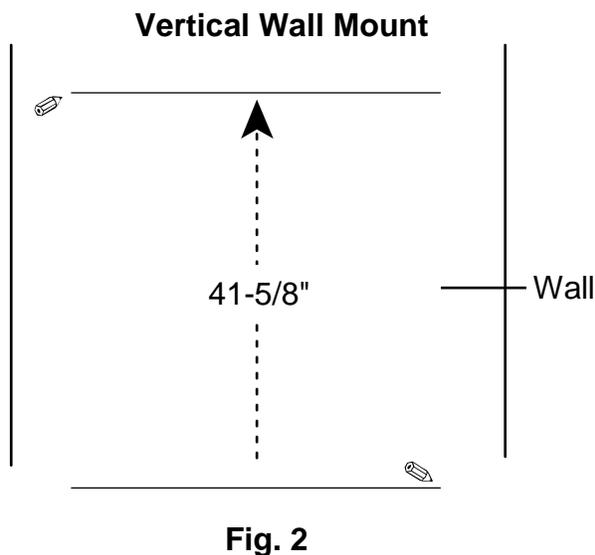


# 1504GBCH Cascade Rectangular Mirror

## Assembly Instructions

3. Locate two studs in the wall behind the space where you want to hang your Mirror. Affix the Mirror Wall Bracket (G) into the studs with two #8 x 1-3/4" Pan Head Screws (H). If you cannot locate two studs, purchase the proper wall attachment hardware for your type of wall and secure the bracket. See Figure 3.

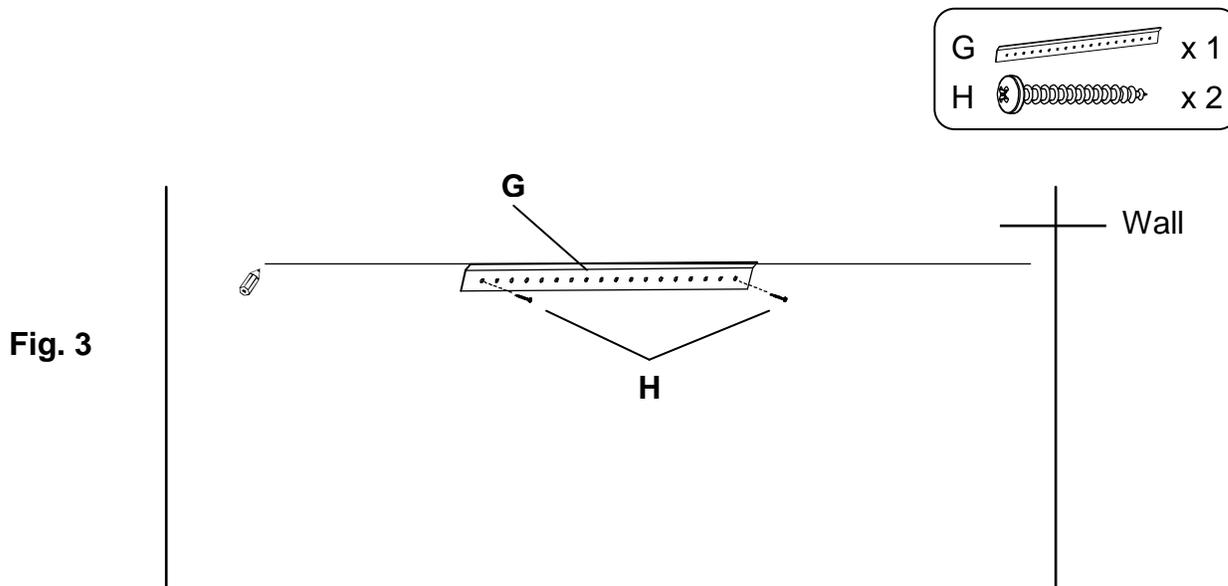


4. NOTE: The Mirror Wall Bracket (G) angles out at the top. When you hang your Mirror, the Mirror Frame Bracket (F) fits over the angled part of the Mirror Wall Bracket (G). See Figure 4.

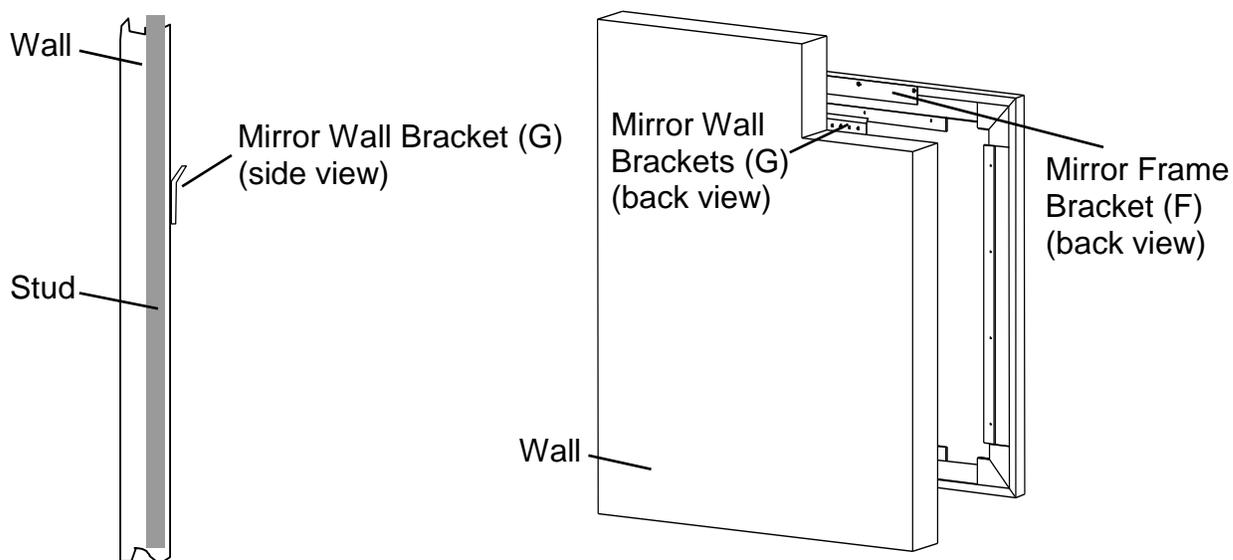


# 1504GBCH Cascade Rectangular Mirror

## Assembly Instructions

- To attach the Mirror to the Cascade Dresser, remove the Mirror Frame Bracket (F) that is attached to the Mirror Frame (C) as shown in Figure 5. Keep this bracket along with the Mirror Wall Bracket (G) and the four #6 x 3/4" Flat Head Screws (I) in the chance that in the future, you will want to mount the Mirror to the wall.

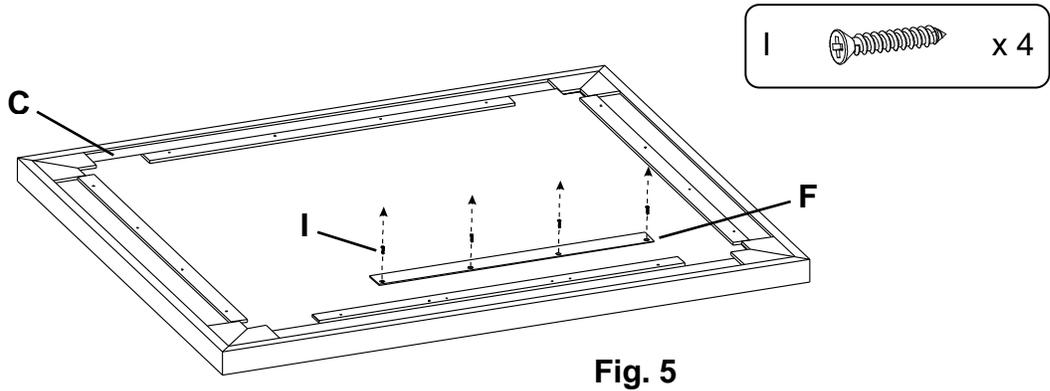


- To attach the Mirror horizontally to the Dresser, use the predrilled holes in the back as noted in Figure 6.

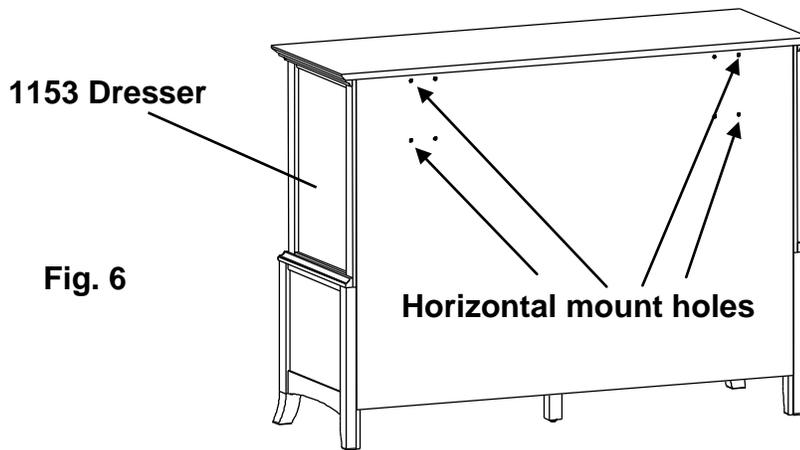


# 1504GBCH Cascade Rectangular Mirror

## Assembly Instructions

- Using the predrilled holes on the back of the Dresser as guides, attach the two Mirror Supports (E) with four M4 x 41 Machine Screws (K). The upper screws will be inserted into the 3<sup>rd</sup> hole from the top and the lower screws will be inserted into the 1<sup>st</sup> hole from the bottom of the Mirror Supports. See Figures 7 and 7a.

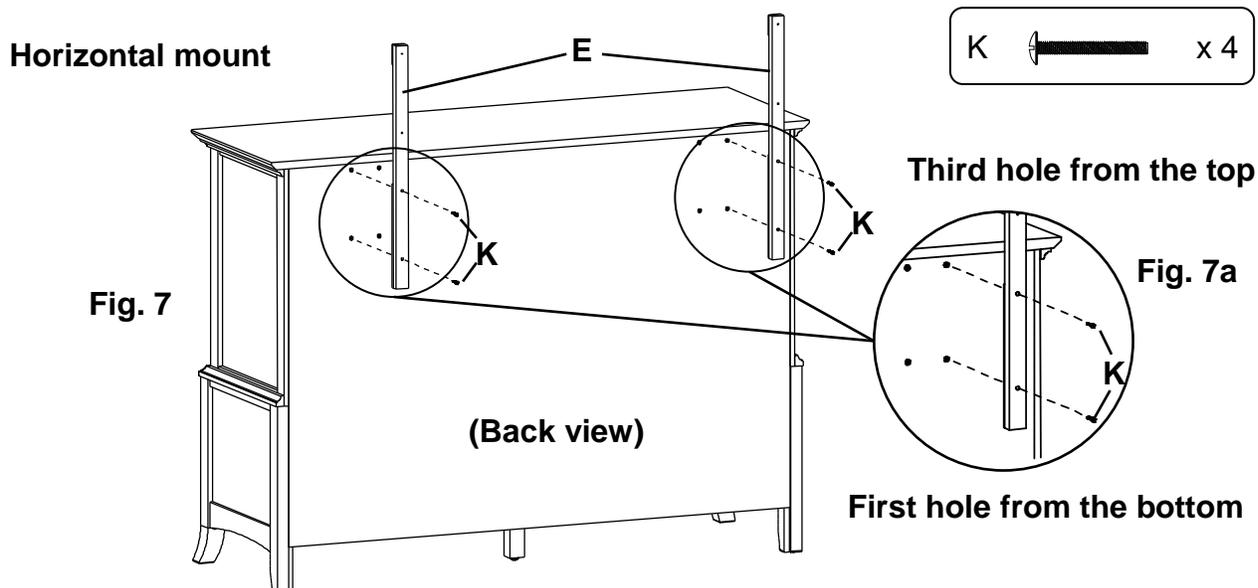

- Peel off the backings on the Velvet Pads (M) and apply them to the bottom of the Mirror Assembly (A). See Figure 8.

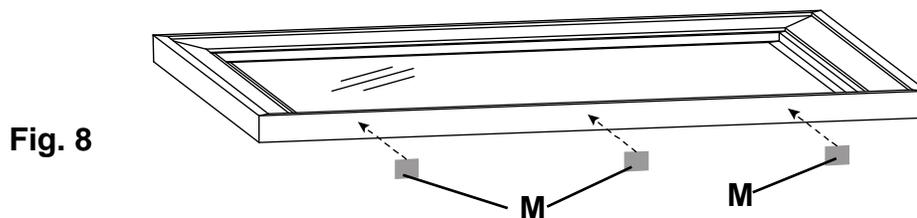


# 1504GBCH Cascade Rectangular Mirror

## Assembly Instructions

---

- 9. Place the Mirror on top of the Dresser and attach it to the Mirror Supports (E) with four #7 x 1-1/2" Black Pan Head Screws (L). See Figure 9.

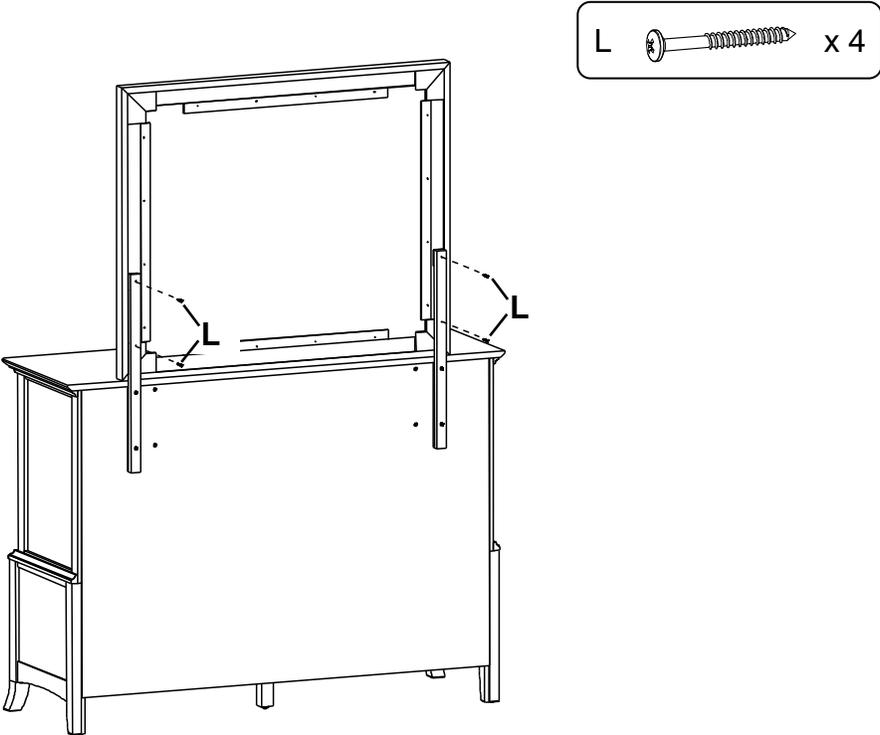

**Fig. 9**