


Model #

1506RGB

Stonewood Beveled Mirror

RGB = Rustic Glazed Brown finish

Assembly Instructions

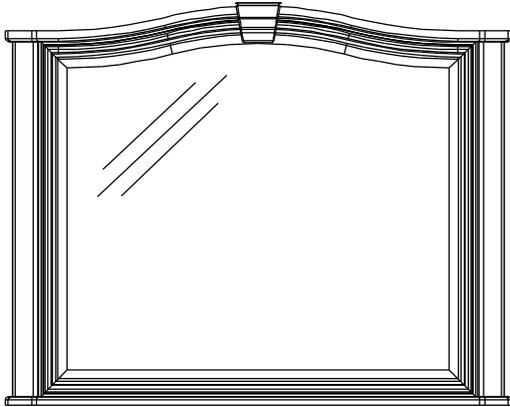

Congratulations!

This fine piece of furniture will make a gorgeous addition to your home. For the best results, read the Assembly Instructions before you begin your project.

IMPORTANT NOTES:

- For normal household use only. *Not recommended for commercial use.*



- Handle the mirror with care. Glass is fragile.
- Before you begin your project, completely read the Assembly Instructions.
- Store this item: 1- in its box; 2- in a dry place; 3- in temperatures that range from 40°F to 90°F (not on a cold and possibly damp cement floor).
- Periodically inspect your furniture for any loose glue joints, screws or any other problem that might affect the stability of your furniture. Tighten or repair as needed.

WARNING

Notice to California Customers

California Prop 65 requires consumer goods to be labeled if any one of 850+ different chemicals or substances, including wood dust, is present even in trace amounts. Drilling, sawing, sanding or machining wood products generates wood dust, a substance known to the State of California to cause cancer. **Warning:** This product contains a chemical or substance known to the State of California to cause cancer, birth defects or other reproductive harm. *California Health and Safety Code Section 25249.6*

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.



CALL US FIRST! *Do not return this item to the store.*

Service Policy: We will replace any part that is defective, missing or damaged during assembly. For a replacement part, directly contact Whittier Wood Products customer service department by phone, fax, mail or email.

Hours: Our friendly customer service staff can be reached Monday-Friday 7:00 a.m. to 5:00 p.m. (Pacific Time). You may leave a message 24 hours a day, seven days a week.

To Order: Provide the finish and furniture model number (upper portion of this page), the part letter, production code, quantity needed, reason for replacement and your full name, address and telephone number.

Parts ship from our Eugene, Oregon factory within one or two business days from the time we receive your request. Please allow five to ten business days for delivery.

800-653-3336 • Outside the U.S. or Canada: 541-687-0213 • Fax: 541-687-2060
www.whittierwood.com • P.O. Box 2827 • Eugene, Oregon 97402, U.S.A.

Whittier
Wood
FURNITURE

P.O. Box 2827
Eugene, OR 97402 USA

Production Code:








VN

01/15

1506RGB Stonewood Beveled Mirror

Parts List

Please identify the parts and check that quantities received match those on this list.
If you need to replace a part, refer to the following letter and part name.

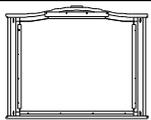Part	Description		Quantity
A	Mirror Assembly		1
B	Mirror Frame		1
C	Arch Mirror (attached)		1
D	Short Mirror Retainer (attached)		1
E	Medium Mirror Retainer (attached)		2
F	Long Mirror Retainer (attached)		1
G	Mirror Support		2
H	#6 x 3/4" Brass Flat Head Screw (inserted)		4
I	#6 x 5/8" Philtruss Screw (inserted)		16
J	#8 x 1-1/4" Pan Head Screw (inserted)		9
K	#8 x 1-3/4" Pan Head Screw		2
L	#7 x 1-1/2" Black Pan Head Screw		4
M	M4 x 41mm Machine Screw		4
N	Velvet Pad 50 x 50mm		3
O	Mirror Frame Bracket (attached)		1
P	Mirror Wall Bracket		1


1506RGB Stonewood Beveled Mirror

Assembly Instructions



Tools Required: Phillips Screwdriver, Tape Measure, Pencil

You have the option of attaching your Mirror to the wall or to selected Dressers. To attach the Mirror to a wall, follow steps 1-3. To attach the Mirror to a Dresser, follow steps 4-6.

1. Determine where you want the bottom of your mirror to end and draw a faint pencil line on the wall. Using a tape measure, measure up $32\text{-}3/4"$ from that line. Draw another faint line. The top line is where you will attach the Mirror Wall Bracket (P). If you like, you may erase the faint bottom pencil mark. See Figure 1.

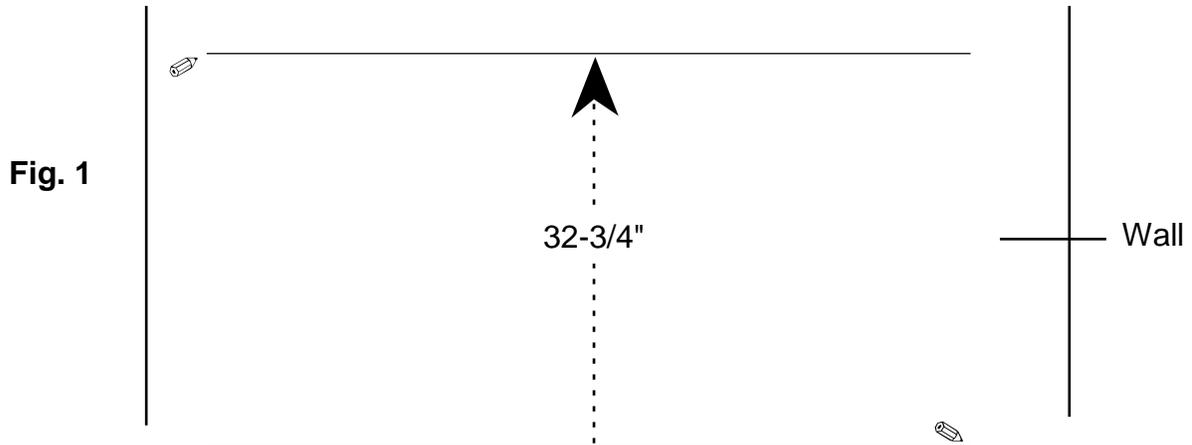


2. Locate two studs in the wall behind the space where you want to hang your Beveled Mirror. Affix the Mirror Wall Bracket (P) into the studs with two #8 x 1-3/4" Pan Head Screws (K). If you cannot locate two studs, purchase the proper wall attachment hardware for your type of wall and secure the bracket. See Figure 2.

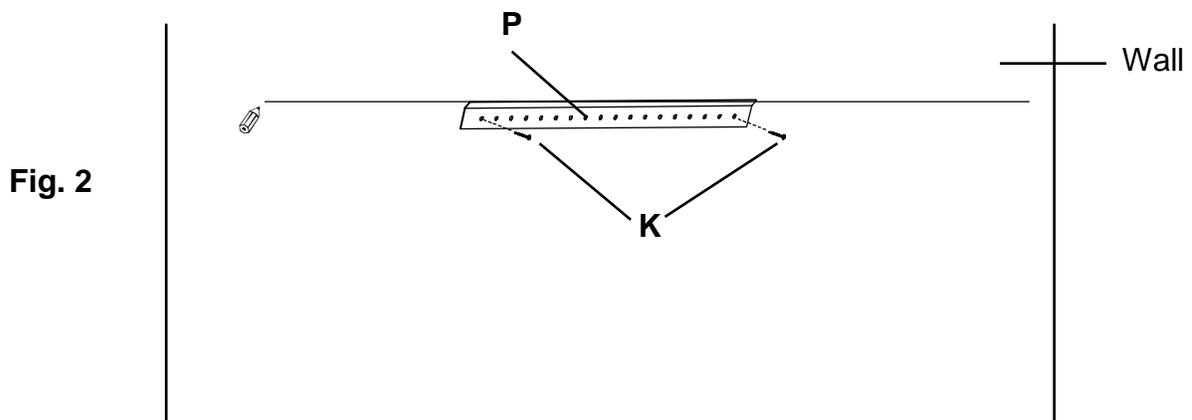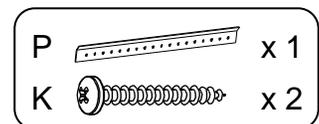


1506RGB Stonewood Beveled Mirror

Assembly Instructions

3. NOTE: The Mirror Wall Bracket (P) angles out at the top. When you hang your Beveled Mirror, the Mirror Frame Bracket (O) fits over the angled part of the Mirror Wall Bracket (P). See Figure 3.

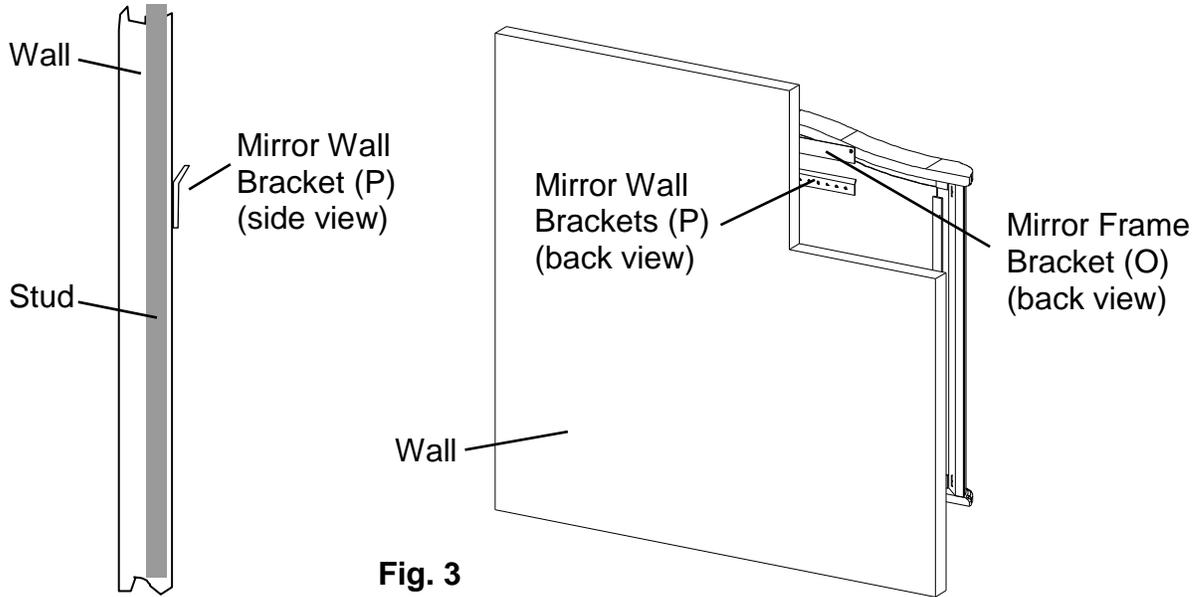


4. Using the predrilled holes on the back of the Dresser as guides, attach the two Mirror Supports (G) with four M4 x 41 Machine Screws (M). The upper screws will be inserted into the 3rd hole from the top and the lower screws will be inserted into the 2nd hole from the bottom of the Mirror Supports. See Figure 4 and 4a.

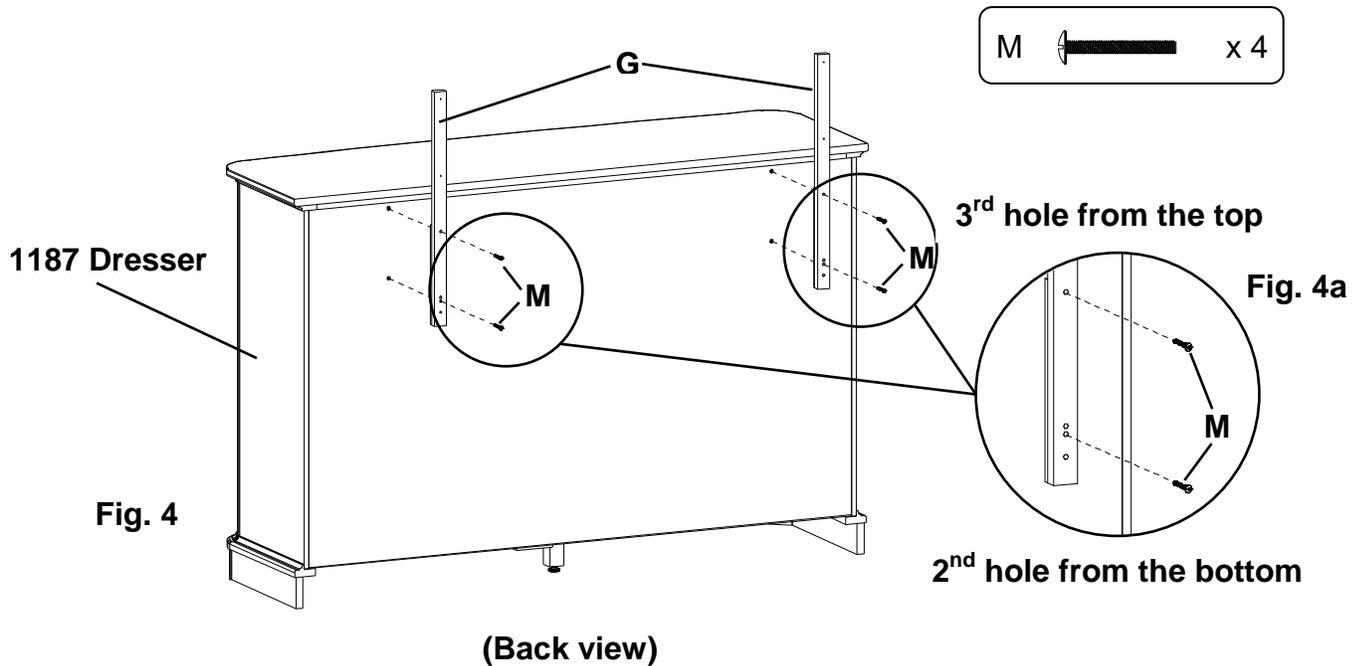

1506RGB Stonewood Beveled Mirror

Assembly Instructions

5. Peel off the backing on the Velvet Pads (N) and apply them to the bottom of the Mirror Assembly (A). See Figure 5.

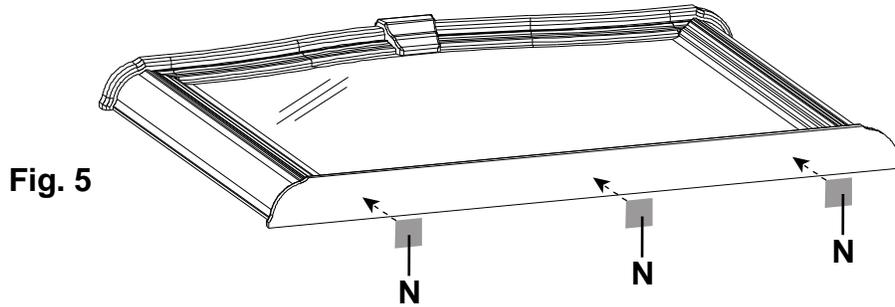

6. Place the Mirror on top of the Dresser and attach it to the Mirror Supports (G) with four #7 x 1-1/2" Black Pan Head Screws (L). See Figure 6.

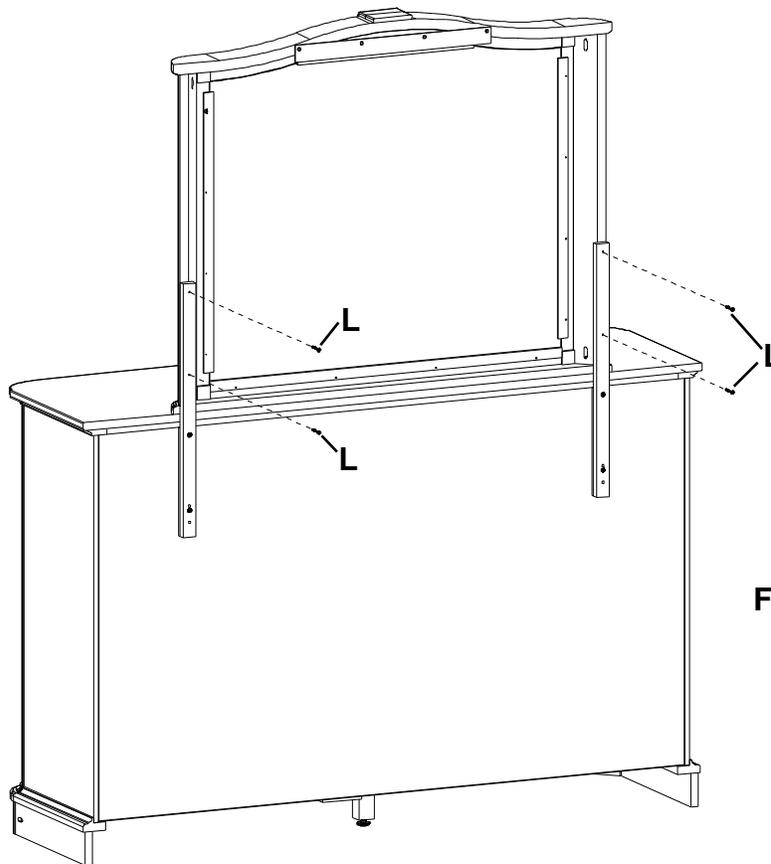



Fig. 6