

Model #

3506AFGACa;

3506AFCAF a


McKenzie

Console Desk

AFGAC = Glazed Antique Cherry finish

AFCAF = Caffè finish

Assembly Instructions

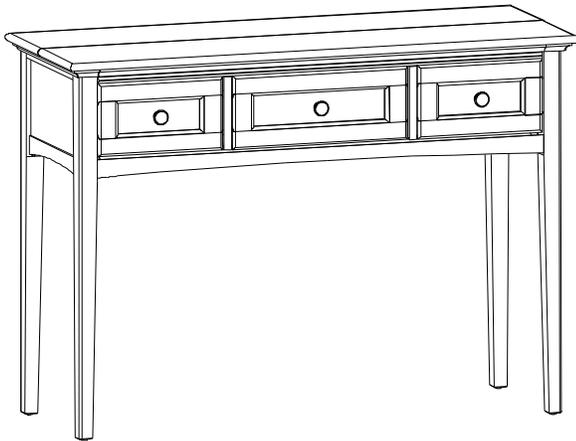

Congratulations!

This fine piece of furniture will make a gorgeous addition to your home. For the best results, read the Assembly Instructions before you begin your project.

IMPORTANT NOTES:

- For normal household use only. *Not* recommended for commercial use.
- Do not climb, sit or stand on this piece of furniture.
- Do not overload the drawers.
- Unload items before you move this unit.
- Before you load or move this unit, tighten all screws and supports.
- Before you begin your project, completely read the Assembly Instructions.
- Store this item: 1- in its box; 2- in a dry place; 3- in temperatures that range from 40°F to 90°F (not on a cold and possibly damp cement floor).
- Periodically inspect your furniture for any loose glue joints, screws or any other problem that might affect the stability of your furniture. Tighten or repair as needed.
- This assembly requires two people.



WARNING

Notice to California Customers

California Prop 65 requires consumer goods to be labeled if any one of 850+ different chemicals or substances, including wood dust, is present even in trace amounts. Drilling, sawing, sanding or machining wood products generates wood dust, a substance known to the State of California to cause cancer. **Warning:** This product contains a chemical or substance known to the State of California to cause cancer, birth defects or other reproductive harm. *California Health and Safety Code Section 25249.6*

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.



CALL US FIRST! *Do not return this item to the store*

Service Policy: We will replace any part that is defective, missing or damaged during assembly. For a replacement part, directly contact Whittier Wood Products customer service department by phone, fax, mail or email.

Hours: Our friendly customer service staff can be reached Monday-Friday 7:00 a.m. to 5:00 p.m. (Pacific Time). You may leave a message 24 hours a day, seven days a week.

To Order: Provide the finish and furniture model number (upper portion of this page), the part letter, production code, quantity needed, reason for replacement and your full name, address and telephone number.

Parts ship from our Eugene, Oregon factory within one or two business days from the time we receive your request. Please allow five to ten business days for delivery.

800-653-3336 • Outside the U.S. or Canada: 541-687-0213 • Fax: 541-687-2060
www.whittierwood.com • P.O. Box 2827 • Eugene, Oregon 97402, U.S.A.

**Whittier
Wood**
FURNITURE

P.O. Box 2827
Eugene, OR 97402 USA

Production Code:





VN

07/13

3506AFGACa; 3506AFCAFa McKenzie Console Desk

Parts List

Please identify the parts and check that quantities received match those on this list.
If you need to replace a part, refer to the following letter and part name.

Part	Description		Quantity
A	Lift Top Assembly (attached)		1
B	Fixed Top (attached)		1
C	Case Assembly		1
D	Left Side Assembly		1
E	Right Side Assembly		1
G	Door Assembly (attached)		1
H	Hutch Drawer (inserted)		2
I	Large Knob (attached)		3
J	#8 x 1" Machine Screw (installed)		3
K	Small Knob (attached)		2
L	4x25mm Machine Screw (installed)		2
M	Cam Housing (inserted)		2
N	Cam Connector (inserted)		2
O	Oval Hinge (attached)		3
P	#8 x 5/8" Flat Head Screw (inserted)		18
Q	Cut Away Hinge (attached)		4
R	#8 x 1-3/16" Flat Head Screw (inserted)		16
S	Lid Support (attached)		2
T	#5 x 5/8" Flat Head Screw (inserted)		4
W	#6 x 5/8" Philtruss Screw		12 (6 inserted)
X	#8 x 1" Pan Head Screw (inserted)		4
Y	#8 x 1-1/4" Pan Head Screw (inserted)		8 (6 inserted)

3506AFGACa; 3506AFCAFa McKenzie Console Desk
Parts List


Part	Description		Quantity
ZA	#8 x 1-1/4" Black Screw (inserted)		4
ZB	1/4" x 20mm Insert Nut (inserted)		4
ZC	Small Adjustable Glide (installed)		4
ZD	1/4" x 13.5mm Insert Nut (inserted)		6
ZE	1/4" x 40mm Bolt		6
ZF	Wood Dowel (inserted)		2
ZG	Velvet Pad 200 x 12mm (attached)		4
ZH	Hex Wrench		1
ZI	Short Velvet Pad 50 x 50mm (attached)		2
ZJ	#8 Washer (inserted)		2
ZK	Tuscan Magnetic Lock & Plate (pre-installed sets)		2
ZL	#6 x 5/8" Undercut Screw AB (inserted)		4

3506AFGACa; 3506AFCAFa McKenzie Console Desk


Assembly Instructions

Tools Required: Hex Wrench (provided); Phillips Screwdriver, Mallet or Padded Hammer.

1. Remove the Hutch Drawers (H) from the Case Assembly (C). Turn the Case Assembly (C) upside-down on a clean protected surface. Using the Hex Wrench (ZH) attach the Left Side Assembly (D) to the case assembly with two 1/4" x 40mm Bolts (ZE). Fasten securely. Make sure the dowel is fully seated in place by tapping the Left Side Assembly (D) with a rubber mallet. See Figure 1.

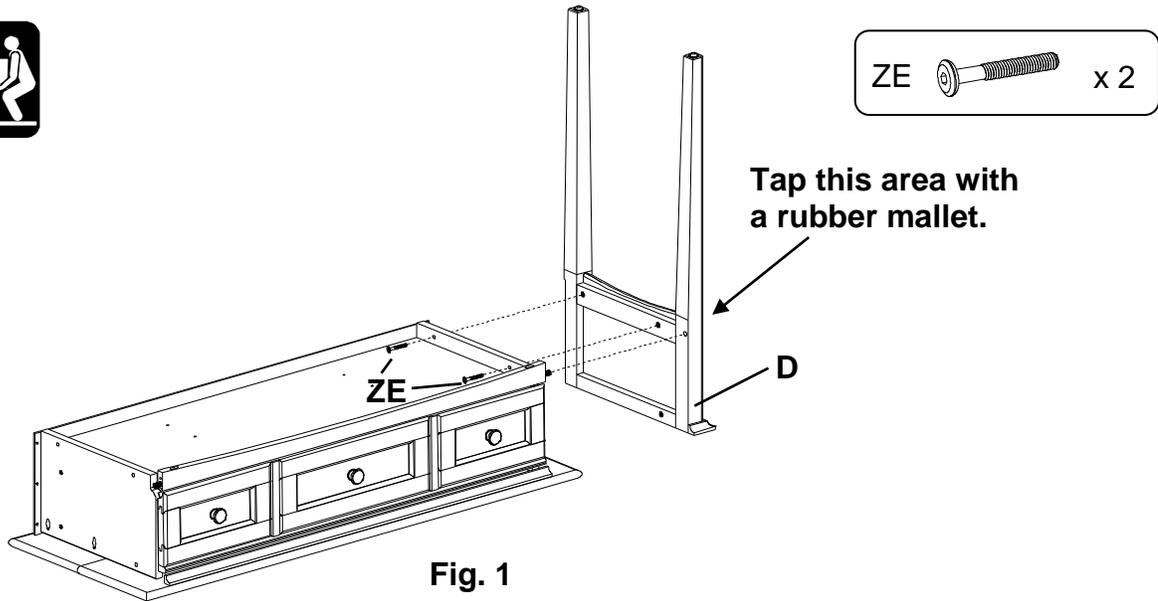

2. Using the Hex Wrench (ZH) attach the Right Side Assembly (E) to the case assembly with two 1/4" x 40mm Bolts (ZE). Fasten securely. Make sure the dowel is fully seated in place by tapping the Right Side Assembly (E) with a rubber mallet. See Figure 2.

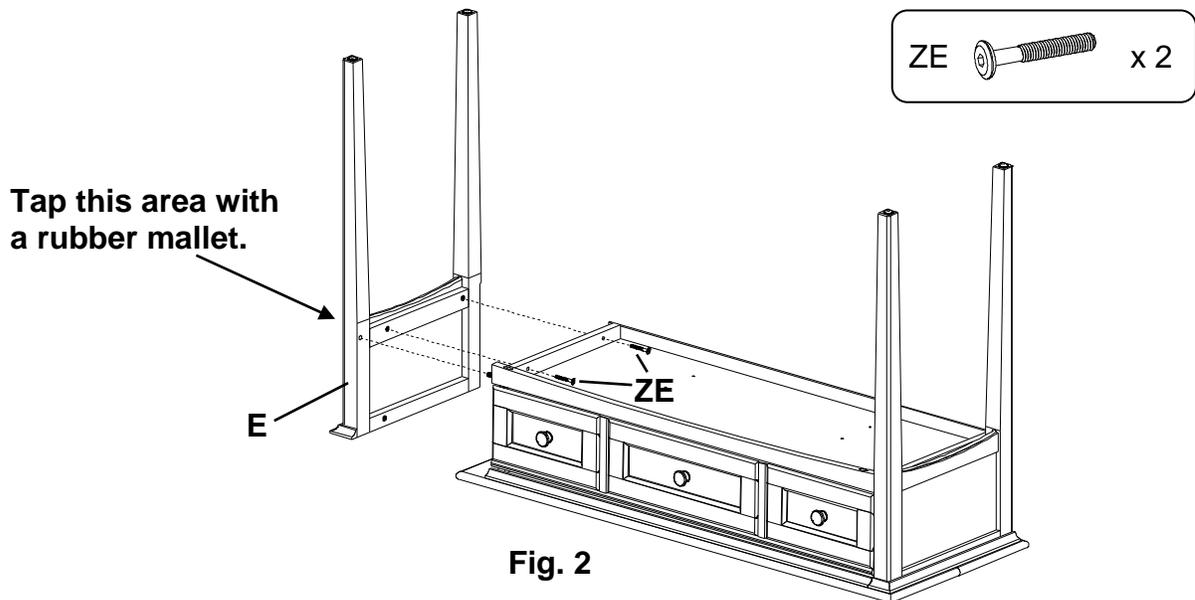

3506AFGACa; 3506AFCAFa McKenzie Console Desk
Assembly Instructions

5. Using the pilot holes, secure Back Panel to back legs of the Left Side Assembly and the Right Side Assembly with six #6x5/8" Philtruss Screws (W). See Figure 5.

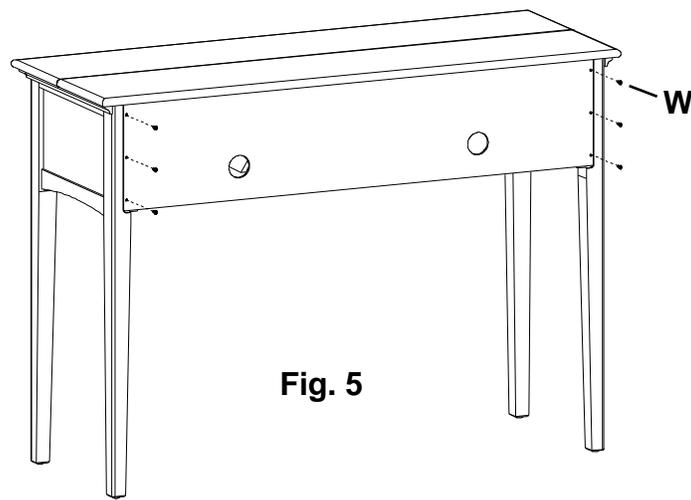


Fig. 5

6. Insert the Hutch Drawers (H). Place the console at its final destination. Rotate the Adjustable Glides (ZC) found at the bottom of each leg until the unit is level. See Figure 6.

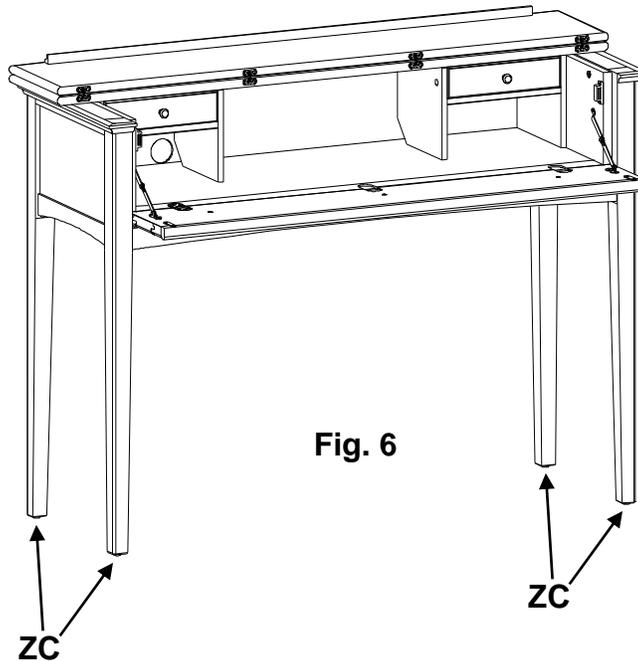


Fig. 6