


Model #

4705AFDH

Eastport Queen Storage Bed

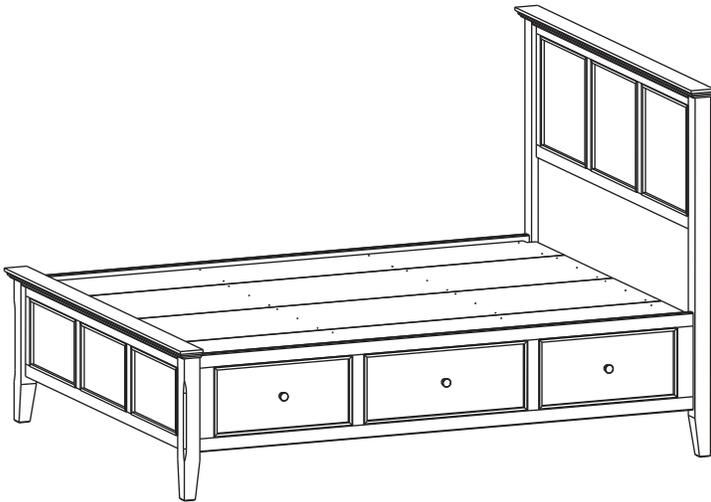

Congratulations!

This fine piece of furniture will make a handsome addition to your home. For the best results, start by reading the Assembly Instructions before you begin your project.

**For normal household use only.
NOT recommended for commercial use.**



Unload items from this unit prior to moving.
Before loading or moving this unit, check all screws and supports for tightness.
Do not overload the drawers.

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

**Whittier
Wood**
FURNITURE

P.O. Box 2827
Eugene, OR 97402 USA



CALL US FIRST!

DO NOT RETURN ITEM TO STORE

Service Policy: We will replace parts which are defective, missing or damaged. Please contact Whittier Wood Products customer service department directly (by phone, fax, mail or E-mail) for replacement parts.

Hours: Our friendly customer service staff can be reached Monday-Friday 7:00 a.m. to 5:00 p.m. (Pacific Time). A message can be left 24 hours a day, 7 days a week.

To Order: Provide the complete furniture model number, part letter, production code, quantity needed, reason for replacement and your full name and address along with a telephone number in case we need to contact you.

Parts ship from our Eugene, Oregon factory within 1 or 2 business days from the time we receive the request. Please allow 5-10 business days for delivery.

800-653-3336

Outside U.S. or Canada: 541- 687- 0213

Fax: 541-687-2060 • www.whittierwood.com

Mail: P.O. Box 2827 • Eugene, Oregon 97402, U.S.A

IMPORTANT NOTES:

- Completely read the Assembly Instructions before you begin your project.
- Store the item: 1) in the box; 2) in a dry place; 3) in temperatures ranging from 40° to 90°. (Not on a cold, possibly damp, cement floor.)
- Inspect your furniture periodically for any loose glue joints, screws or any other problem that might affect the stability of your furniture. Tighten or repair as needed.
- This Assembly requires two people.

Production Code:


VN

03/09


4705AFDH Eastport Queen Storage Bed — Parts List

Before beginning assembly, identify the parts and make sure the quantities received match what's on this list.
If you need to replace a part, please refer to following list for its name and letter.

4708AFDH (x1)

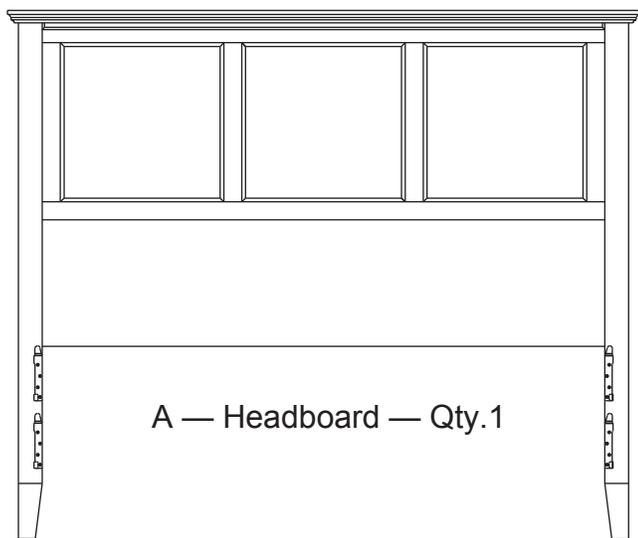

A — Headboard — Qty. 1

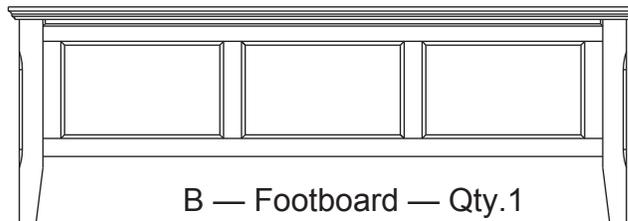

B — Footboard — Qty. 1



C — Trestle Without T-Nuts — Qty. 4



D — Trestle With T-Nuts — Qty. 8



E — #8 x 1 1/4" Black Screw — Qty. 24



T — #8 x 2" Black Screw — Qty. 6

V — Leveler Bracket — Qty. 2
(pre-installed)

W — Adjustable Glide — Qty. 2
(pre-installed)




F — 1/4" x 1 3/4" Hex Bolt
— Qty. 16



G — 1/4" x 2 1/2" Hex Bolt
— Qty. 16




H — Washer — Qty. 32



U — Foot Assembly — Qty. 2

4707AFDH (x2)

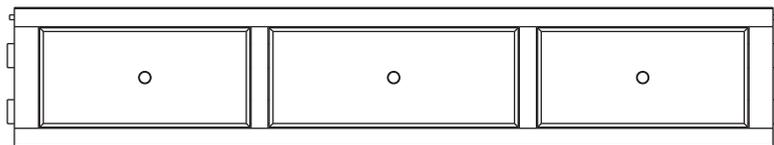

I — Pedestal Kit — Qty. 1




P — Deckboard — Qty. 1



N — #8 x 1 1/2" Machine Screw
— Qty. 3




O — Knob — Qty. 3

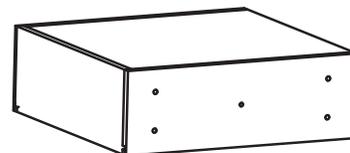

J — Small Drawer Box — Qty. 2
(pre-assembled)

K — Large Drawer Box — Qty. 1
(pre-assembled)

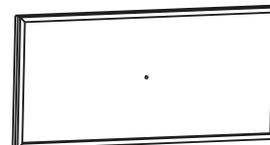

L — Small Drawer Face — Qty. 2
(pre-attached)

M — Large Drawer Face — Qty. 1
(pre-attached)




Q — Drawer Slides — Qty. 3
(pre-installed sets)

4705AFDH Eastport Queen Storage Bed Assembly Instructions


This Assembly Requires Two People

TOOLS REQUIRED:



Phillips Screwdriver, 7/16" Wrench and Tape Measure.

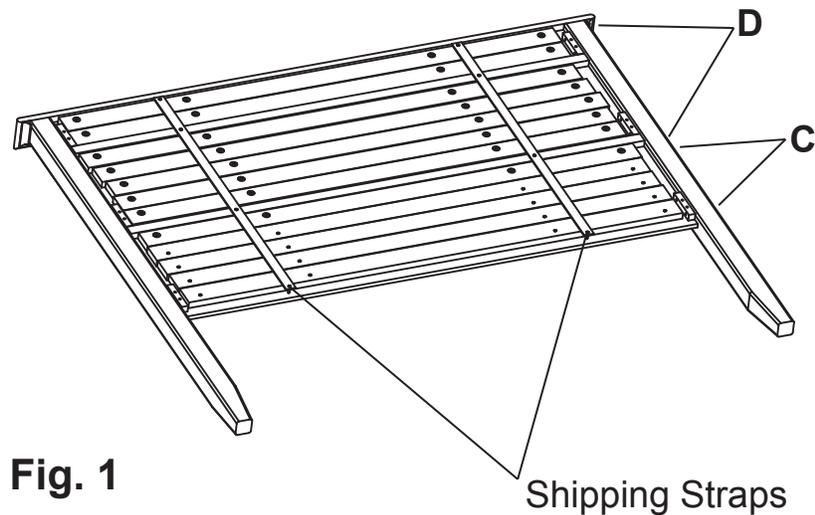


1. Remove the Trestles (C & D) from the back of the Headboard as seen in Figure 1 and place them off to the side.

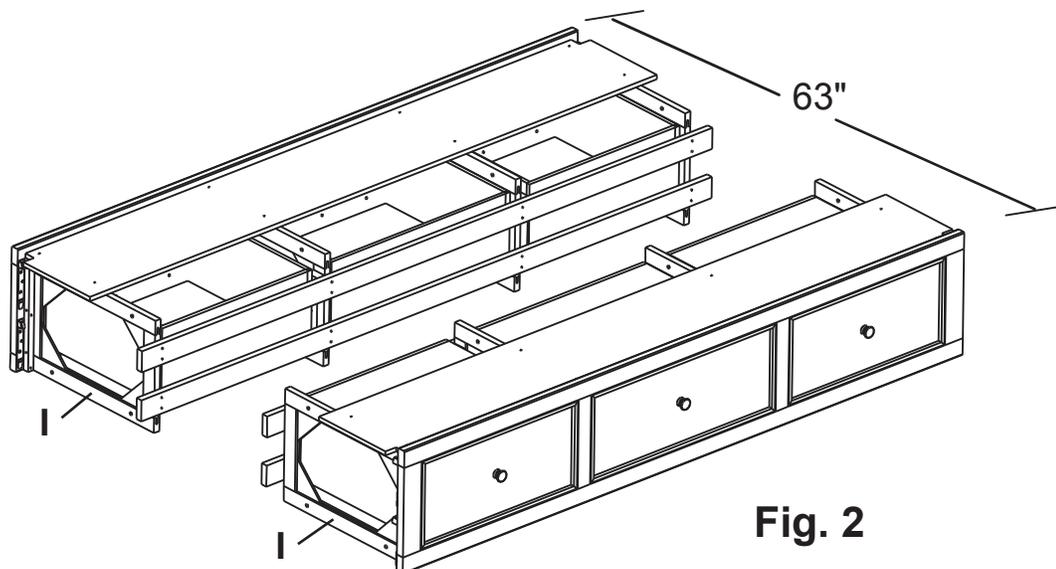

2. Place both Pedestals (I) approximately 63" apart as shown in Figure 2.

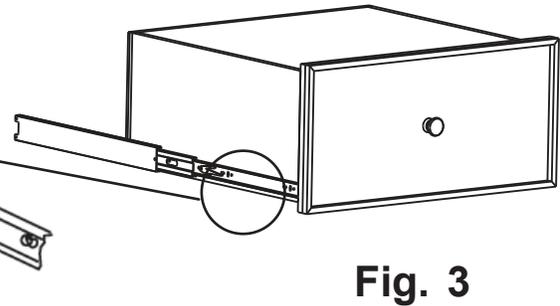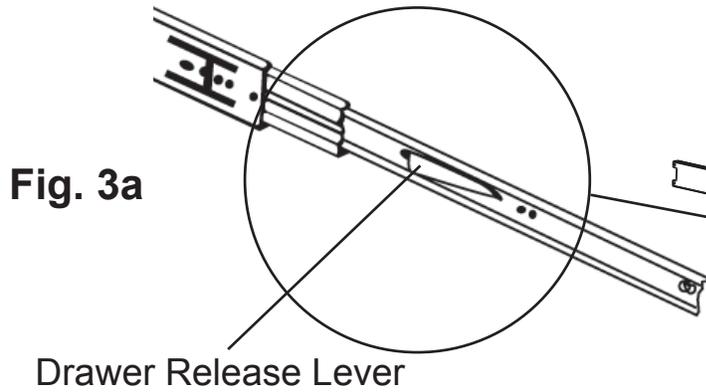

3. Remove Drawers (J & K) from Pedestals (I). To remove drawers, push up on the left side of the Drawer Release Lever while pushing down on the right Drawer Release Lever. See Figure 3a. Note where each drawer came from to ensure correct re-installation. (Positions are also marked on drawer backs.)

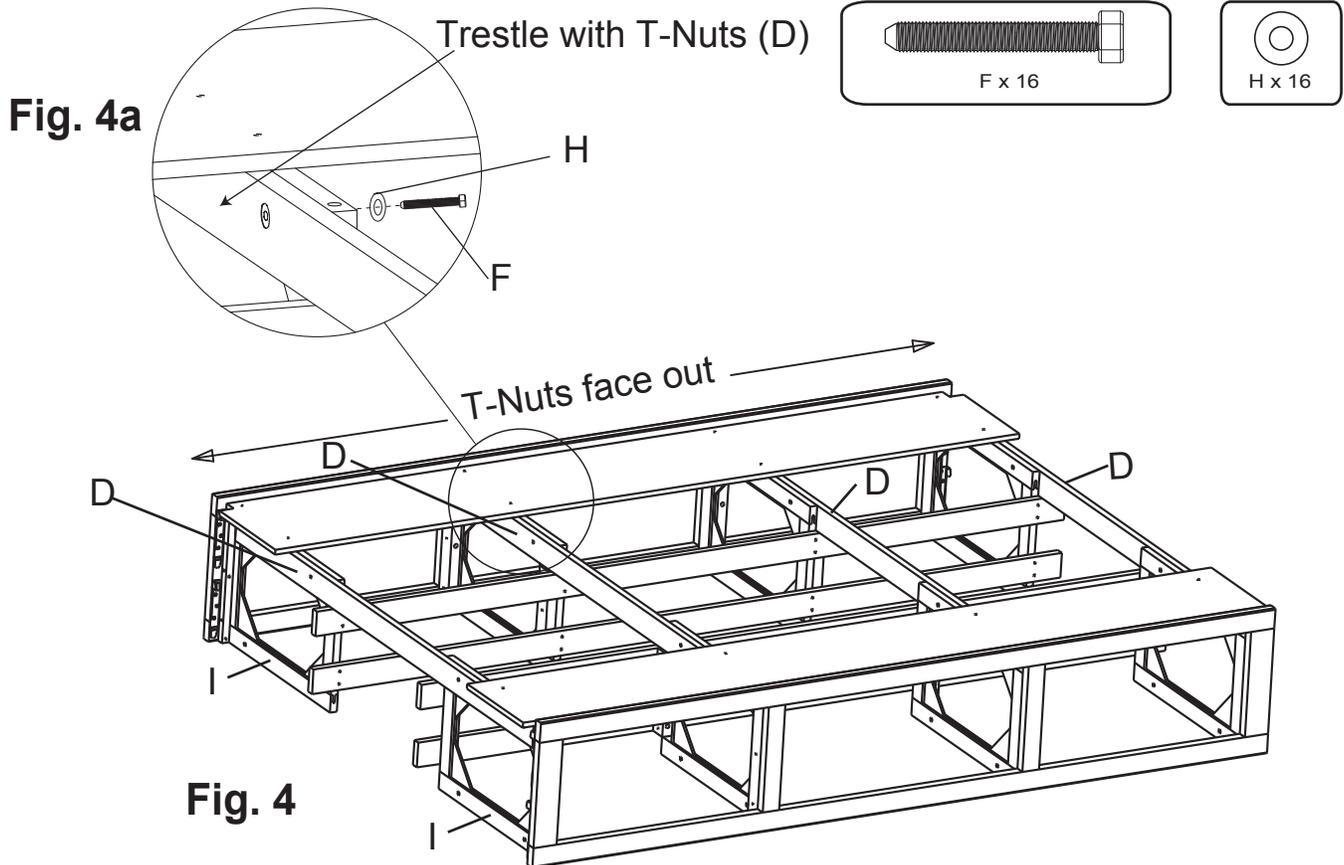

NOTE: DO NOT TIGHTEN BOLTS UNTIL FINAL ASSEMBLY IN STEP 10 IS COMPLETED.

4. Place four Trestles with T-Nuts (D) between Pedestals (I) and insert 1 $\frac{3}{4}$ " bolt (F) and washer (H) as shown in Figure 4a. When installing Trestles (D), make sure the T-nuts face out as shown in Figure 4.



Rotate Pedestal Assembly upside down so that the plywood Deckboards are on the floor.

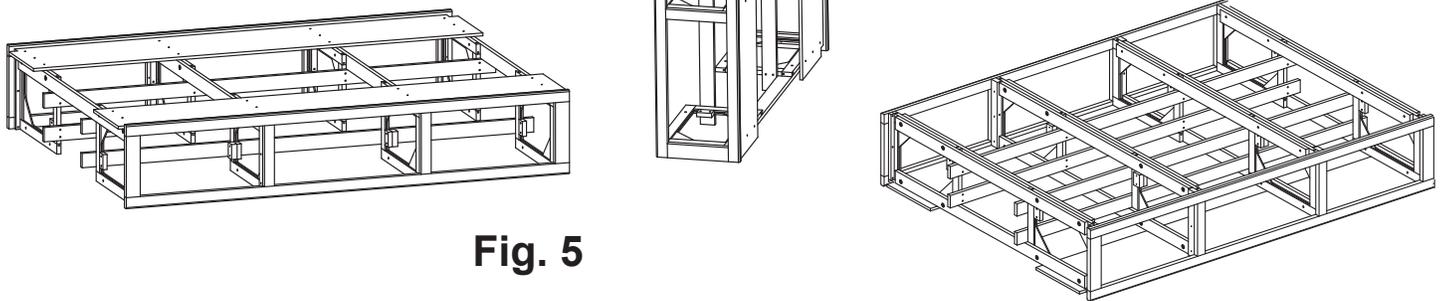


Fig. 5

5. Rotate Pedestal Assembly upside down so the plywood Deckboards are on the floor. See Figure 5.

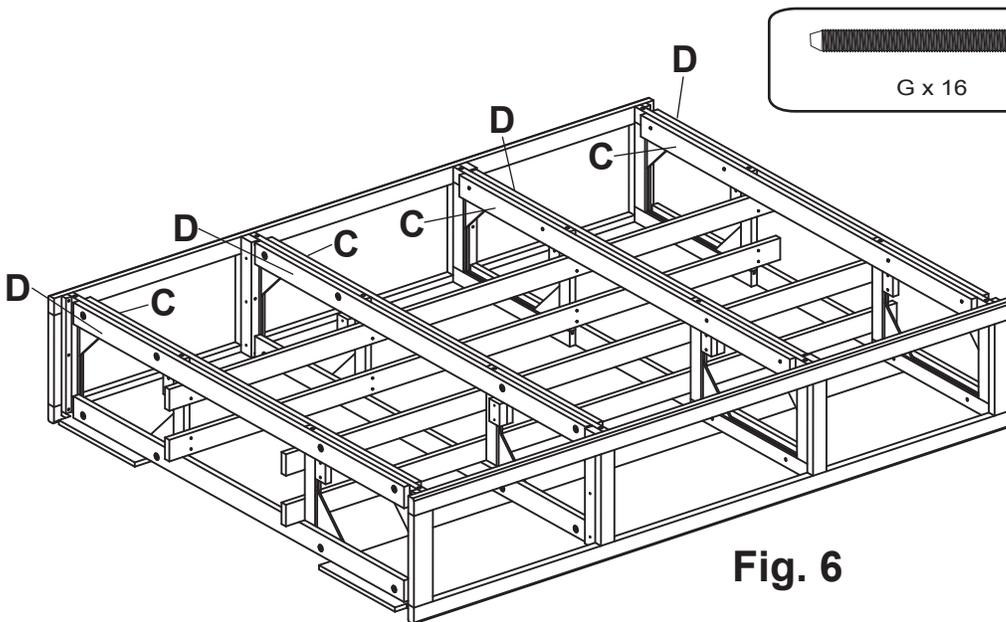


Fig. 6

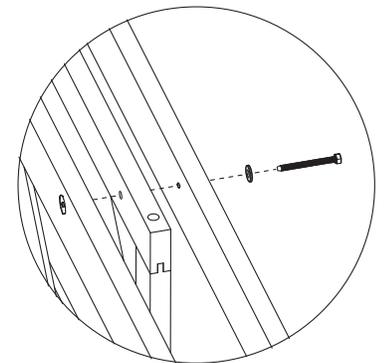



Fig. 6a

6. Place the remaining Trestles (C and D) on the Pedestal Assembly. Face the Trestles with T-Nuts (D) toward the ends of the Assembly from the center as shown in Figure 6. Insert 2½" Hex Bolt (G) and Washer (H). See Figure 6a. **DO NOT TIGHTEN BOLTS UNTIL FINAL ASSEMBLY IN STEP 10.**

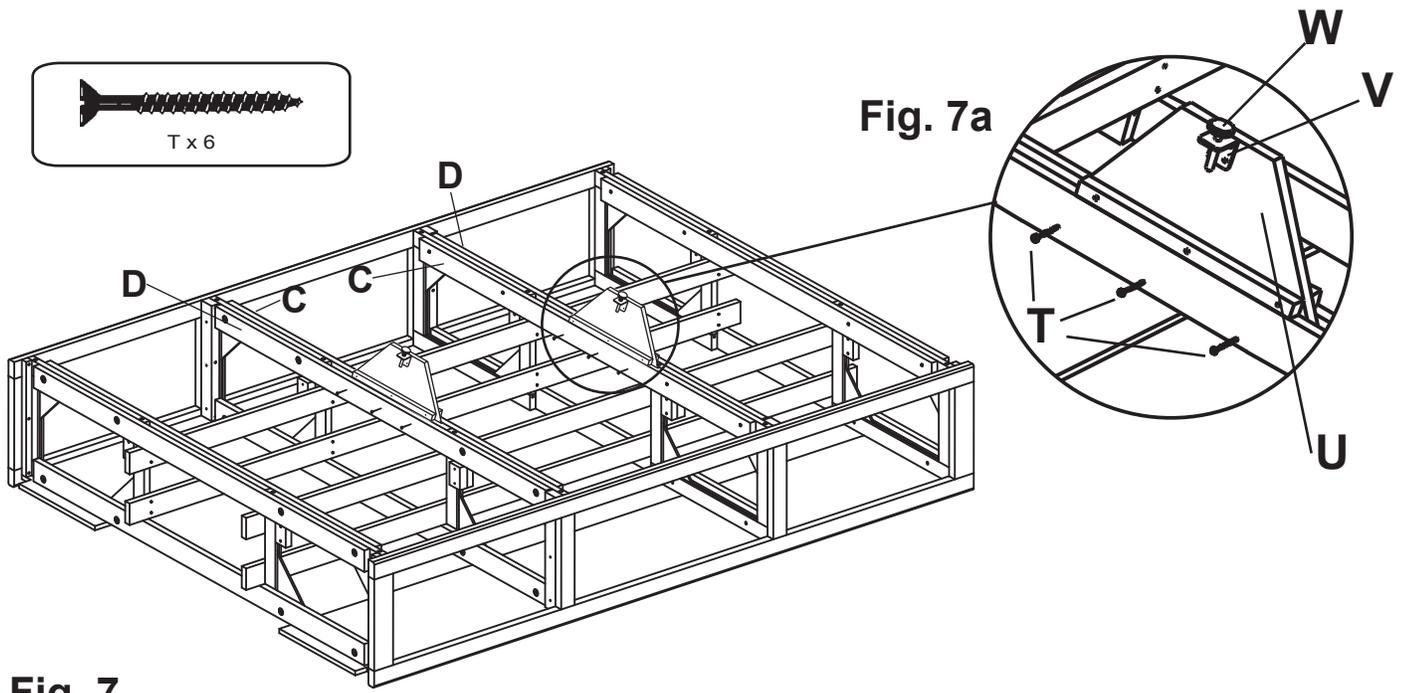


Fig. 7

7. On each inner pair of trestles (C and D), place a Foot Assembly (U) between the two middle trestles as shown in Figure 7. Insert three #8x2" Black Screws (T) as shown in Figure 7a.

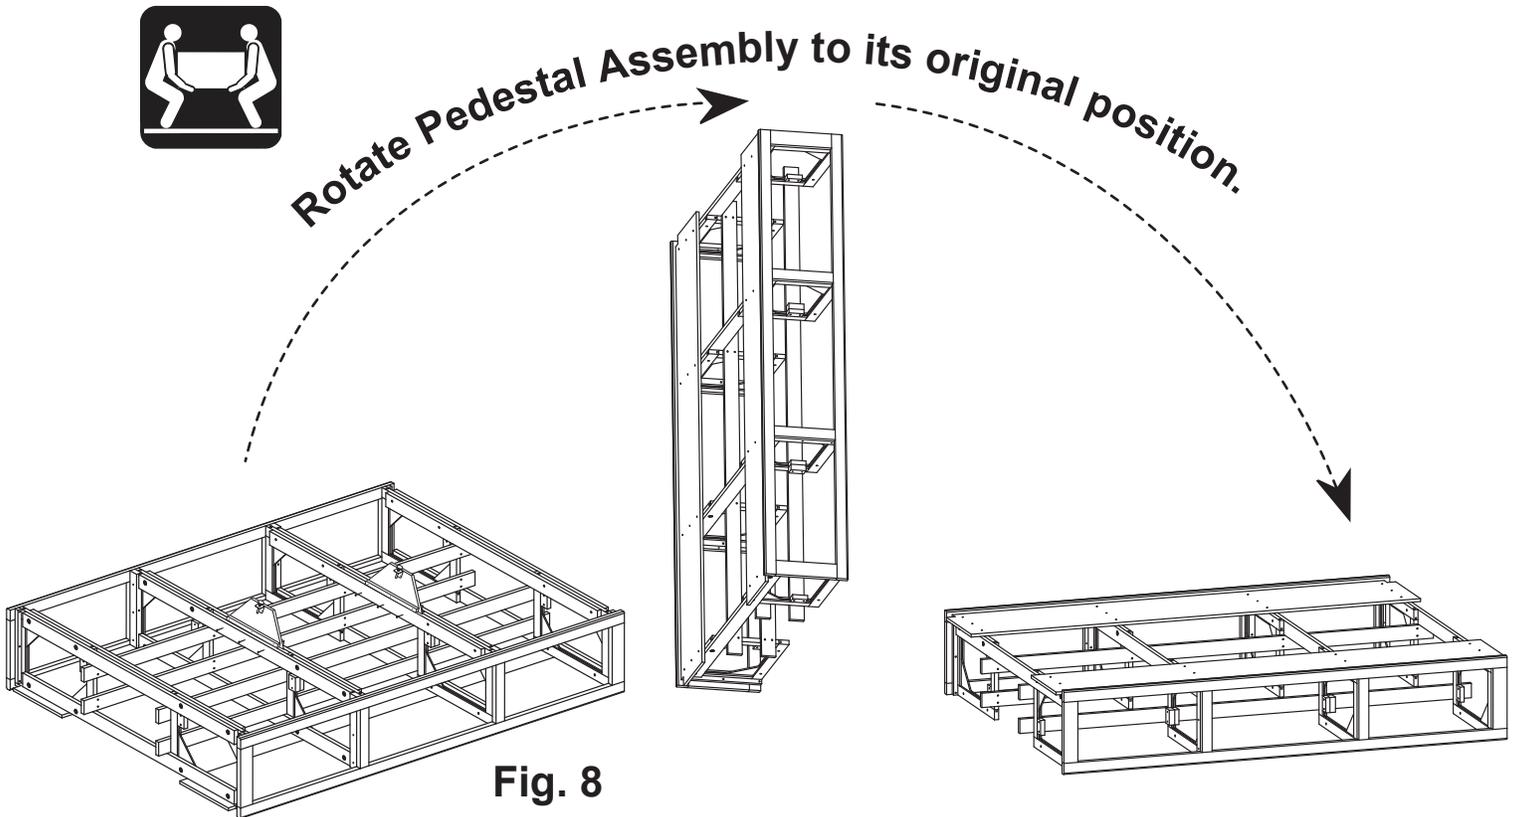


Fig. 8

8. Rotate Pedestal Assembly to its original position.

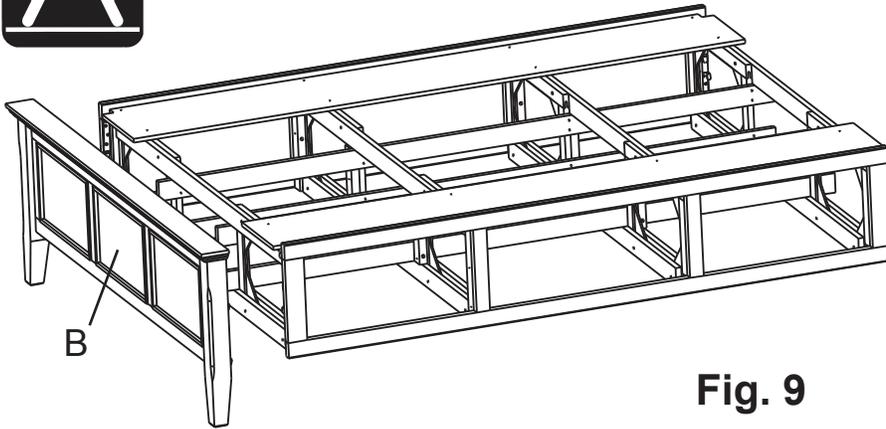


Fig. 9

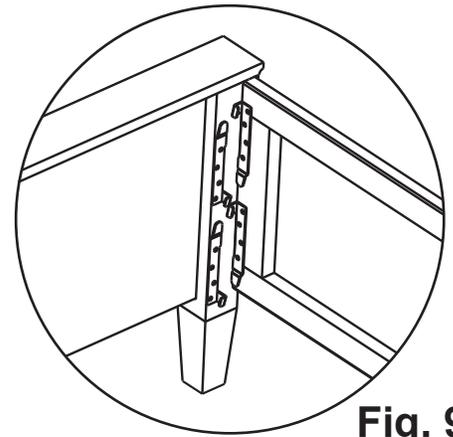


Fig. 9a

9. Attach the Footboard (B) to the Pedestal Assembly as in Figure 9. Align brackets as shown in Figure 9a, and slide the Pedestal Assembly down on to the Footboard (B).

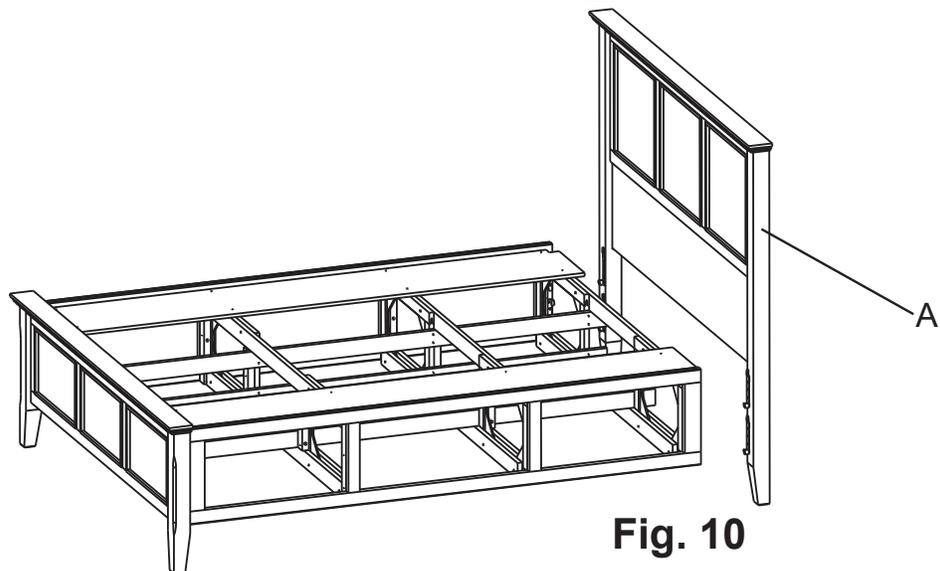


Fig. 10

10. Attach Headboard (A) to Pedestal Assembly as in previous step. See Figure 10.
NOTE: NOW TIGHTEN ALL BOLTS ON TRESTLES.

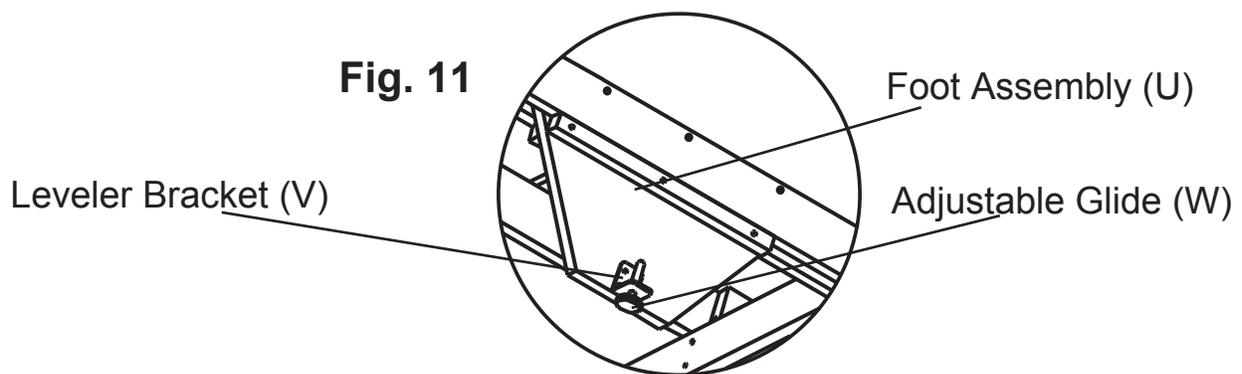



Fig. 11

Leveler Bracket (V)

Foot Assembly (U)

Adjustable Glide (W)

11. Adjust Glides (W) on the Foot Assemblies (U) so the Glides just touch the floor. See Figure 11.

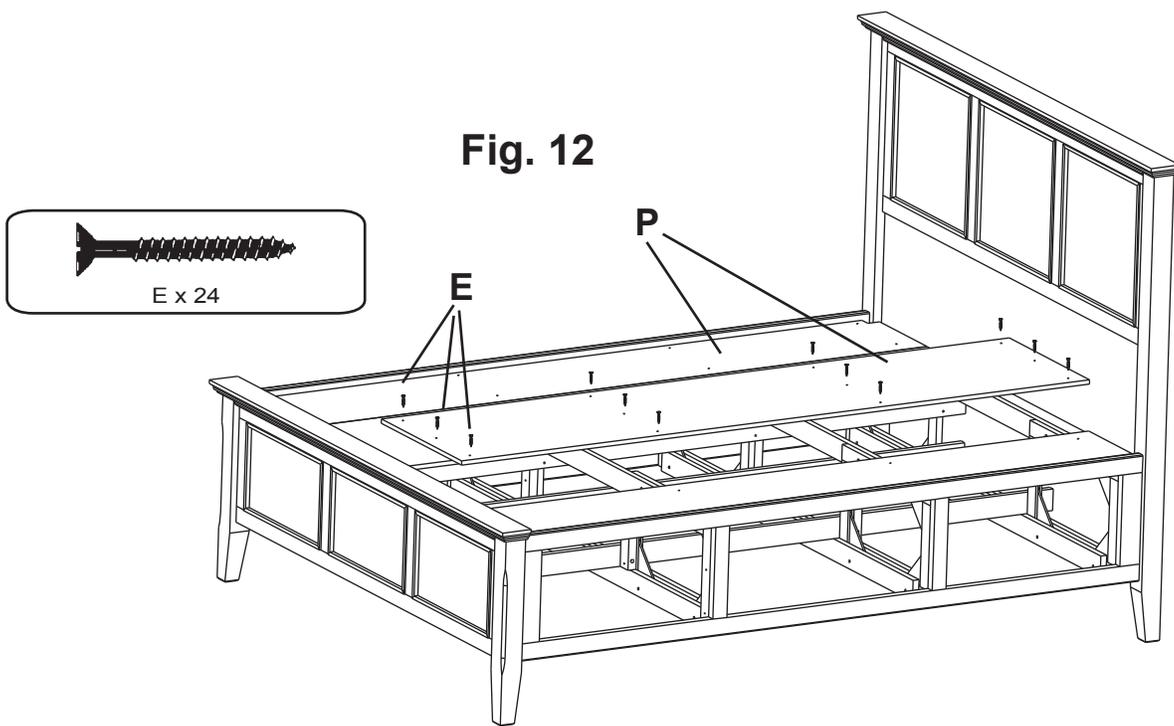

12. Place Deckboards (P) as shown in Figure 12. There should be a small gap between each deckboard. Secure with #8x1¼" Black Screw (E).

-
13. Carefully align drawer slides into the cabinet and gently push them back to their original positions. Sleep well, and enjoy!