


Model #

3461AFCAFb

Stayton Corner Media Console

AFCAF = Caffè finish
Assembly Instructions

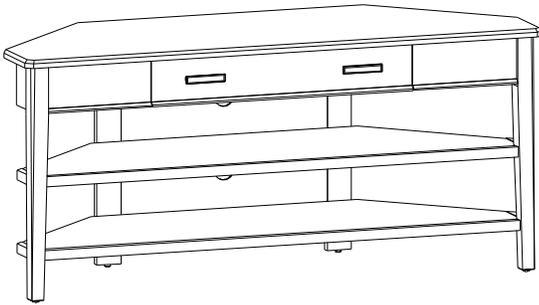

Congratulations!

This fine piece of furniture will make a gorgeous addition to your home. For the best results, read the Assembly Instructions before you begin your project.

IMPORTANT NOTES:

- For normal household use only. *Not* recommended for commercial use.
- Do not climb, sit or stand on this piece of furniture.
- Unload items before you move this unit.
- Do not overload the drawer or shelves.
- Before you load or move this unit, tighten all screws and supports.
- Before you begin your project, completely read the Assembly Instructions.
- Store this item: 1- in its box; 2- in a dry place; 3- in temperatures that range from 40°F to 90°F (not on a cold and possibly damp cement floor).
- Periodically inspect your furniture for any loose glue joints, screws or any other problem that might affect the stability of your furniture. Tighten or repair as needed.
- This assembly requires two people.

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. Use of tip-over restraints may only reduce but not eliminate the risk of tip-over.

To help prevent tip-over:

- Place heaviest items in the bottom drawers.
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.

Warning: At least one tipping restraint kit was included with your piece of Whittier Wood Furniture. When you receive your furniture, be sure to find and properly install the tipping restraint(s). If you cannot locate the restraint(s), please contact us immediately for replacement.

Notice to California Customers

California Prop 65 requires consumer goods to be labeled if any one of 850+ different chemicals or substances, including wood dust, is present even in trace amounts. Drilling, sawing, sanding or machining wood products generates wood dust, a substance known to the State of California to cause cancer. **Warning:** This product contains a chemical or substance known to the State of California to cause cancer, birth defects or other reproductive harm. *California Health and Safety Code Section 25249.6*

DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.

CALL US FIRST! *Do not return this item to the store*

Service Policy: We will replace any part that is defective, missing or damaged during assembly. For a replacement part, directly contact Whittier Wood Products customer service department by phone, fax, mail or email.

To Order: Provide the finish and furniture model number (upper portion of this page), the part letter, production code, quantity needed, reason for replacement and your full name, address and telephone number.

Hours: Our friendly customer service staff can be reached Monday-Friday 7:00 a.m. to 5:00 p.m. (Pacific Time). You may leave a message 24 hours a day, seven days a week.

Parts ship from our Eugene, Oregon factory within one or two business days from the time we receive your request. Please allow five to ten business days for delivery.

800-653-3336 • Outside the U.S. or Canada: 541-687-0213 • Fax: 541-687-2060
www.whittierwood.com • P.O. Box 2827 • Eugene, Oregon 97402, U.S.A.



P.O. Box 2827
Eugene, OR 97402 USA

Production Code:








VN

04/14

3461AFCAFb Stayton Corner Media Console

Parts List

Please identify the parts and check that quantities received match those on this list.
If you need to replace a part, refer to the following letter and part name.

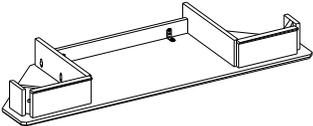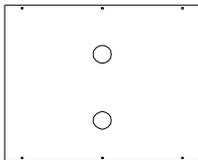Part	Description		Quantity
A	Top Assembly (attached)		1
B	Front Leg		2
C	Back Leg		2
D	Lower Shelf Assembly		1
E	Upper Shelf Assembly		1
F	Back		1
G	Drawer Box (inserted)		1
H	Drawer Face (installed)		1
I	Drawer Slides (pre-installed sets)		1
J	#6 x 3/4" Philtruss Screw (inserted)		6
K	#6 x 1/2" Philtruss Screw (inserted)		6
L	#6 x 5/8" Philtruss Screw		6
N	#8 x 1-1/4" Pan Head Screw		40 (24 inserted)
Oa	#8 x 1-1/2" Machine Screw Tuscan (installed)		4
P	5/16" Flat Washer		2
Q	#8 Washer (inserted)		22
R	3/8" x 1" Insert Nut (inserted)		2
S	3/8" x 2-1/2" Hex Bolt		2
T	1/4" x 20mm Insert Nut (inserted)		2
U	Pull (installed)		2
V	Wood Dowel (inserted)		8

3461AFCAFb Stayton Corner Media Console
Parts List


Part	Description		Quantity
X	Adjustable Angle Bracket (attached)		2
Y	Adjustable Glide (installed)		2
Z	Tack Glide (inserted)		2
ZA	#8 x 7/8" Black Lo-Profile Screw (inserted)		6
ZB	#10 x 3/4" Pan Head Screw (inserted)		6
TR	Media Zip-Tie Tipping Restraint		2 sets

3461AFCAFb Stayton Corner Media Console


Assembly Instructions

Tools Required: Phillips Screwdriver, 9/16" or Adjustable Wrench, Rubber Mallet or Padded Hammer

1. Remove the Drawer (G) from the Top Assembly (A). To remove the drawer, pull up on the left side of the Drawer Release Lever while pushing down on the right Drawer Release Lever. See Figure 1a.

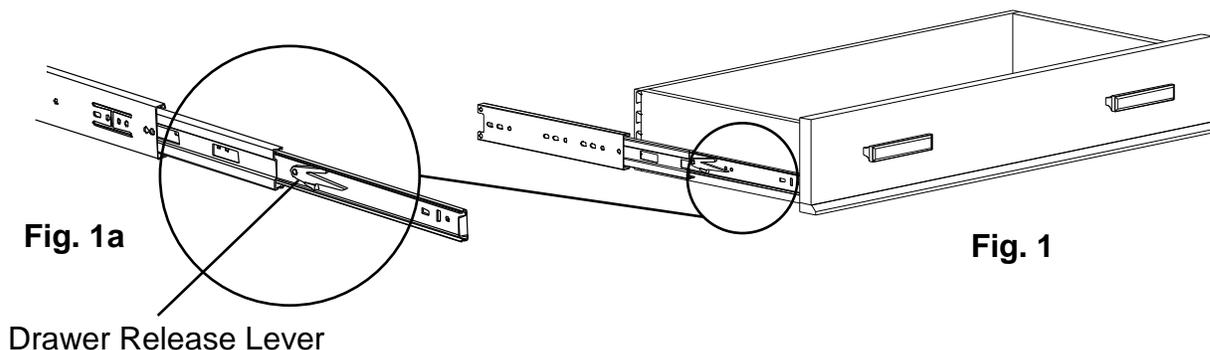

2. Turn the Top Assembly (A) upside-down on a clean, protected surface. Place two Front Legs (B) at the front of the Top Assembly (A); making sure the drilled corners of the legs face toward the Corner Blocks. Attach with 5/16" Flat Washers (P) and 3/8" x 2-1/2" Hex Bolts (S). See Figures 2 and 2a.

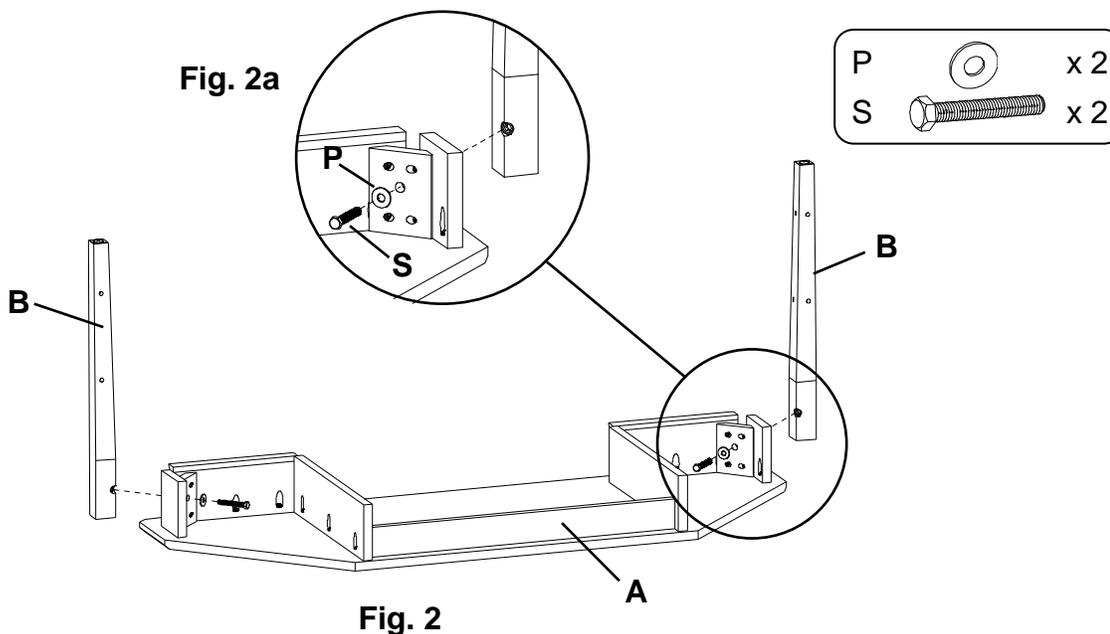

3461AFCAFb Stayton Corner Media Console

Assembly Instructions

3. Rotate the Top and Leg assembly so that it sets on the front legs. Turn the Lower Shelf Assembly (D) and the Upper Shelf Assembly (E) bottom-side-down and place the dowels into the dowel holes in the Front Legs. See Figure 3.

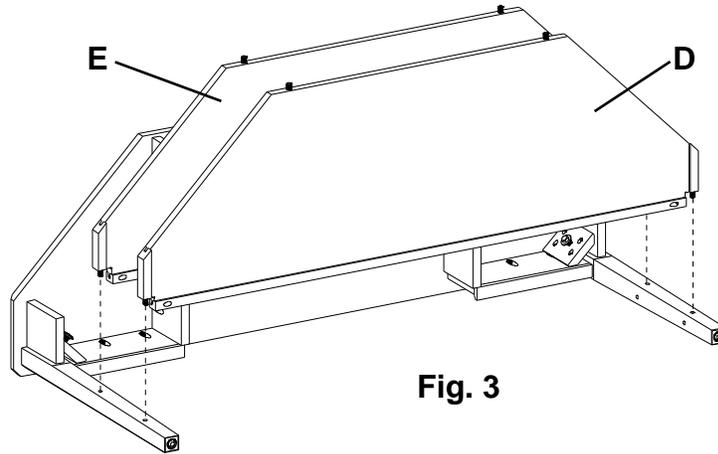


Fig. 3

4. Using the dowels as guides, place the Back Legs (C) in the remaining two corners. See Figures 4 and 4a.


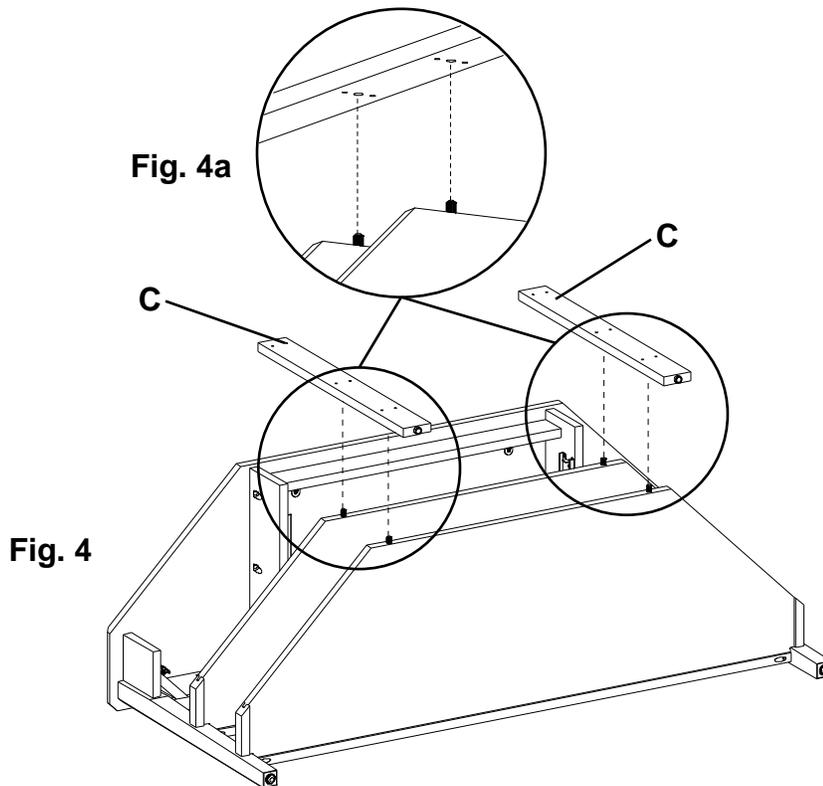


Fig. 4


3461AFCAFb Stayton Corner Media Console

Assembly Instructions

5. Secure the Back Legs (C) to the Top Assembly (A), Lower Shelf Assembly (D), and the Upper Shelf Assembly (E) with twelve #8 x 1-1/4" Pan Head Screws (N). See Figure 5.

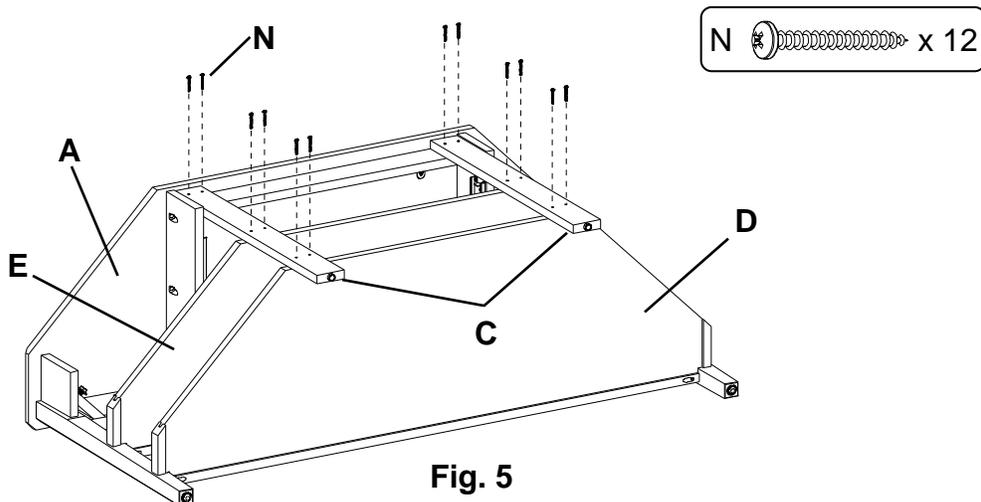


6. Lay the unit with the drawer opening face down. The back apron of the Top Assembly has pre-punched location holes. The Back (F) is labeled "Top". Place the Back (F) against the back apron and attach by inserting three #6 x 5/8" Philtruss Screws (L) through the pre-punched location holes. Attach the Back (F) to the Lower Shelf Assembly (D) by inserting three additional #6 x 5/8" Philtruss Screws through the holes in the bottom of the Back (F). See Figure 6.

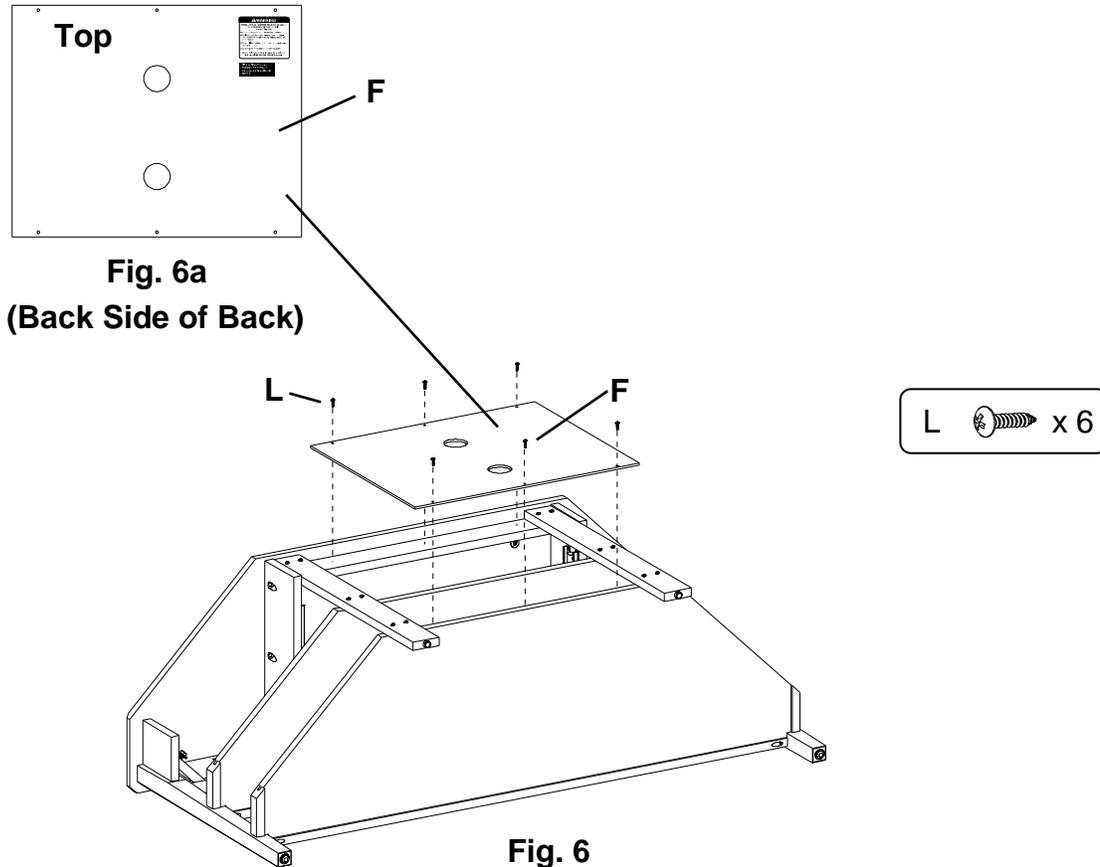


3461AFCAFb Stayton Corner Media Console

Assembly Instructions

- Turn the unit onto its top and using the pocket holes as guides, secure the Lower Shelf Assembly (D) and the Upper Shelf Assembly (E) to the Front Legs (B) with four #8 x 1-1/4" Pan Head Screws (N). See Figures 7 and 7a.

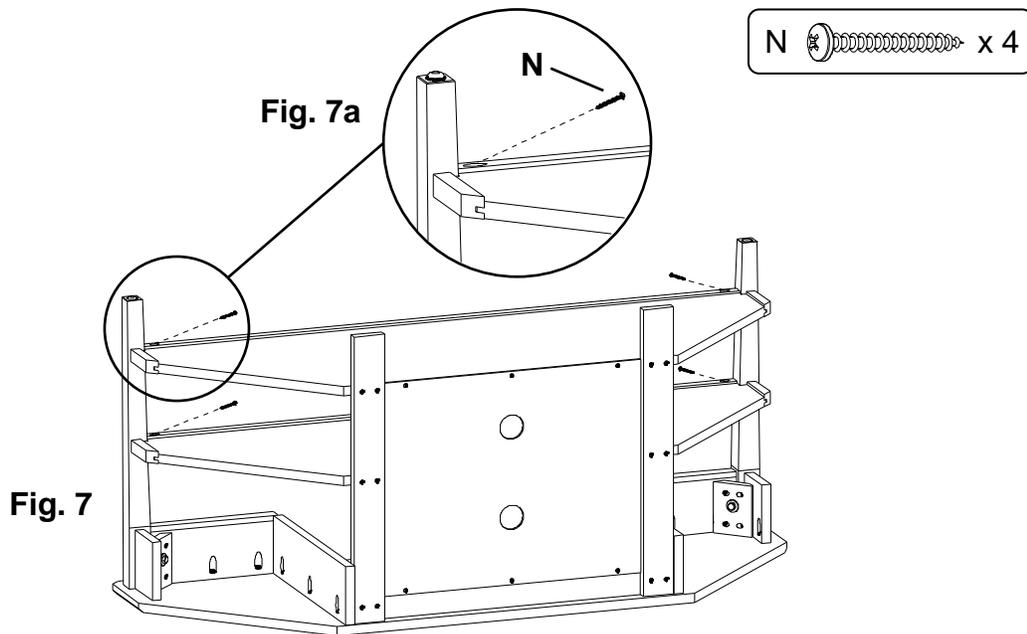

- Turn the table upright and insert the Drawer. See Figure 8.

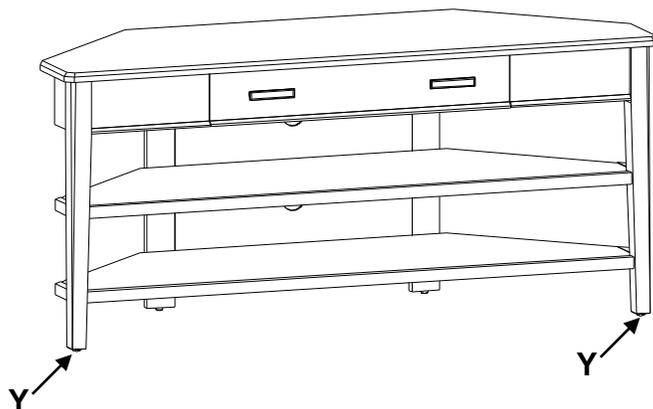

- Place the unit at its final destination. To level the table, rotate the Adjustable Glides (Y) found on the bottoms of the front legs. See Figure 8.

3461AFCAFb Stayton Corner Media Console

Assembly Instructions

10. Position the unit at the desired location. Locate a stud in the wall behind each side of the unit. A strong small magnet is helpful to locate the studs in the wall. The magnet will help you find the nails or screws used to attach the wall to the studs. When you have found a screw you have found a stud. Studs are usually 16" on center. Attach a Clip (T1) to each wall stud with #8 x 2" Black Screws (T3). See Figure 10a.

The clips attached to the furniture will attach to the underside of the top adjacent to each wall clip. Attach the second clip from each kit to the unit with #6 x 5/8" Philtruss Screws (T5). See Figure 10b. Connect the two clips with the Nylon Zip-Tie (T2). **Pull the Nylon Zip-Tie (T2) tight so there is no slack.** See Figures 10c and 10d. We have included an extra Nylon Zip-Tie in each kit; if you should need to move your furniture cut the Zip-Ties that you are using and replace with the extra Zip-Ties when the furniture is back in place.

The screws attaching your furniture to the wall must be inserted into a wall stud. Do not attempt to use wall anchors.

